

DIGITAL CENTRE

The worldwide PhotoBooth
Manufacturers

PARTY'N'GO
VIDEO&NET



America:


Digital Centre America, Inc.
14271 SW 120th Street Unit #109
USA, Miami, FL 33186

Sales:

Ph: +1.305.387.5005
sales@dc-image.com

Tech Support:

Ph: +1.305.387.5115
support@dc-image.com

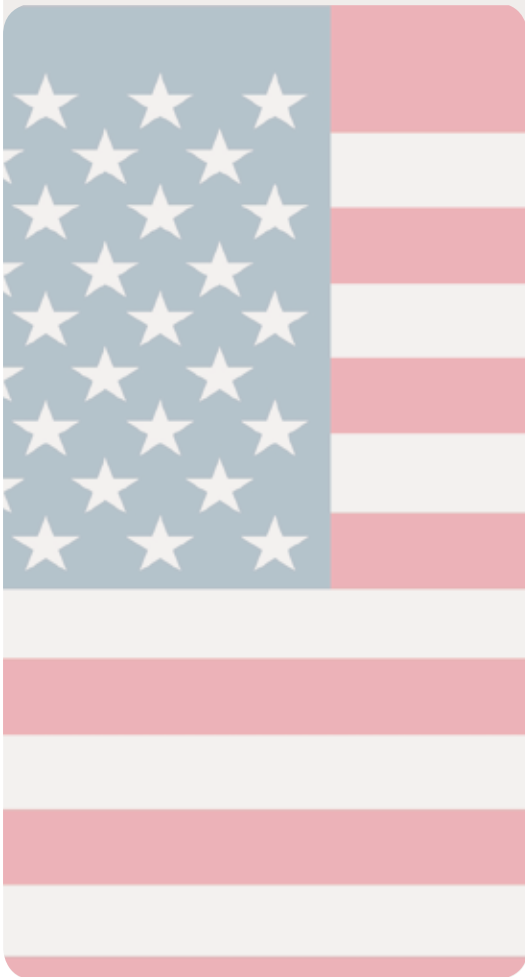

Europe:

Digital Centre
Pol. Ind. Sant Isidre
C/ Puigmal, 20-22 St. Fruitós
08272, BARCELONA. Spain

Ph: +34.938.748.158
info@dc-image.com



www.digital-centre.com



Copyright and Trademarks

This manual contains materials protected under International copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted or transcribed without the expressed written permission of the manufacturer and author of this manual.

The information of the products in this manual is subject to change without prior notice and does not represent a commitment on the part of the vendor. Who assumes no liability or responsibility for any errors that appear in this manual.

CONTENTS

1. Safety Instructions-----	6-7
2. Specifications-----	8
3. Unpacking · Installation-----	9-10
4. Features-----	10
4.1 Service Control Panel-----	10
4.2 Power Switch-----	10
5. Connections-----	11-16
5.1 Control Board-----	11
5.2 RJ45 Ethernet (internet)-----	12
5.3 PC wiring-----	13
5.4 PC wiring to Control Board-----	13
5.5 Printer-----	14
5.6 General-----	15
5.7 Monitor-----	16
6. Printer-----	17-28
7. Playing-----	29-38
8. Customized-----	39-58
8.1 Structure-----	39-40
8.2 Logo-----	41-42
8.3 Welcome /Bye-----	43-47
8.4 Text-----	48-49
8.5 Music-----	50
8.6 Frames-----	51-56
8.7 Advertising Photos-----	57-58
9. Uploading-----	59
10. Downloading-----	60
11. Setup menu-----	61-71
11.1 Products & Prices-----	62
11.1.1 Extra Copies-----	63
11.2 Rentals-----	64
11.3 Customize-----	64-68
11.3.1 Logo-----	65
11.3.2 Text-----	66
11.3.3 Date-----	66
11.3.4 Welcome/Bye-----	67
11.3.5 Frames-----	68
11.4 Options-----	69-70
11.5 Camera-----	71

12.Internet-----	72-74
12.1 Player.Get your picture-----	72-73
12.2 Owner.Prepare USB-Stick/Event-----	73-74
13.Troubleshooting-----	75-90
13.1 Uploading the logo-----	78-79
13.2 Hard Drive-----	80-83
13.3 Boot DVD-----	84
13.4 Dongle Error-----	85
13.5 Camera Error-----	86
13.6 Touch Screen Error-----	86
13.7 Printer Error-----	87-88
13.8 No signal-----	89
13.9 Control Board Error-----	90
14.Characteristics-----	91-98
14.1 Control Board Diagrams-----	91
14.2 Decals -----	92-93
14.3 Spare Diagrams-----	94-95
14.4 Parts List-----	96-98
15.Notes-----	99
16.Annex 1: myphotocode.com Tutorial-----	100-121

1-SAFETY INSTRUCTIONS

The following directions must be followed carefully for safe use, to prevent personal injuries, and damage to the equipment.

Please read this entire manual before initial use and store it in a convenient location for on easy access.



WARNING: To ensure safe operation, observe specifications, notices and cautions in this document. Digital Centre Accepts no liability for damage or injuries from improper use of this product.



WARNING: Prevent electrical shock and equipment damage. Before connecting or disconnecting cables and/or changing the paper, disconnect power cord from the A/C outlet.



WARNING: Prevent shock hazard and damage. Only plug the power cord into a **220 volts (110 volts for USA) grounded A/C outlet.**



WARNING: Do **not** touch exposed wires or moving parts such as power supply modules and the control board. Touching these parts could cause electric shock or other injury, data loss, and/or printer malfunction.



WARNING: Only use Mitsubishi CK9046(DC) paper / ink ribbon set in the printer. Use of other paper / ink ribbon will cause software malfunction, poor image quality, and/or printer damage.



WARNING: Do **not** touch the thermal print head, or head area of the printer. The print head operates at an extremely hot temperature. Touching it might cause burns or other injury.



WARNING: Follow the directions in the Mitsubishi manual when cleaning the printhead. Do not use cotton, wool or other fabric swabs. The lint left behind poses a fire hazard.

NOTICE: Read additional **Warnings** in Mitsubishi Printer Manual.



WARNING: The printers are not interchangeable.




DANGER: Tipping Hazard! Photo Booth may pose danger to small children and/or pets. Unplug the power cord from the A/C outlet immediately if the Photo Booth tips over.




WARNING: Use only original parts from Digital Centre.


Use only original parts from Digital Centre. Use only original parts for your photo booth from Digital Centre. Non original parts may compromise the use of the photo booth and may create a malfunction and cause serious damage. Using different components, changing wiring, or altering the photo booth in any fashion will void the warranty.


Digital Centre is unable to assist any customer that has changed, modified, or altered the photo booth using non original parts. We cannot provide a guarantee or service for products that are not original parts from Digital Centre.

 **Danger:** Power Off the Photo Booth immediately if any of the following occurs:

- Smoke
- Unusual Odor
- Unusual Noise
- Water or other Liquids spill inside the Photo Booth
- Physical Damage

 **Danger:** Do not place or store the Photo Booth in wet or extremely humid areas, in direct sunlight, near an open flame or heater, and/or swimming pools. Avoid Condensation.

 **Danger:** Operate the Photo Booth in locations with ambient temperatures of 5°C – 40°C (41°F – 104°F)

 **Danger:** Install the Photo Booth on a flat, even and, clean surface.

 **Danger:** Repairs should only be made by qualified technicians.

 **WARNING:** Indoor Use Only

MAINTENANCE: Cleaning: Use only a clean, dry, soft cloth. If necessary use a damp cloth and/or neutral detergent. Do not use window cleaner or any other alkaline cleaners.

2-SPECIFICATIONS



Power Supply: AC 220V 50/60 Hz
(110V for USA)

Power Consumption: 260W

Weight = 222 Kg / 490 lbs.

Nominal fuse rating= 6 Amps

Monitor: LCD Touch Monitor 22"

Printer: Mitsubishi CP9550 Dye
Sublimation Photo Printer

Specifications may change at any time without prior notice.

3-UNPACKING · INSTALLATION

These are the accessories included with your new Digital Centre Photo Booth:

Manual



Keys



Power Cord



Boot DVD



Warning: Movement of the photo booth requires assistance from two or more people.

- Unwrap and remove all packaging materials. Remove screws and metal holding plates that attach the Photo Booth to the skid.
- Access to the printer and the USB port of the computer is on the right side of the seat. Unlock and open this side service door and then remove the protective polystyrene foam block before first use.
- The keys for the service door, service panel, manuals, and power cord are located in the picture chute on the right side of the Photo Booth.
- Inspect the wiring harnesses for disconnected plugs.




Plug the power cord into the socket underneath the Photo Booth. Slide the power switch to the "ON" position.



Adjust the height of the four metal legs once the final location for the booth has been established. The screws are underneath the cabin next to the wheels.

4-FEATURES

4.1 SERVICE CONTROL PANEL

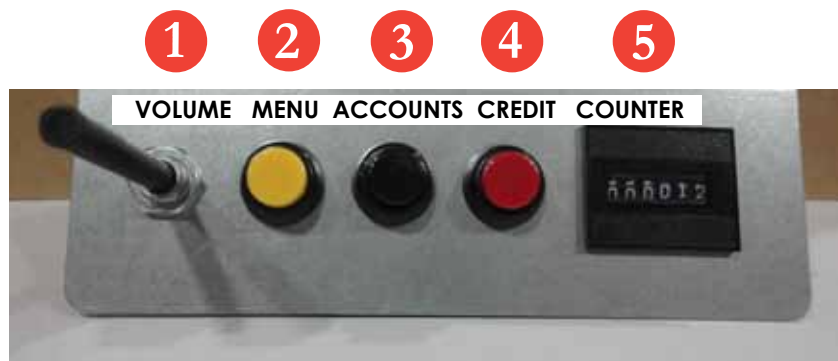

1. Volume Control lever.
2. Menu (Yellow Button): It enters setup Menu and allows options such as pricing, logos, camera adjustments, and features to be changed.
3. Accounts (Black Button): It prints detailed vending report including number of prints available.
4. Credit (Red Button)
5. Coin Counter

4.2 POWER SWITCH




The Power Switch is located underneath the cabin. It contains a Fuse and a power cord socket.

5-CONNECTIONS

5.1 CONTROL BOARD

CONTROL BOARD (DC-EVO-V3.0)

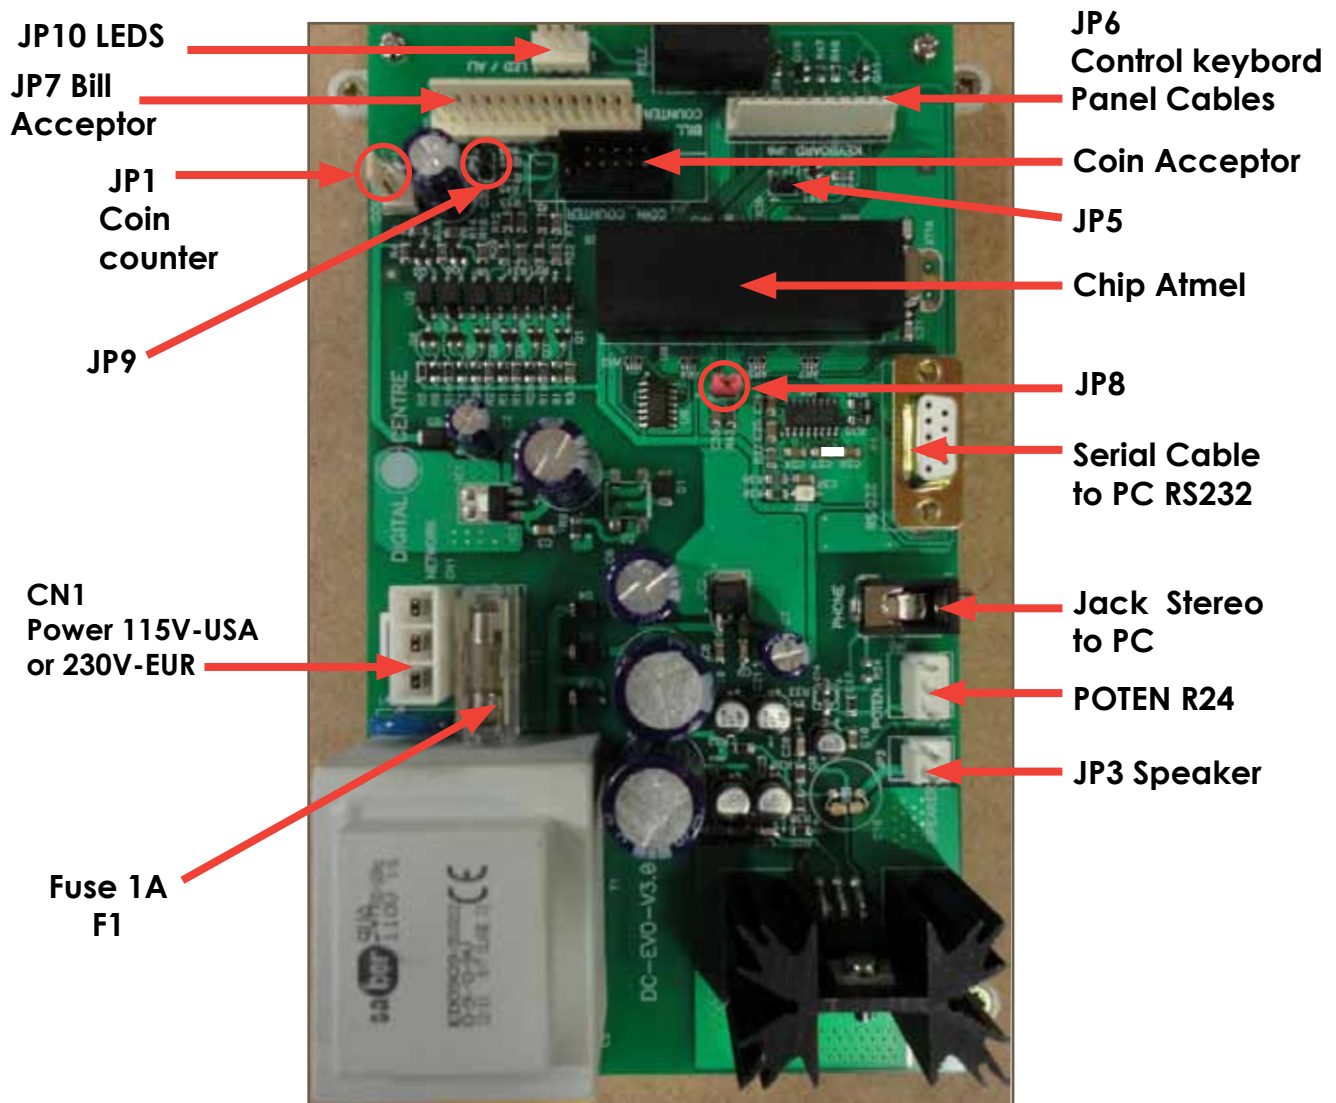

RS232. Serial Cable. From Control Board to PC.
 JP7. Bill Acceptor Cable. From Control Board to Bill Acceptor.
 CN1 Power Supply at 230 volts (115 volts for USA).
 Jack Stereo. From Control Board to PC
 F1. We need 1A fuse here to run the Control Board.
 JP3. Speakers. JP3 gives us the volume control.

POTENT R24: We connect here the main cable from Control Board to Push Buttons + Speakers.

5.2 RJ45 ETHERNET (INTERNET)



P.9 Cable RJ45 ethernet (internet)
(Not included)



Internet connection

- Check the distance between the internet connection and the position of your photobooth in the room.
- Ensure you have a RJ45 ethernet cable that is long enough.
- Pull out the back door
- Take the cable (RJ45 ethernet) and plug it into the ethernet "hold" of your PC.


WARNING:

- The cable just can only be plugged into one position.




P.9 Cable RJ45 ethernet
(internet)

5.3 PC WIRING

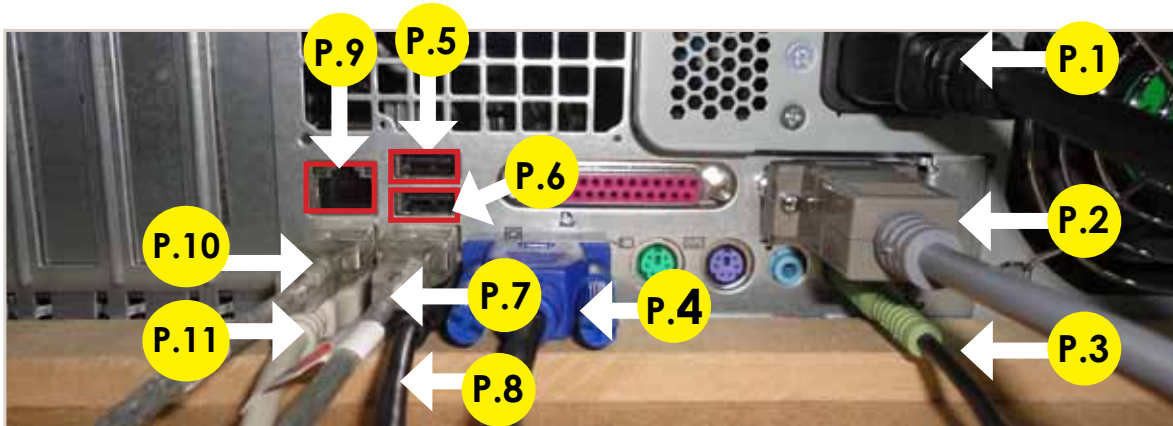

- P.1 Main Power Cable
- P.2 Serial Cable From Control Board to PC M/F. (56 cm - Inch 22,04)
- P.3 Jack Stereo Cable. (180 cm - Inch 70,87)
- P.4 VGA Cable M/M (180 cm - Inch 70,87)
- P.5 Empty
- P.6 Empty
- P.7 USB Extension AM/AF From Dongle to PC. (180 cm - Inch 70,87)
- P.8 USB Cable From Printer to PC AM/BM. (180 cm - Inch 70,87)
- P.9 Cable RJ45 ethernet (internet)
- P.10 USB Extension AM/AF From Camera to PC. (180 cm - Inch 70,87)
- P.11 USB Cable From Touch Monitor to PC. (180 cm - Inch 70,87)

5.4 PC WIRING TO CONTROL BOARD

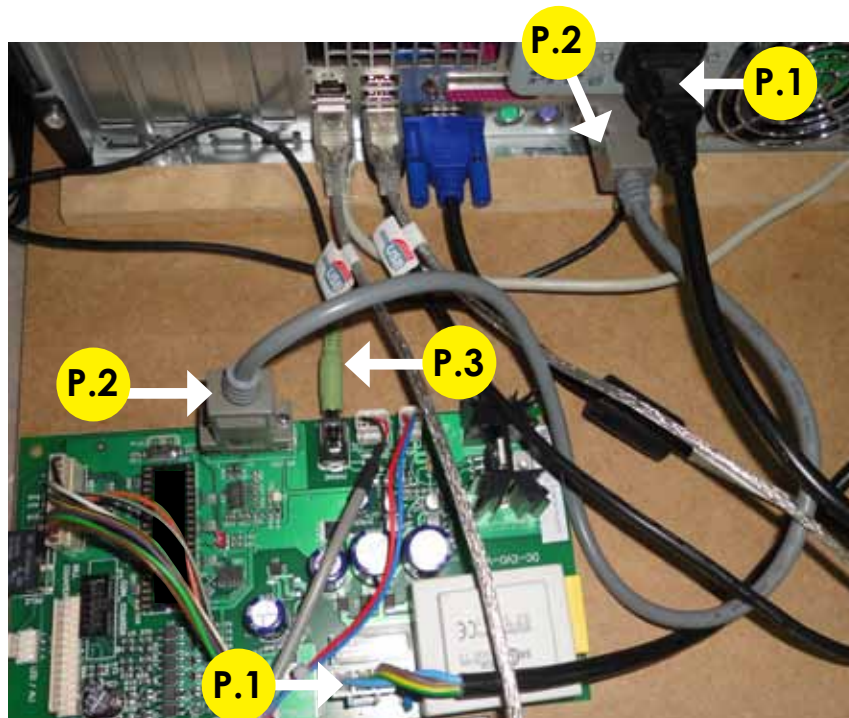

- P.1 Main Power Cable
- P.2 Serial Cable From Control Board to PC M/F. (56 cm - Inch 22,04)
- P.3 Jack Stereo Cable. (180 cm - Inch 70,87)


5.5 PRINTER



PRINTER WIRING

- P.1 Main Power Cable
- P.7 USB Extension AM / AF From Dongle to PC.
- (180 cm - Inch 70,87)
- P.8 USB Cable From Printer to PC.
- (180 cm - Inch 70,87)

5.6 GENERAL

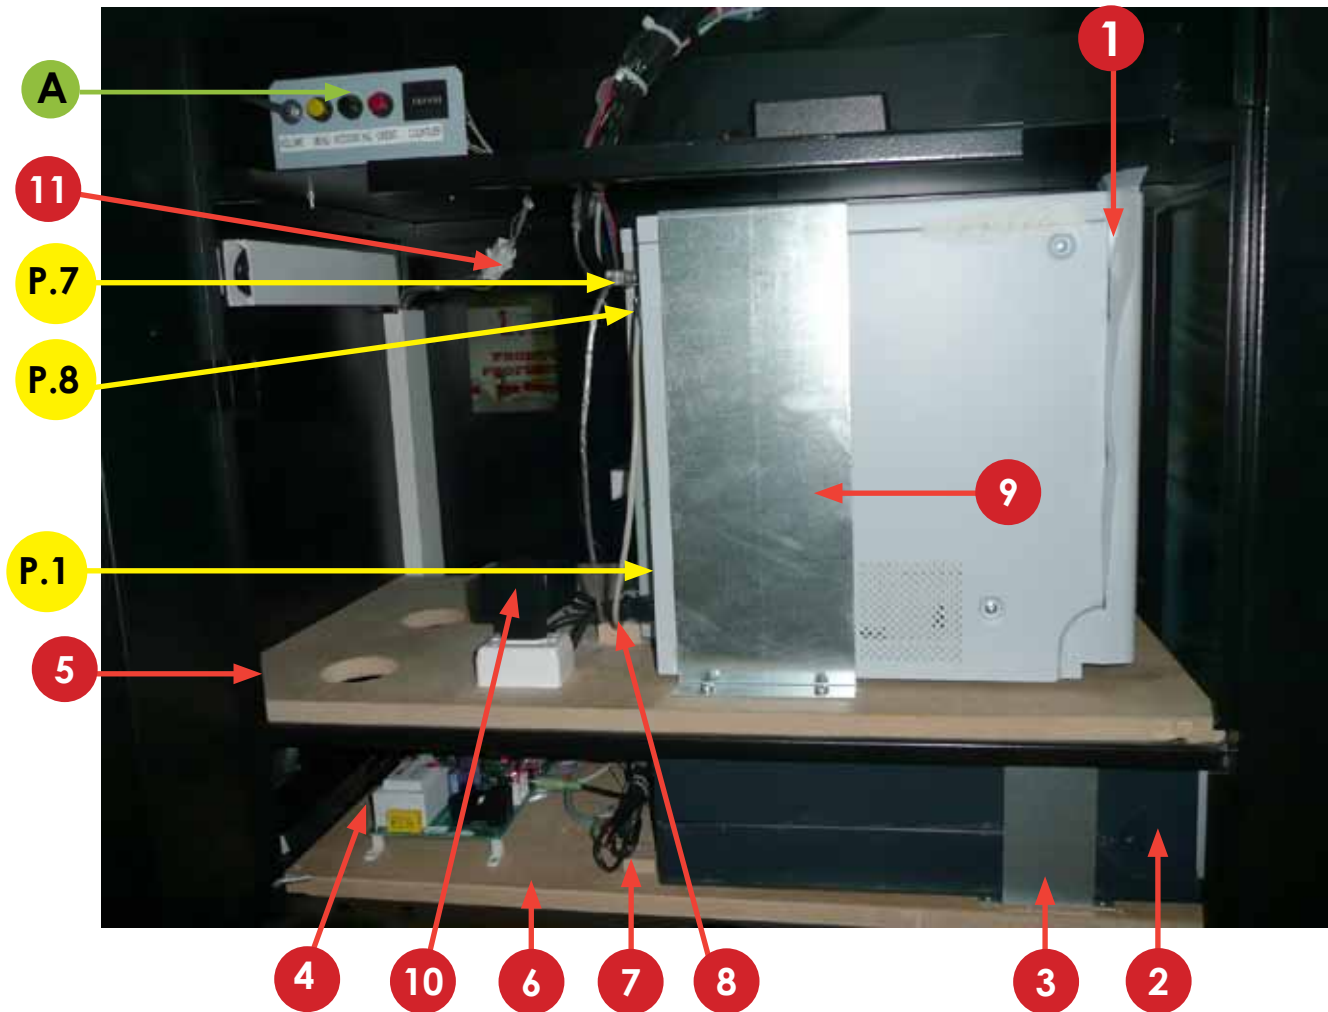

COMPONENTS

1. Printer Mitsubishi CP9550DW-DC.
2. PC HP C2D
3. PC HP Holder. (RAW METAL)
4. Control Board.
5. Wood Printer Base. PNG (RAW)
6. Wood PC Base. PNG (RAW)
7. Wood Holder For PC. PNG (RAW)
8. Wood Holder For Printer. PNG (RAW)
9. Printer Holder CP9550DC. (RAW METAL)
10. Transformer 2A 12V
11. Cable From Control Board to Service Panel Push Buttons + 2 Speakers


PC WIRING

- P.1 Main Power Cable
P.7 USB Extension AM / AF From Dongle to PC. (180 cm - Inch 70,87)
P.8 USB Cable From Printer to PC. (180 cm - Inch 70,87)

GENERAL WIRING

- A. Service Control Panel Model 1

5.7 MONITOR

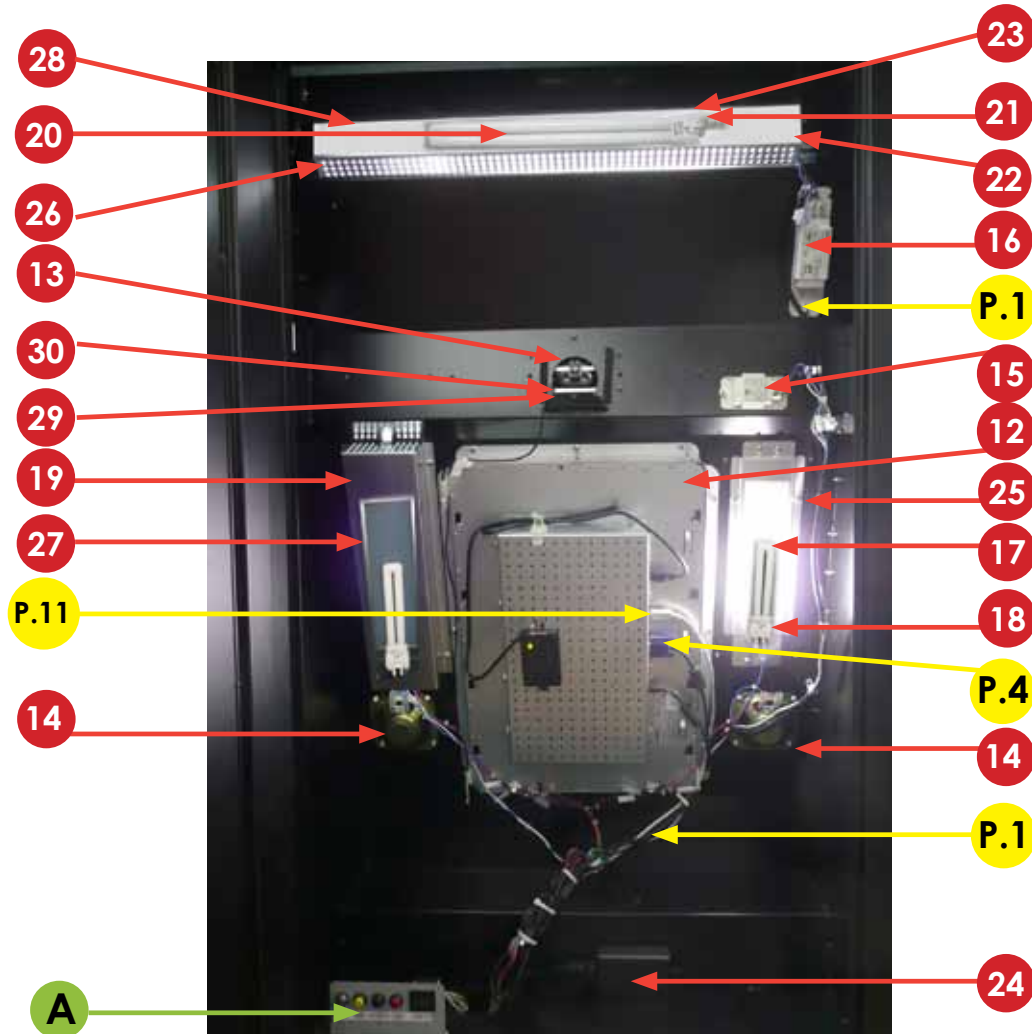

COMPONENTS

12. LCD Touch Monitor.
13. Full HD Camera.
14. Speakers 8 Ohm 5W.
(10 cm - Inch 3,94)
15. Ballast 13W
16. Ballast 36W
17. Light Bulbs 9W
18. Lamp Holder 9W
19. Lateral Light Body. (RAW METAL)
20. Light Bulbs 36W
21. Lamp Holder 36W
22. Top Light Body. (RAW METAL)
23. Light Starter
24. Touch Monitor 22" AC Adapter 12V
25. Lateral Light Diffuser Holder. (RAW METAL)
26. Top Light Diffuser Holder. (RAW METAL)
27. Lateral Light Plastic Diffuser (WHITE)
(26,5x7x0,3 cm - Inch 10,43x2,76x0,12)
28. Top Light Plastic Diffuser (WHITE)
(52x9,5x0,3 cm - Inch 20,47x3,74x0,12)
29. Fixing Camera Back Holder. (RAW METAL)
30. Fixing Camera Metal Base. PNGV&N (BLACK)


PC WIRING

- P.1 Main Power Cable.
P.4 VGA Cable From
Touch Monitor to PC.
(180 cm - Inch 70,87).
P.11 USB Cable From
Touch Monitor to PC.
(180 cm - Inch 70,87)

GENERAL WIRING

- A. Service Control
Panel Model 1

6-PRINTER

 **WARNING:** The printers are not interchangeable

• Protective Measures

This printer is designed to operate with Photo Booth systems. Do not remove any inside components. Do not try to repair or manipulate it. Before printing, install an Ink sheet and paper.

Never insert any object into the unit.

Foreign objects of any kind inserted into this unit is safety hazard and can cause extensive damage.

Do not place anything on the digital color printer.

Heavy objects placed on the digital color printer can cause damage or obstruct proper ventilation.

Do not remove the cabinet.

Touching internal parts is dangerous, and may lead to malfunction. Contact the sales dealer to carry out internal checks and adjustments. Before opening the cover for eliminating a jammed paper, etc ... , be sure to disconnect the power cord plug.

When transporting the unit.

When transporting the unit, remove the ink sheet and print paper from the unit.

Be careful around print paper exit slot.

Do not insert your hand or any material into the paper exit slot during printing. Do not touch the cutter blade inside the paper exit slot. Otherwise, your finger will be injured.

Do not touch the thermal head.


Do not touch the thermal head (located inside the unit). The thermal head is heated to a high temperature. This may cause injury.

Ink sheet and paper print supply.

Use only the ink sheet and paper supplied by Digital Centre, otherwise the Photo Booth system will not work, and Digital Centre does not assume any responsibility for damages or injuries.

FEATURES & FUNCTIONS

FRONT PANEL

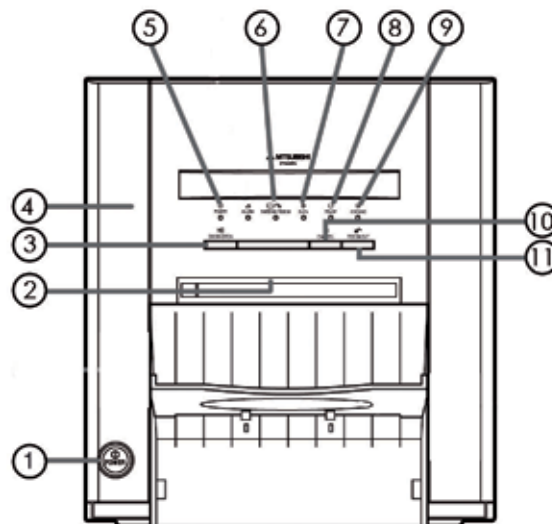

1 · POWER BUTTON

Use to switch the power ON and OFF.

Press to turn on power. Press again to turn off power.

2 · PRINT OUTLET

The printed paper comes out here.

3 · DOOR OPEN BUTTON

When you press this button while the power is on, the door will open in about five seconds.

4 · DOOR

Open this door when installing print paper or ink ribbon. Press the DOOR OPEN button 4 to open the door.

5 · POWER INDICATOR

When the power is turned on, the indicator illuminates.

When a paper jam occurs or when the door is open.

6 · PAPER/INK RIBBON INDICATOR

When an error concerning the ink ribbon or print paper occurs, this indicator illuminates or blinks

7 · DATA INDICATOR

This indicator blinks during data transfer. It illuminates during printing.

8 · READY INDICATOR

This indicator illuminates when this unit is ready to accept the data. It also illuminates during data transfer. It blinks during print canceling procedure.

9 · COOLING INDICATOR

When the unit is overheated, this indicator blinks.


10 · CANCEL BUTTON

Press this button for more than 1 second to cancel continuous printing. After the ongoing printing at the time this button is pressed is completed, the printing process is canceled.

11 · FEED & CUT BUTTON

When you keep pressing this button for more than 1 second, the print paper is fed and cut.

SIDE AND REAR PANEL

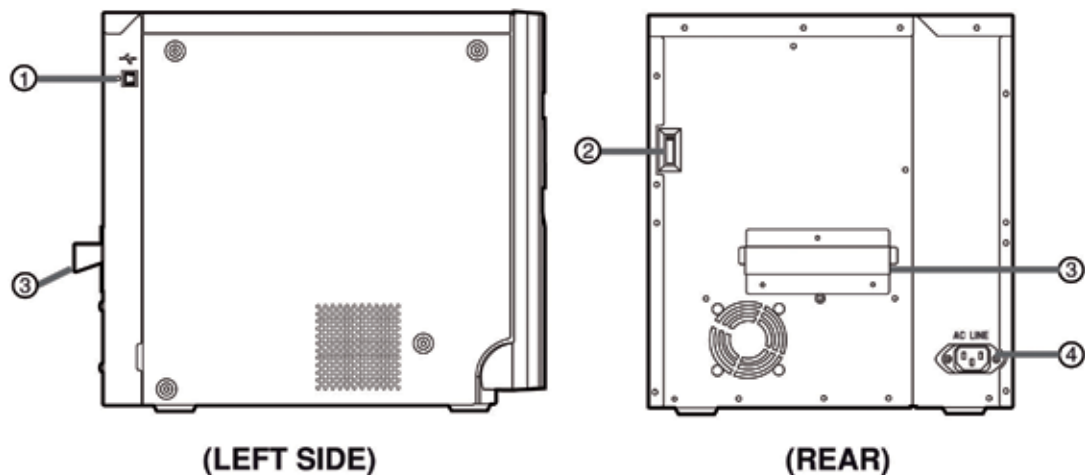

1 · USB TERMINAL

Use to connect the USB cable.

2 · DIP SWITCHES

Never touch it.

3 · HANDLE FOR TRANSPORTING

When transporting this unit, hold this handle and the lower front part of this unit.

4 · POWER SOCKET (AC LINE)

Use to connect the provided power cord. Insert the cord firmly.

Before Operation

BEFORE PRINTING

- 1 Install the print paper to this unit. (See below.)
- 2 Install the ink ribbon to this unit.

INSTALLATION OF PRINT PAPER


• SPACERS

The spacers are attached to the paper flanges. For the necessity of the spacers, see the Quick Setup Guide. Remove the cushions put between the paper flange and spacer when using them.

How to attach and remove the spacers

1. Turn the spacer until the latches are unlocked.
2. Remove the spacer with the paper flange's stoppers retracted.

When you use the print paper with the correct spacers that have to be used, attach the spacers to the paper flanges by reversing the removal procedure as shown on right.

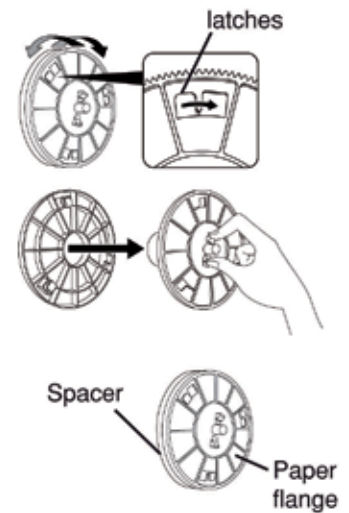

- 1 **Attach the supplied paper flanges to both sides of the print paper.** When you pinch the latches on the paper flange, the stoppers retract into the shaft. Attach the flanges to the print paper with the stoppers retracted. Make sure that the flanges are attached to the print paper securely, and release the latches.

NOTE

- Be careful not to pinch your fingers.
- Do not remove the sticker on the print paper yet.
- Do not slack the paper. Any slack in the print paper may degrade the print quality.




CAUTION


- When placing the print paper, remove one flange and keep the print paper upright on its side with no flange.
- When you put the print paper sideways, it may roll and fall. This may cause injury.

NOTE


- Do not touch the thermal head.
- Fingerprints or dust on the thermal head will degrade the print quality.

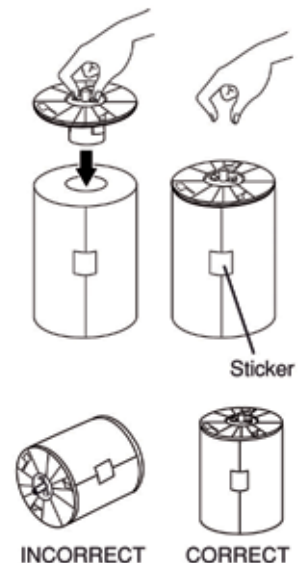


Before Operation

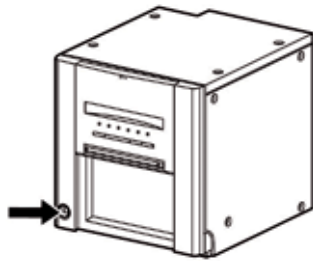

- 2 Press the POWER button to turn on the power.

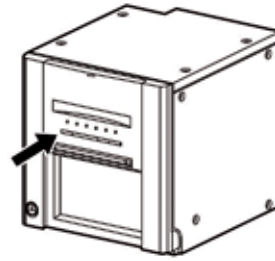


- 3 Press the DOOR OPEN button to open the door. Take the ink cassette in the printer out.

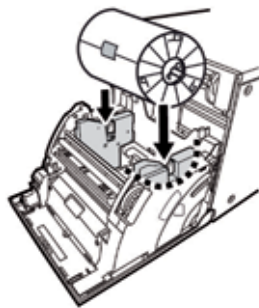


- 4 Install the print paper into the unit. Make sure to install the print paper firmly.



Thermal head (Inside)

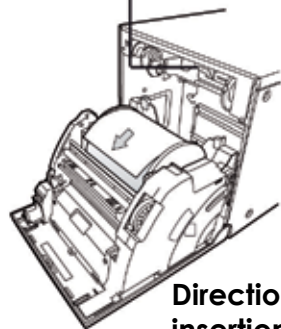

Direction of paper
insertion

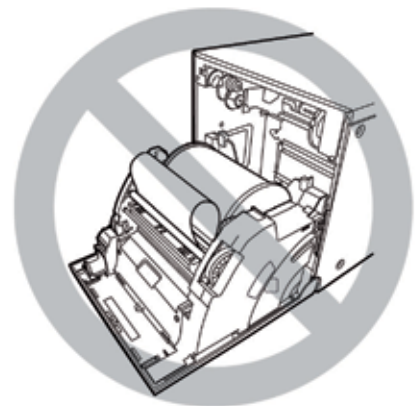

NOTE

Install the print paper into the unit slowly. If it is dropped along the ditches, the unit or accessories may be damaged.



CAUTION


Do not touch the thermal head right after printing because it is extremely hot. Otherwise you may get burned or injured.



NOTE

Note that the thermal head is quite sensitive to static electricity. When you touch the thermal head while carrying static electricity on your body, the thermal head may be damaged.

Before Operation

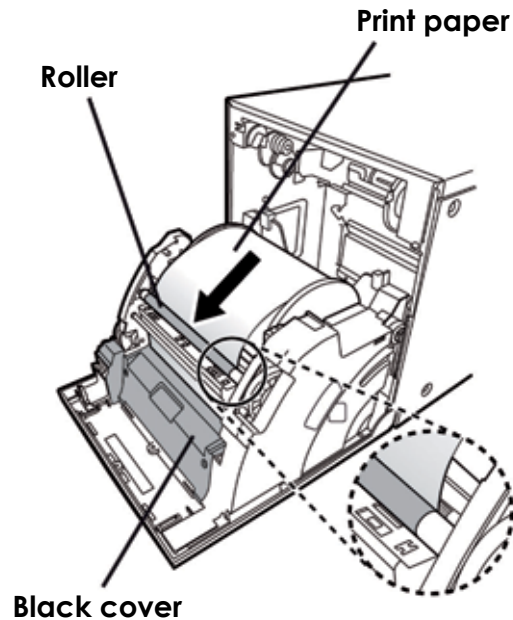

- 5 Remove the sticker, insert the print paper between the rollers as shown above, and feed the print paper until it reaches the black cover.

Remove the sticker before inserting the print paper between rollers. Make sure to insert the paper straight.

NOTE

- Keep the roller clean.
- Dirt on the roller may degrade the print quality.

NOTE

- When taking the print paper out, pull it up toward you.
- Make sure to turn on the power before replacing the print paper.
- Make sure to eliminate any slack from the print paper. If you carry out the following steps without eliminating the slack, the print paper may be damaged.

2


INSTALLATION OF INK RIBBON

INSTALLING THE INK RIBBON

After installing the print paper, load the ink ribbon in the ink cassette. Then install the ink cassette into this unit.

NOTE

- Place the ink cassette on a flat surface, when loading the ink ribbon.
- Select a place that is free of dust when loading the ink ribbon. Dust or dirt settling on the ink ribbon results in poor print quality.
- Make sure that the shafts of the ink ribbon fit into the ink cassette firmly.

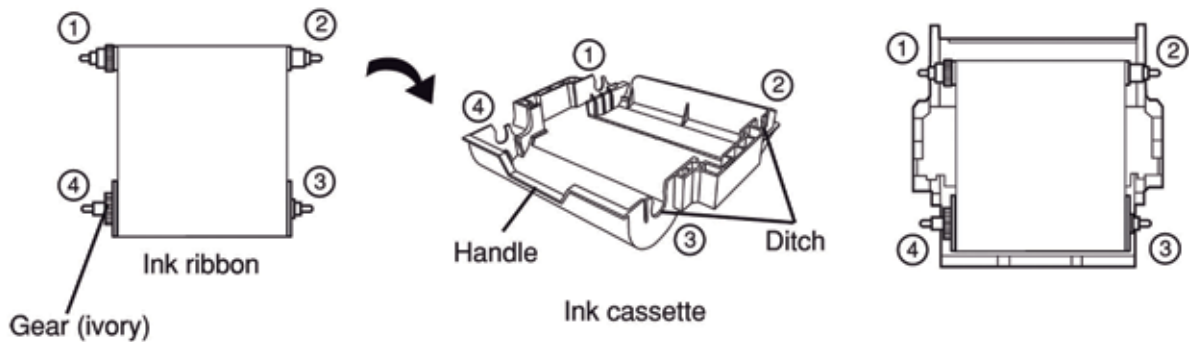


INSTALLING THE INK CASSETTE

1 · Place the ink cassette containing the ink ribbon in the position as shown above.

Place the ink cassette on the print paper with the shaft (thicker one) around which the ink ribbon is wound located to the front. Align the arrows marked on the sides of ink cassette with those on the unit. Place the rear of the ink cassette along the guides that are provided inside the unit.

Make sure to set the ink ribbon roller to the ditches firmly. Turn the ivory roller to eliminate any slack.

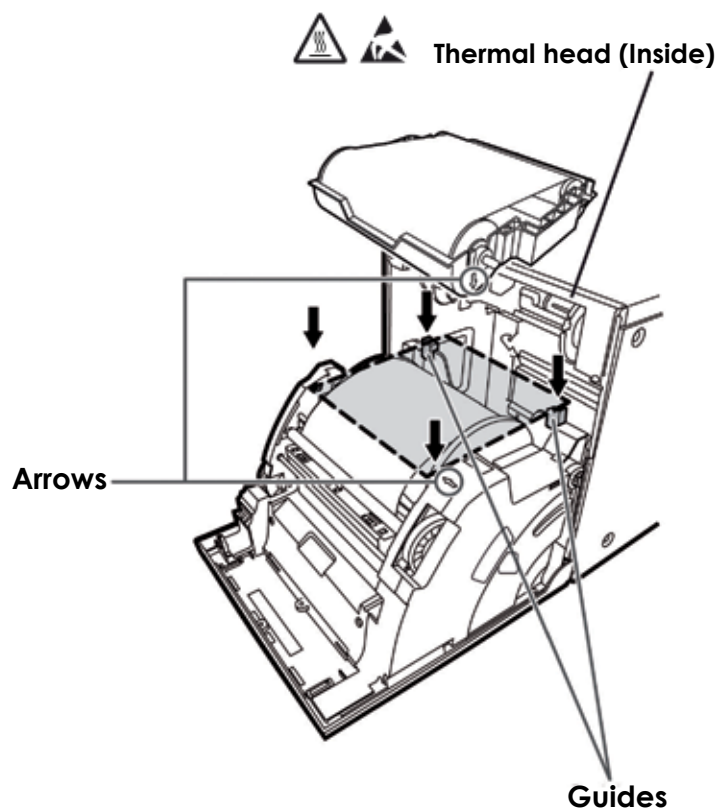


Before Operation

2 · Push the ink cassette toward the back of the unit.

Hold the handle of the ink cassette and push it straight toward the back of the unit. Then raise it until you hear a click to secure it in the ink cassette holder.

NOTE

If the ink ribbon is used up, repeat the steps 1 and 2 to replace the print paper and the ink ribbon.

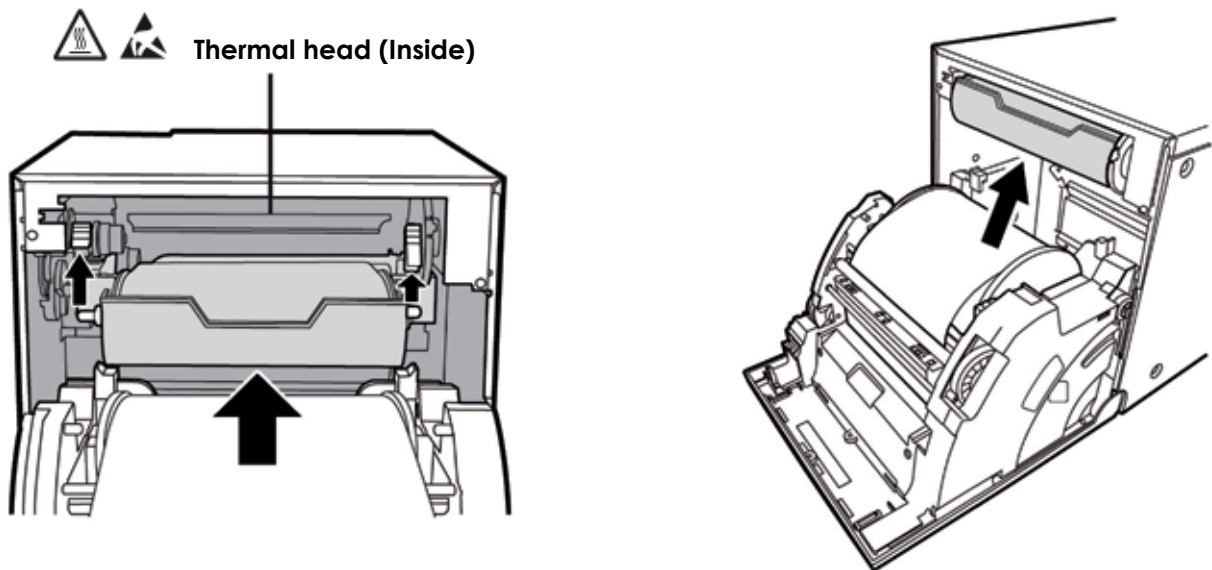



3 · Push the center of the door to close.

The print paper setting is initialized two minutes after you close the door.

When the auto feed & cut mode has been selected, the FEED & CUT procedure is repeated three times after you close the door. When the print paper with the post card printing on its reverse side is installed, the FEED & CUT procedure is repeated five times.

NOTE

- When closing the door, push it until a click is heard.
- If the PAPER/INK RIBBON indicator illuminates when the door is closed, the print paper may have not been installed correctly.
In this case, open the door to make sure that the print paper has been installed correctly. Then close the door again.
- On the auto feed & cut mode, when the print paper is installed more than three times, the print paper may be used up earlier than the ink ribbon.

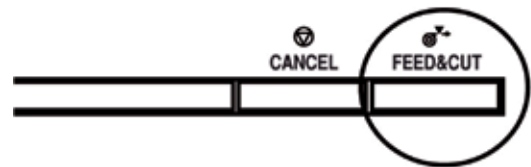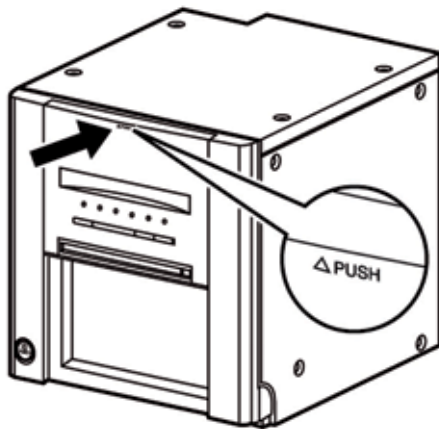

When the manual & cut mode has been selected

When the manual feed & cut mode has been selected, hold down the FEED & CUT button for 1 second or longer. Repeat the manual feed & cut three times. When the print paper with the postcard printing on its reverse side is installed, repeat this procedure five times.

To select the auto feed & cut mode, see "Setting of the DIP switches"

Installation of the print paper and the ink ribbon is completed.

NOTE

- Make sure to replace the print paper and the ink ribbon at the same time.
- When replacing them, throw away the paper chips in the paper strip bin.

Error Messages & Countermeasures


OVERCOMING PAPER JAMS


1 · Press the DOOR OPEN button to open the door.

Make sure that the power is turned on before opening the door.

If the door does not open, turn off the power and turn it on again.

Then press the DOOR OPEN button again

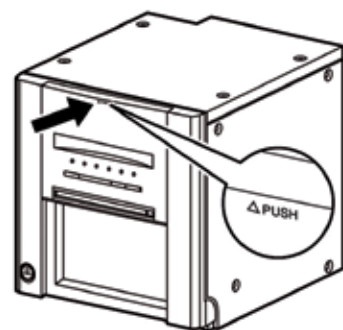

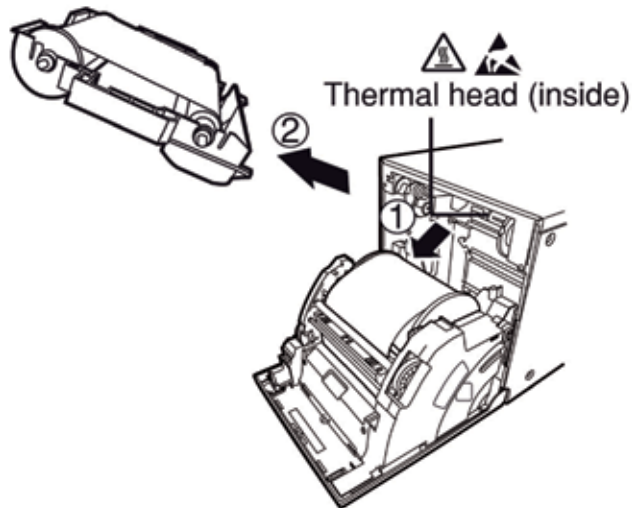


2 · Remove the ink cassette.

Push down the ink cassette as shown by the arrow 1 and pull it out.

3 · Take out the print paper.

When taking the print paper out, pull it up toward you.

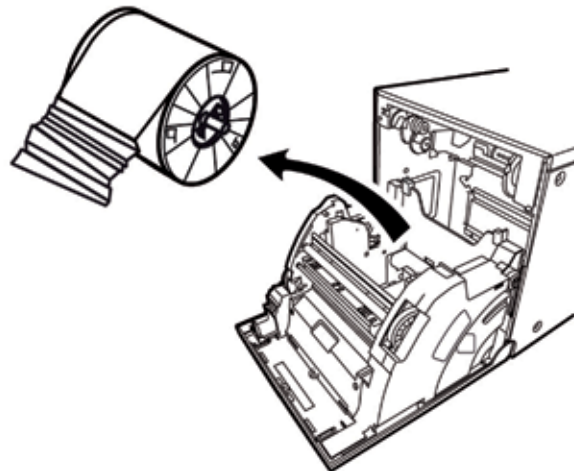

4 · Cut off the defective part of the print paper with scissors.

NOTE


Make sure to cut off the printed part of the print paper. Failure to do this may result in the ink ribbon sticking to the print paper and being torn.

5 · Install the print paper and the ink cassette with the ink ribbon.


6 · Push the center of the door to close.

The print paper setting is initialized two minutes after you close the door.

When the auto feed & cut mode has been selected, the FEED & CUT procedure is repeated three times after you close the door. When the print paper with the postcard printing on its reverse side is installed, the FEED & CUT procedure is repeated five times.

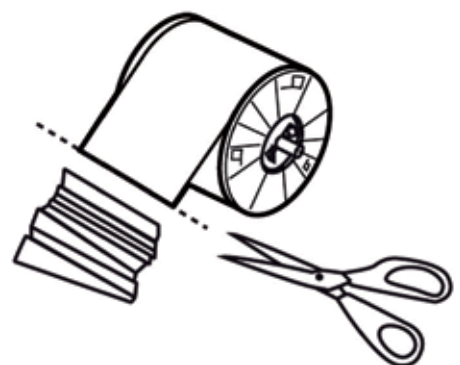

When the manual feed & cut mode has been selected, hold down the FEED & CUT button for 1 second or longer. Repeat the manual feed & cut three times. When the print paper with the postcard printing on its reverse side is installed, repeat this procedure five times.
For how to select the auto feed & cut mode, see "Setting of the DIP switches"

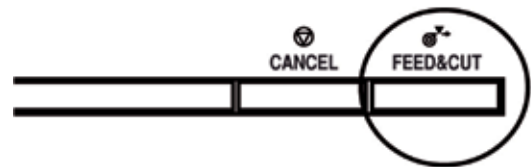

Cleaning

Cleaning as indicated below will help maintain stable printer operation and extend the printer's life.


Preparations:

Alcohol (isopropyl alcohol)

Tissue paper (Fold in half about four times, and use the folded side to clean.)

Other : Cleaner pen (option)*, Cleaning ribbon (option)*


* Please ask the dealer about options.

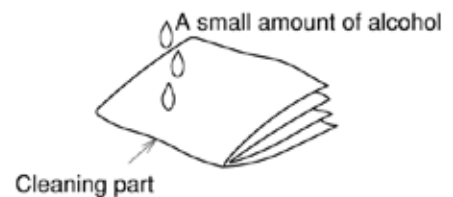

PREPARATIONS FOR CLEANING

- 1 Press the POWER button to turn on the power.
 - 2 Press the DOOR OPEN button to open the door.
 - 3 Remove the ink cassette.
 - 4 Take out the print paper.
 - 5 Press the POWER button to turn off the power.
- Make sure to turn off the power before cleaning.

How to fold tissue paper

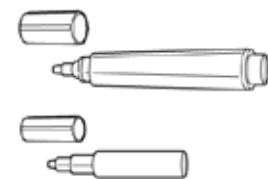



Cleaner pen

THERMAL HEAD CLEANING

Clean the heat-generating part below the thermal head. Wipe the head cleaning part carefully with tissue paper dampened with a small amount of alcohol.

NOTE

- Do not damage the thermal head.
- When the poor print quality is not corrected even if the head has been cleaned, replacement of the thermal head may be required. Contact your dealer.

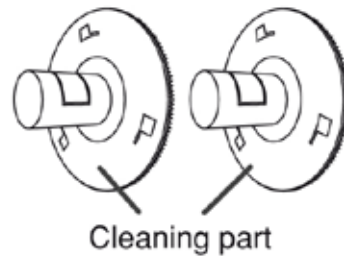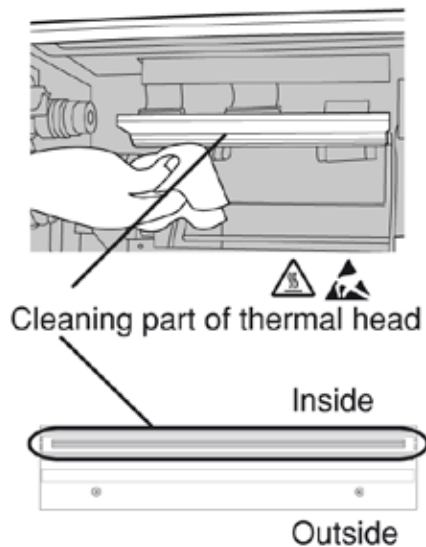

CAUTION

- Thermal head is hot right after printing. Wait until the head cools before cleaning the thermal head.



NOTE

- The thermal head may be damaged if you touch it while static electricity builds up on your body.

PAPER FLANGE CLEANING

Clean the parts that contact the print paper sides as shown above. Wipe the parts carefully with tissue paper dampened with a small amount of alcohol.

7-PLAYING



DEMONSTRATION

When there are no vends the machine enters in Demo Mode. Photo samples are displayed. Once money is inserted, you are taken to the credit screen.



PRODUCT SCREEN

You can choose among 6 different products.



Photo ID

Color and Black & White

When the instructions conclude, you are given the option to choose "Color" or "Black & White" pictures.



SHOTS

4 Shots are taken.
(3 Shots if you activate the logo)



PRINTING

The pictures are shown on the screen while strips are printing.



Hairstyles

SELECT DESIRED LOOK

You can choose different hairstyle options.



SHOTS

Put your face on the circle.
Not bigger not smaller.



PRINTING

The pictures are shown on the screen while the strips are printing.



Hats

You can choose different hat options.



SHOTS

Put your face on the circle.
Not bigger not smaller.



PRINTING

The pictures are shown on the screen while the strips are printing.



Street Art

STREET ART SELECTION



SHOTS

3 Shots are taken.





STREET ART SELECTION

Select one design.



PRINTING

The pictures are shown on the screen while strips are printing.



Get Framed

FRAME SELECTION

You can choose different frame options.



SHOTS


4 Shots are taken.


**PRINTING**

The pictures are shown on the screen while strips are printing.

8-CUSTOMIZED

8.1 STRUCTURE

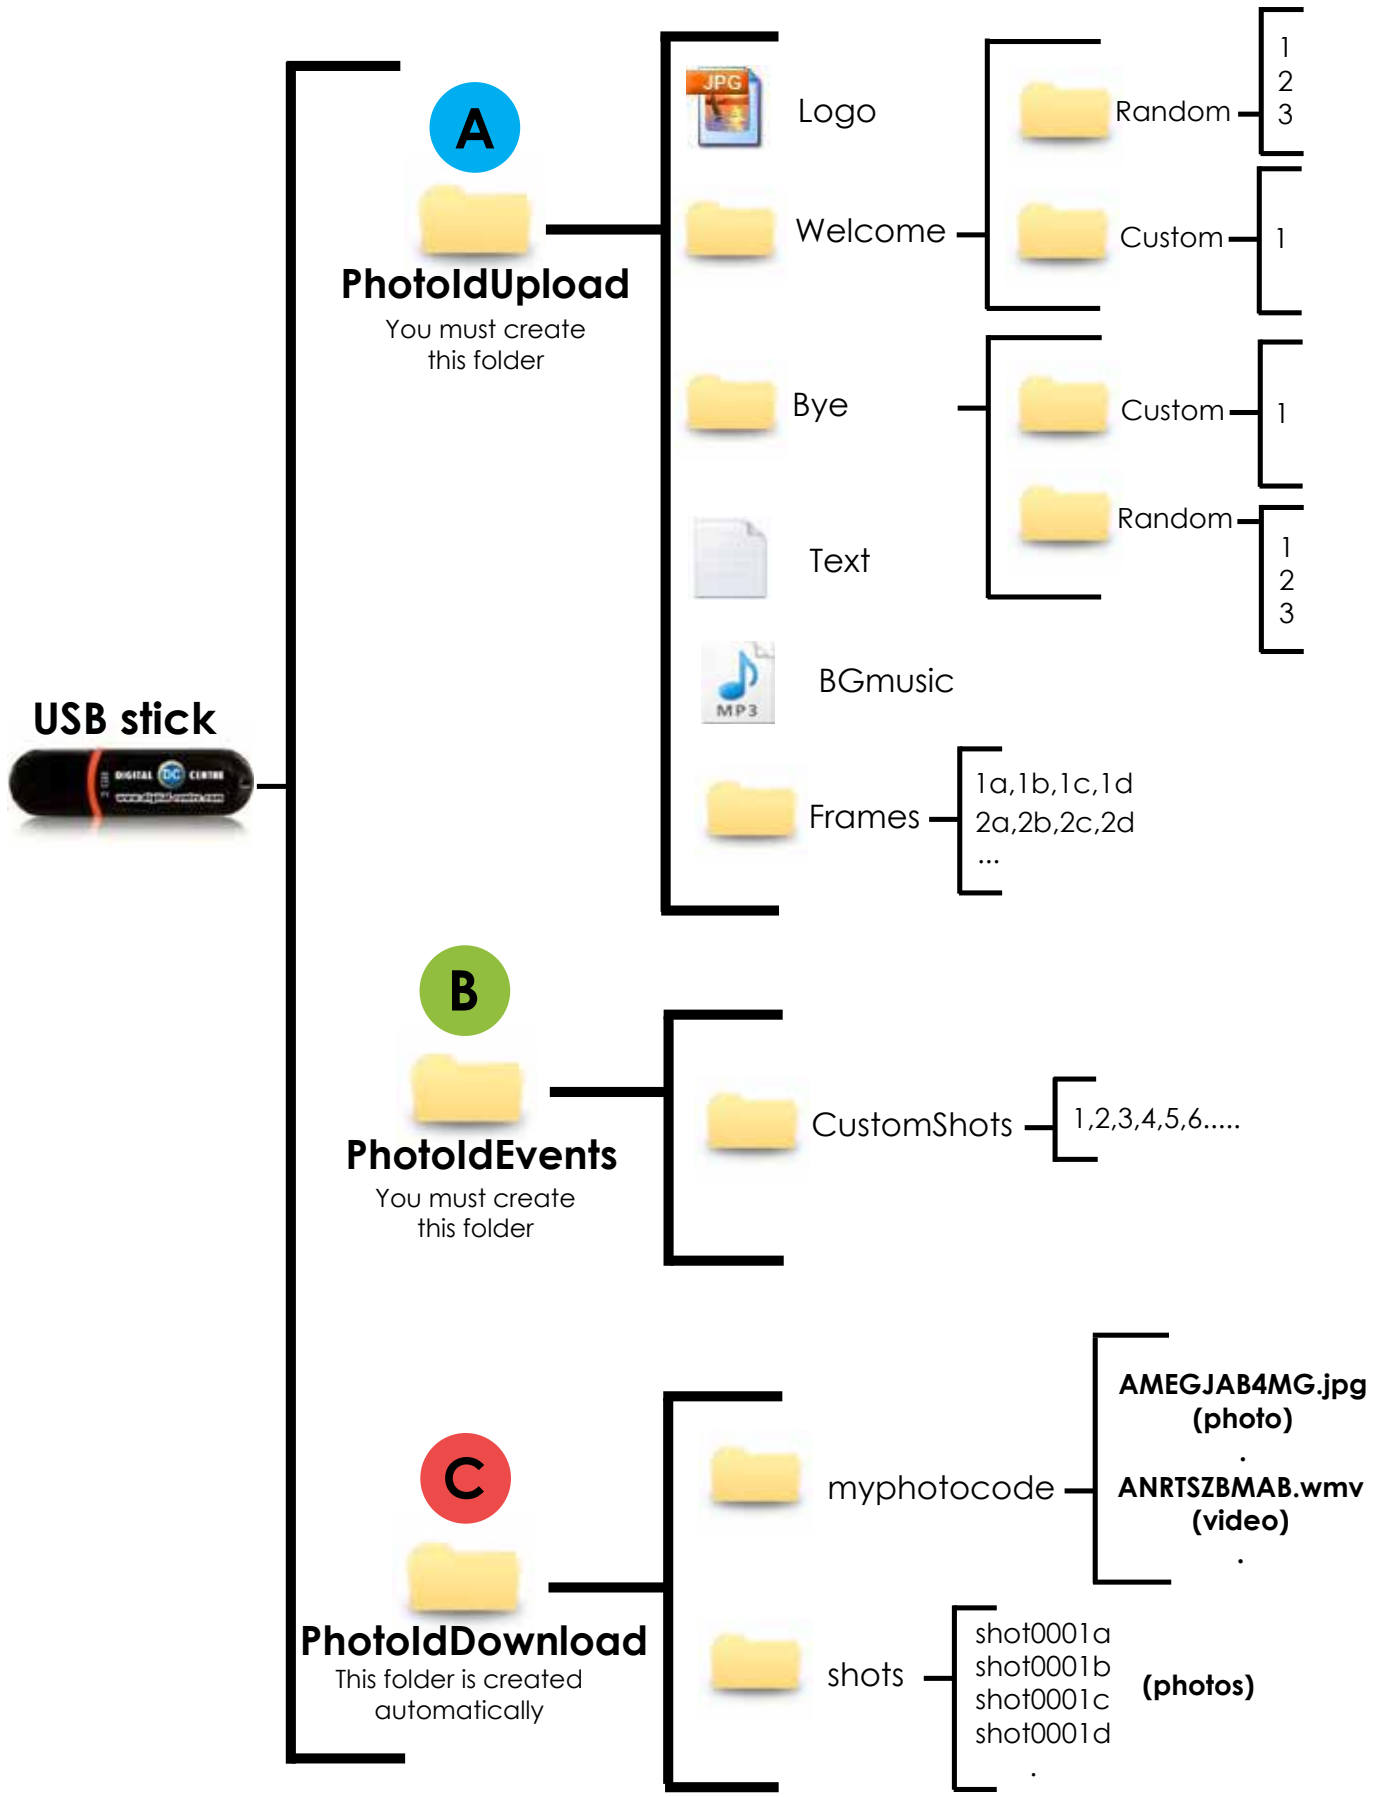

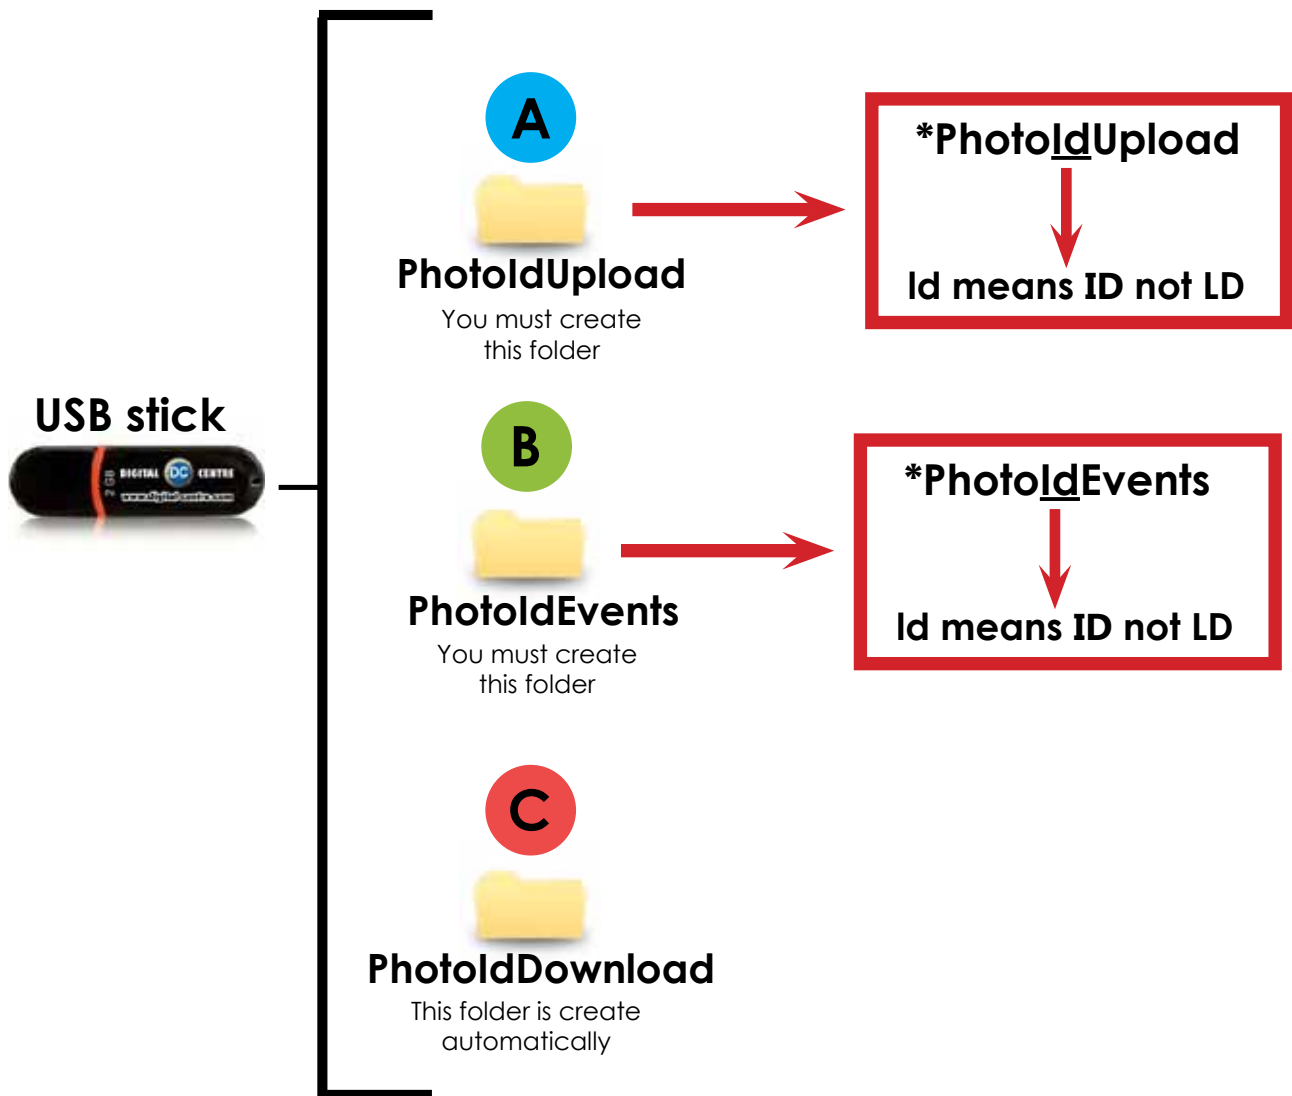

1 · Necessary Materials:

USB Stick with 2 GB of available space


We recommend using a USB Stick with a led indicator




A

FOLDER PhotoldUpload

8.2 LOGO

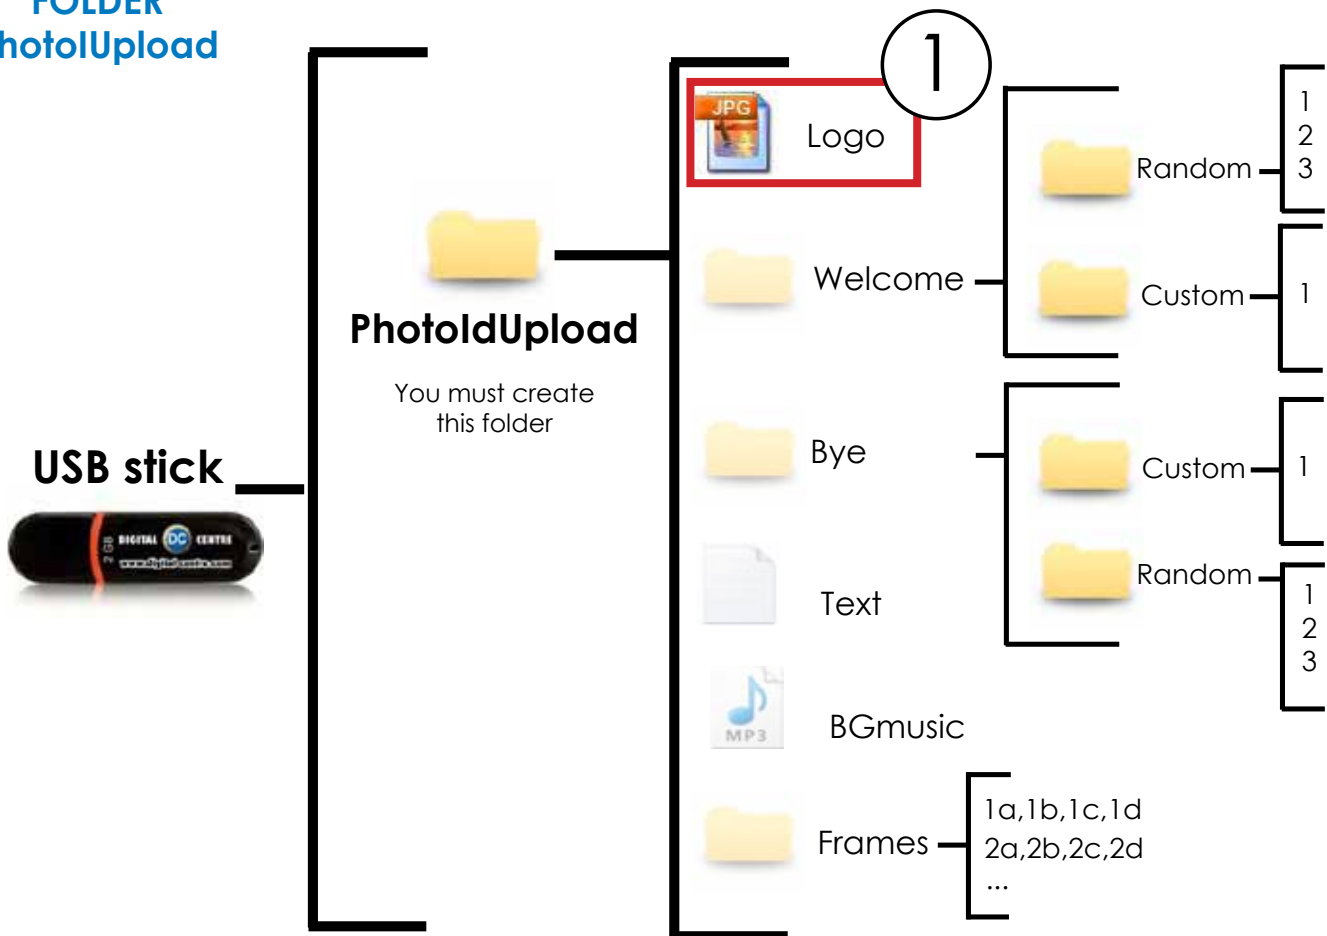

DIRECTIONS FOR UPLOADING THE LOGO

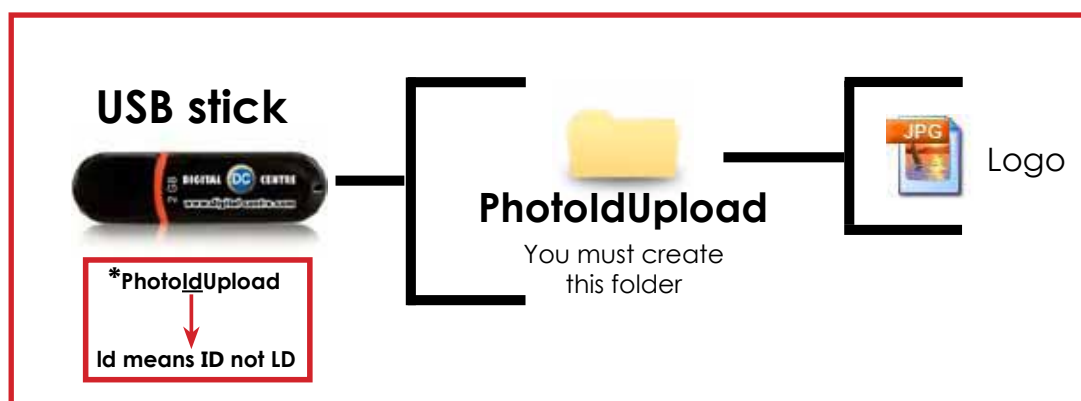


- 1 · Necessary Materials:
- USB Stick with 2 GB of available space
 - We recommend using a USB Stick with a led indicator

- 2-Create a folder on the USB stick and name it **PhotoldUpload**
- 3-Insert the logo that you want to use in the folder **PhotoldUpload**
- 4-Connect the USB Stick to the Photo Booth
- 5-Go to Setup Menu (important) and confirm that logo is activated



Width: 800 pixels


Height: 600 pixels




Sample Logo

Logo Characteristics:


- Name:** logo
- Size:** width: 800 pixels
height: 600 pixels
- Resolution:** 300dpi
- Extension:** JPG
- Color mode:** RGB




Not working? Please refer to section 13.1 for assistance
 UPLOADING (See section 9)
 SETUP MENU (See section 11)

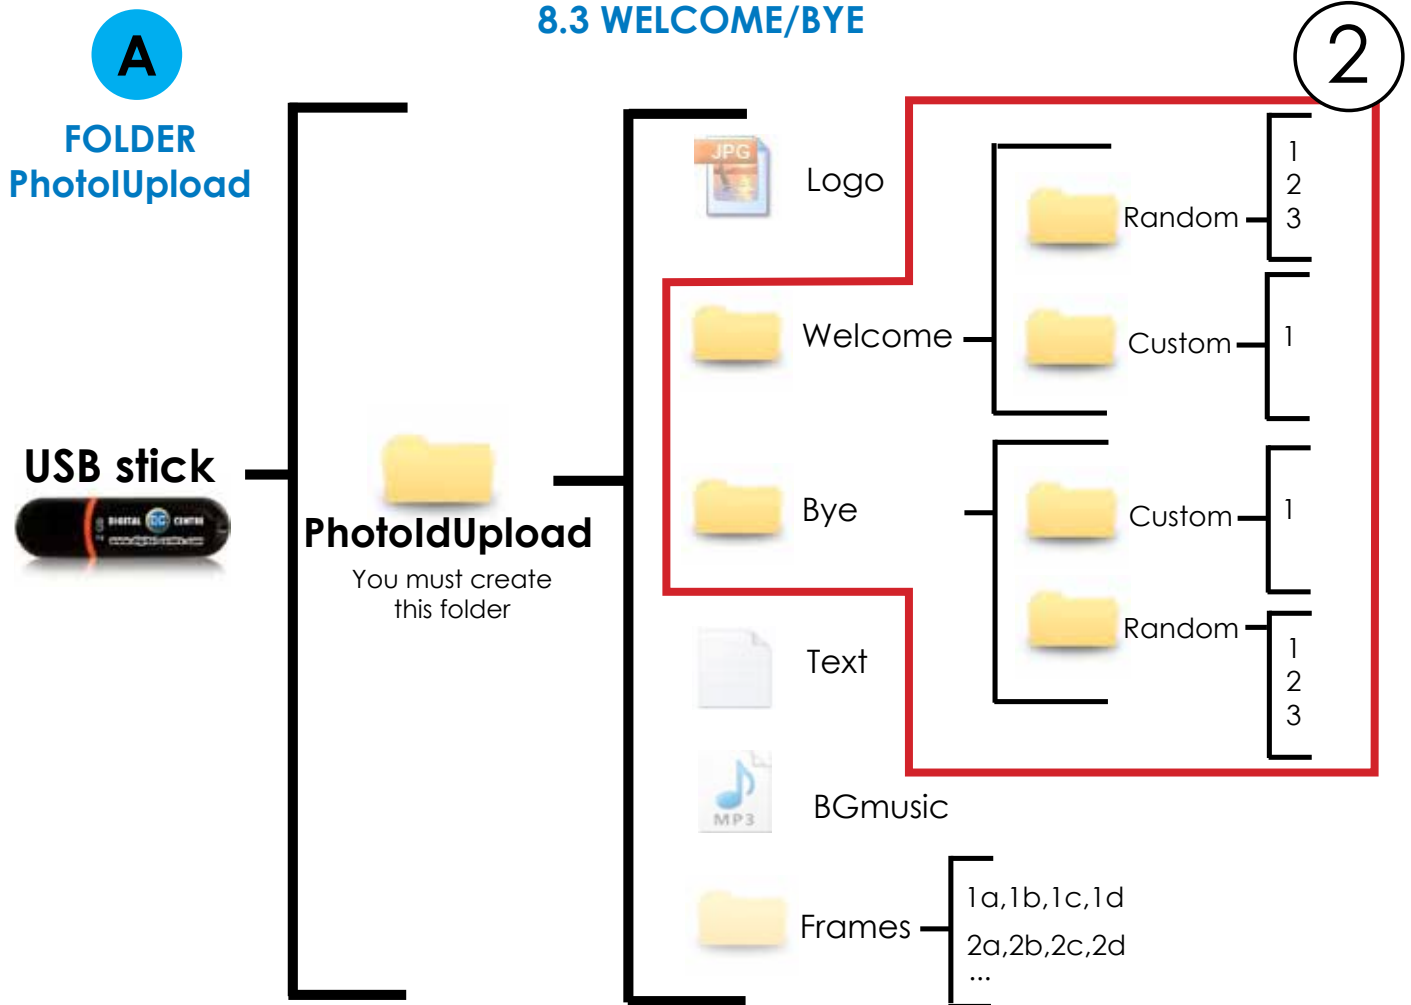

DIRECTIONS FOR UPLOADING WELCOME/BYE

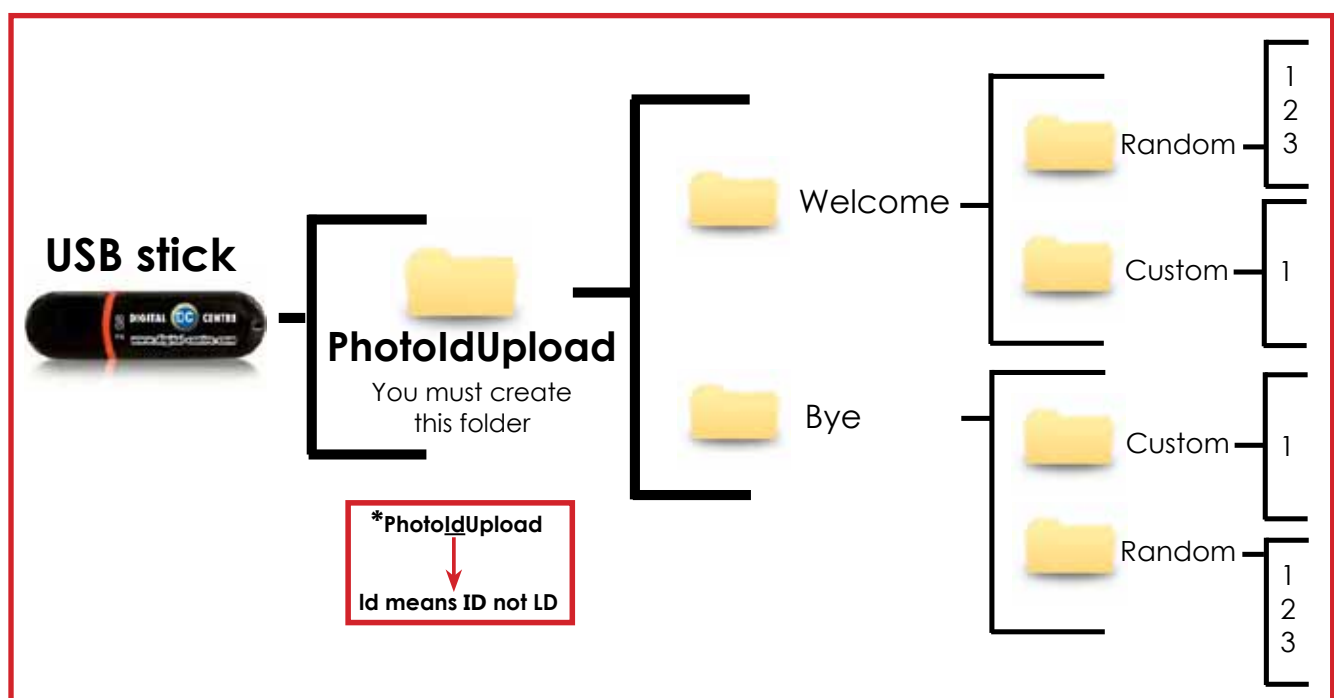


Welcome message (custom)

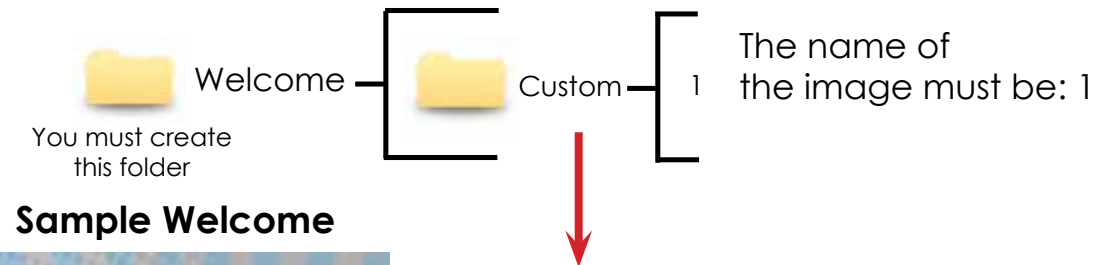

Specifications:

Name: Welcome
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG

Bye message (custom)

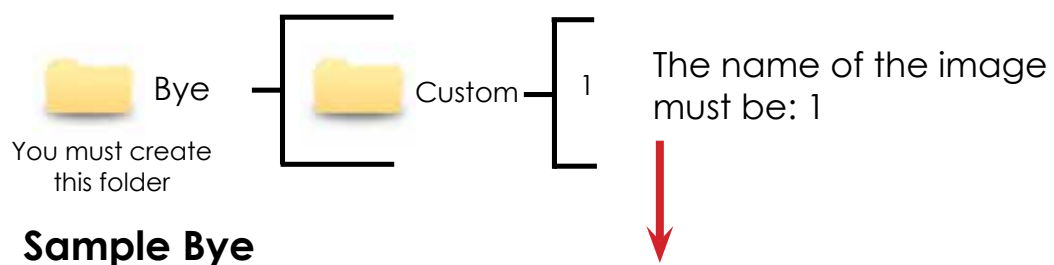

Specifications:

Name: Bye
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG


UPLOADING (See section 9)
SETUP MENU (See section 11)

A


FOLDER
PhotoUpload

8.3 WELCOME/BYE


2

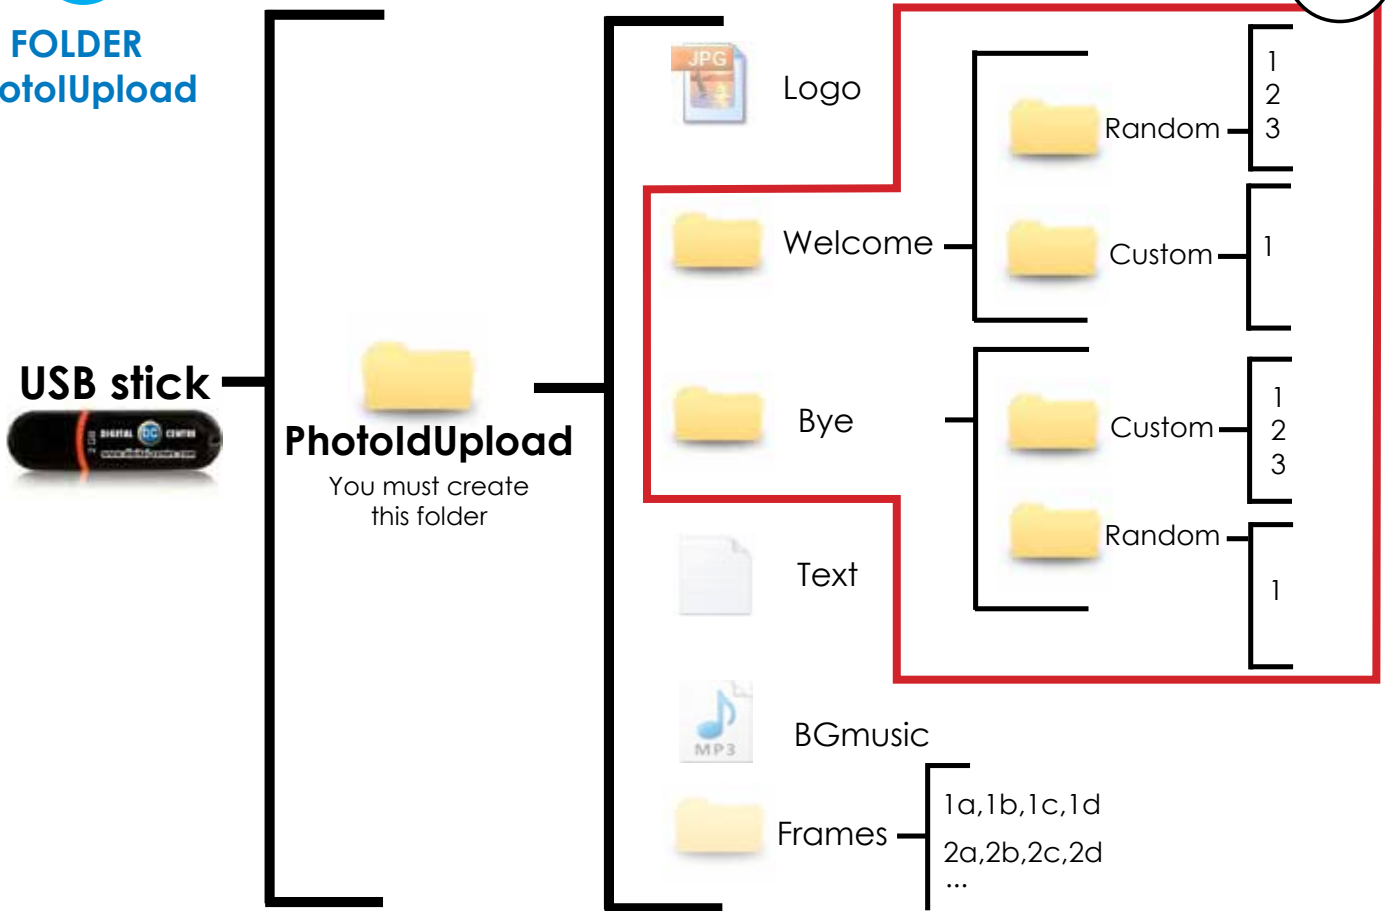

DIRECTIONS FOR UPLOADING WELCOME/BYE

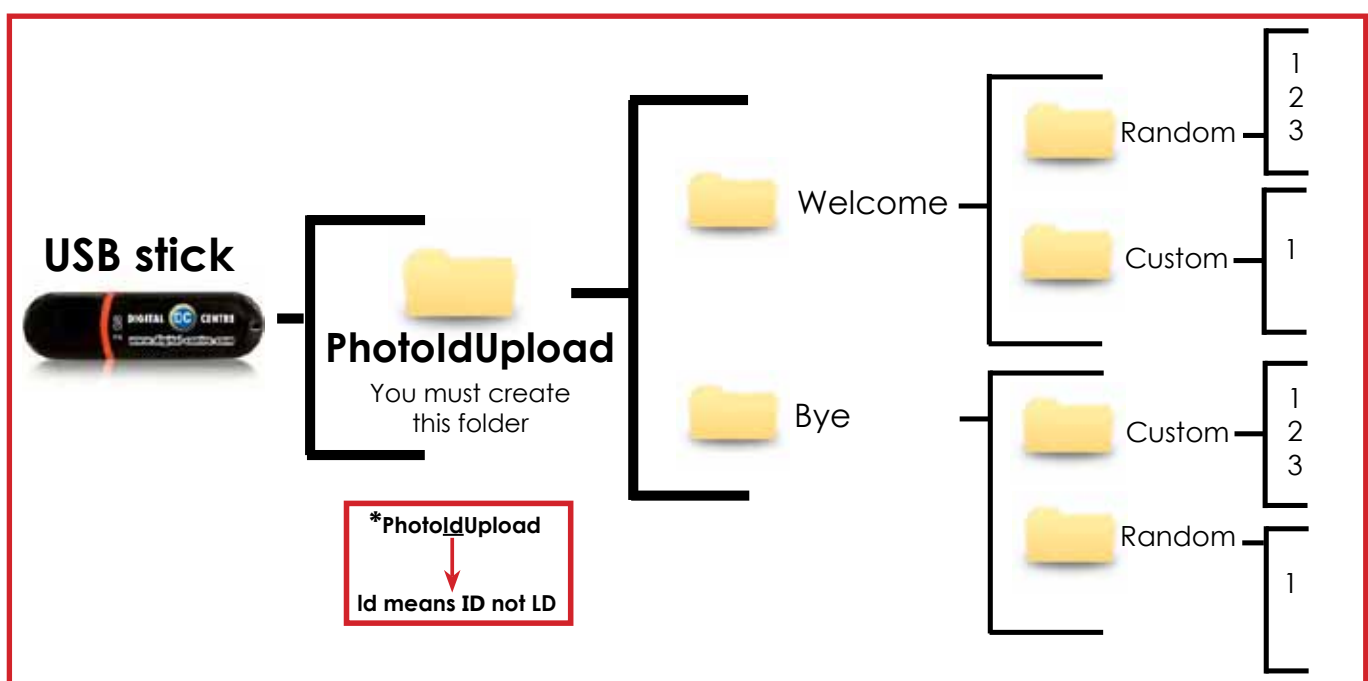

Welcome message (Random)

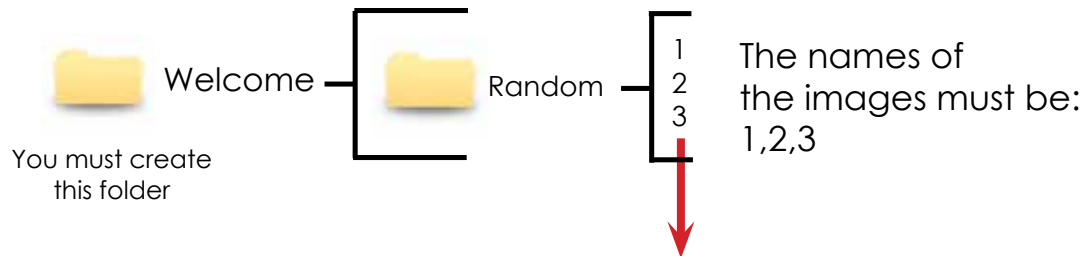

2 Samples Welcome random

Sample Welcome



Sample Welcome




Specifications:
(1,2,3)
Each one with following characteristics:

Specifications:

Name: welcome
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG

Bye message (Random)

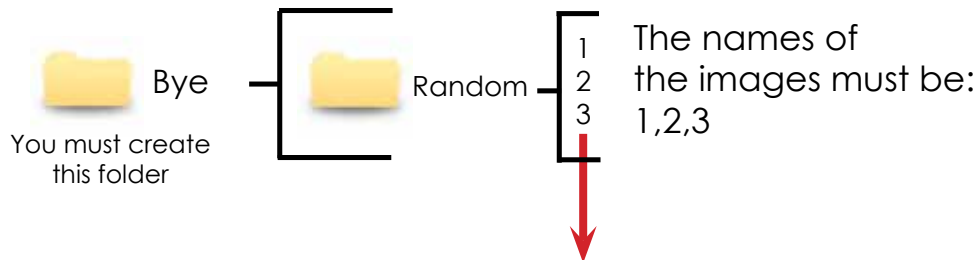

Each player will get a different Random Bye screen.

2 Samples Bye random

Sample Bye



Sample Bye



Specifications:
(1,2,3)
Each one with following characteristics:

Specifications:


Name: Bye
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG

A


8.4 TEXT

FOLDER
PhotoldUpload

USB stick

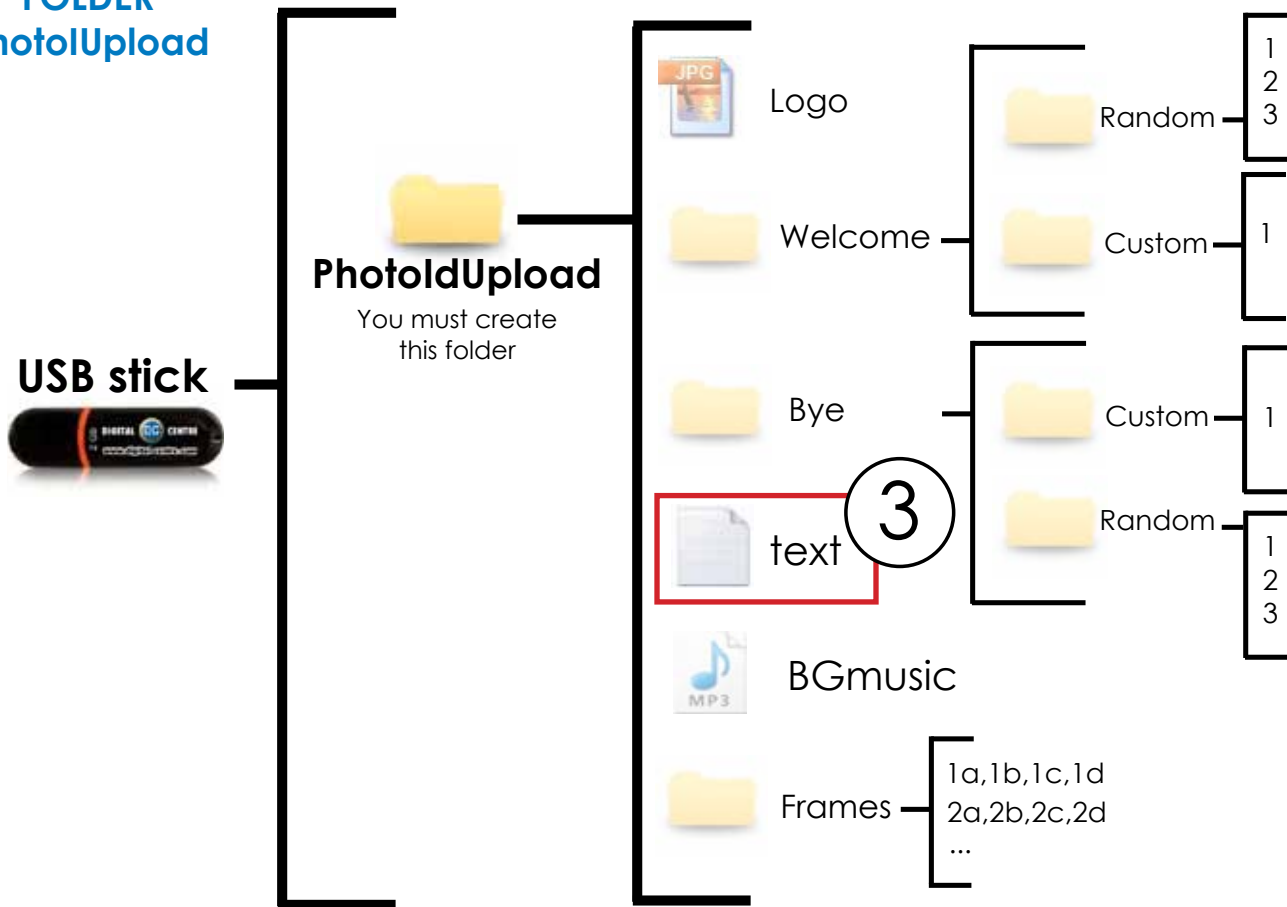


DIRECTIONS FOR UPLOADING TEXT

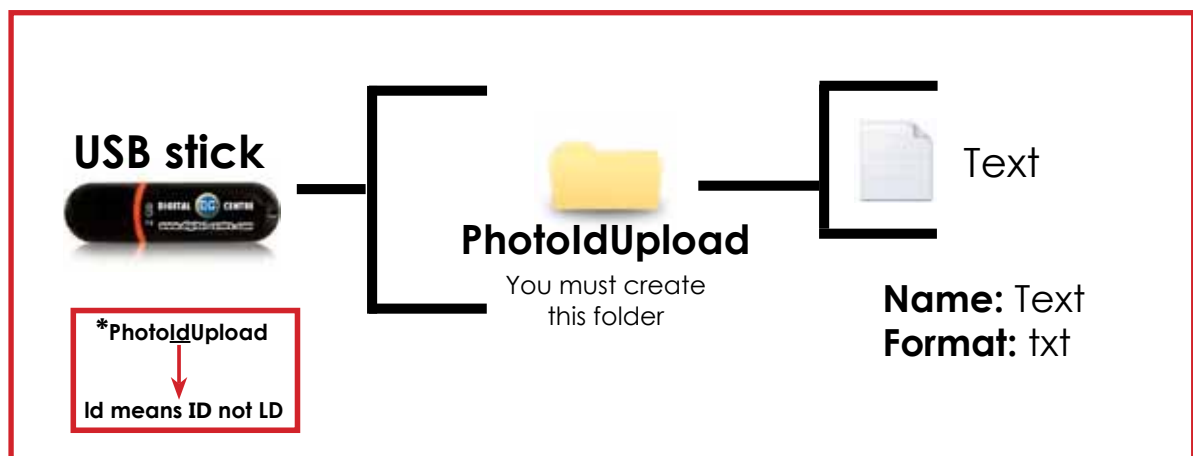

All text in this file is printed vertically on the left side of the photostrips.

Sample: Rent your Booth (888). 888. 888 →

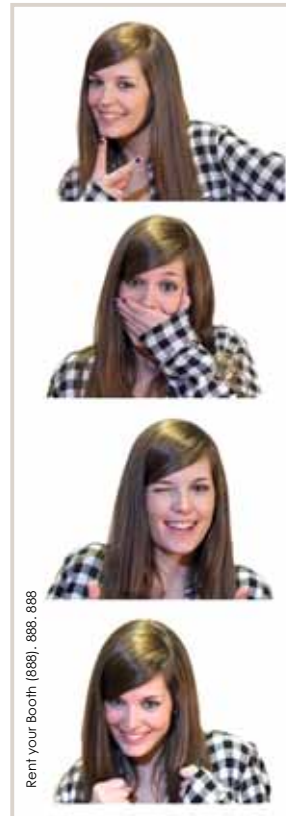

UPLOADING (See section 9)
SETUP MENU (See section 11)

A

8.5 MUSIC

FOLDER
PhotoUpload

USB stick

PhotoUpload

You must create
this folder



Logo



Welcome



bye



text



BGmusic

4



Frames

1a,1b,1c,1d
2a,2b,2c,2d
...



Random

1
2
3



Custom

1



Custom

1



Random

1
2
3

DIRECTIONS FOR UPLOADING MUSIC

USB stick



*PhotoUpload

Id means ID not LD

PhotoUpload

You must create
this folder



BGmusic

Name: BGmusic
Format: mp3


You can Upload any song to the PhotoBooth, the only thing you need to do is change the song's name to "BGmusic" and save the file into the "PhotoUpload" folder

UPLOADING (See section 9)
SETUP MENU (See section 11)

A

FOLDER PhotoUpload

8.6 FRAMES

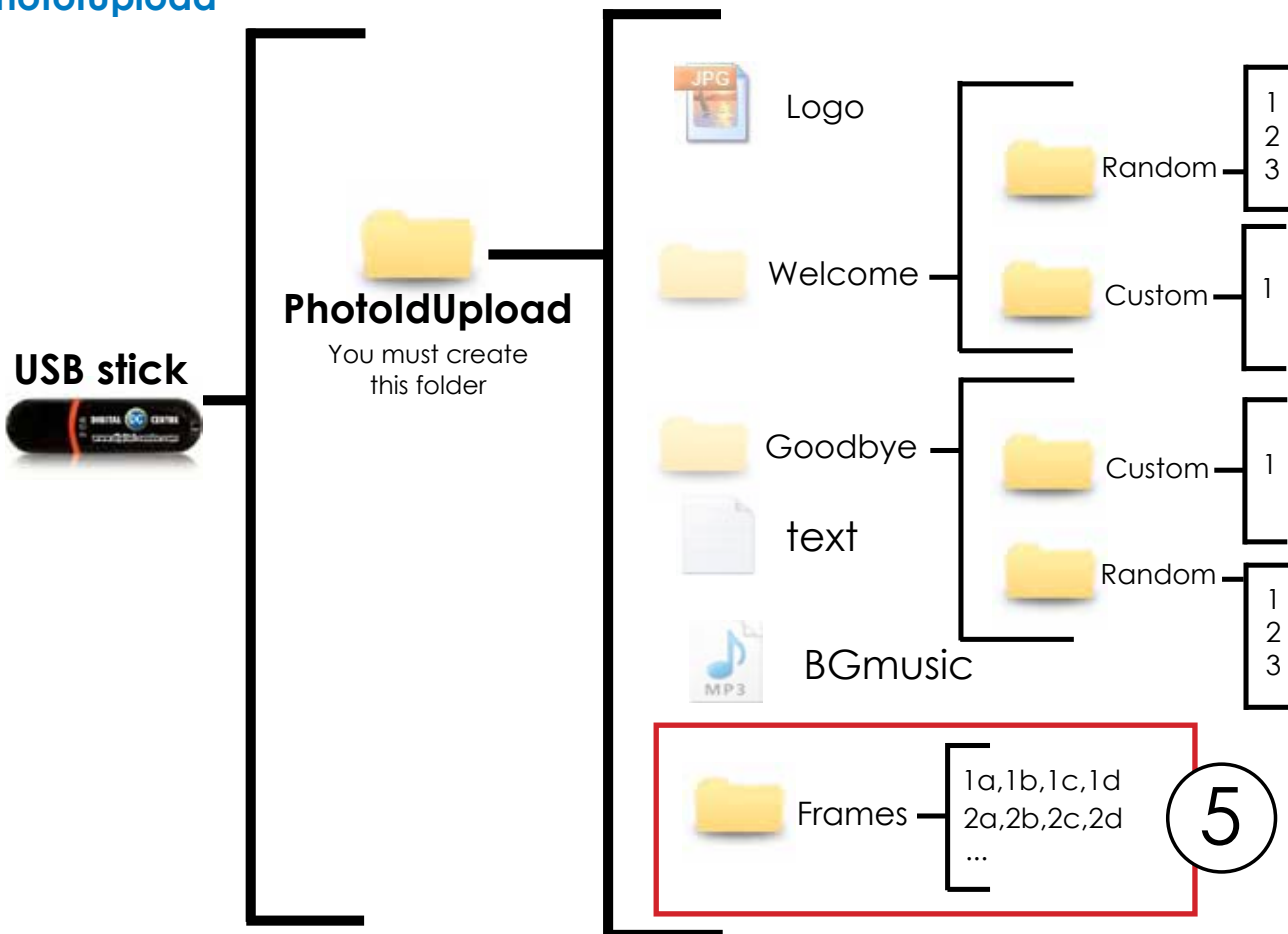

FRAMES

There are **3 screens** with frames. Each screen contains **6 groups**. That means, a total of **18 groups**. Every group of 4 frames will be printed together.

If you want to customize one group (for example number 1), you need four images (frames) 1a, 1b, 1c & 1d".

To create a new framework we will create a file with the following characteristics.




SAMPLE


Name: logo
Size: width: 800 pixels
 height: 600 pixels
Resolution: 300dpi
Extension: JPG
Color mode: RGB

It's very important to save the file of the frames only in PNG format.


Create your own customized frame. Inside of the blank area is where the camera will capture the image, and your customized frame will surround the image.

DIRECTIONS FOR UPLOADING FRAMES

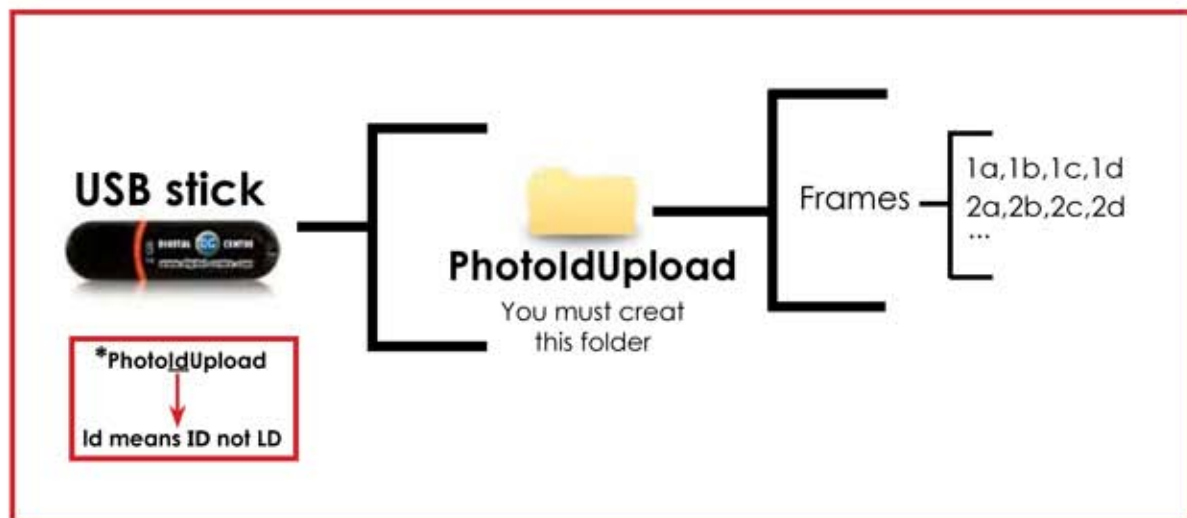

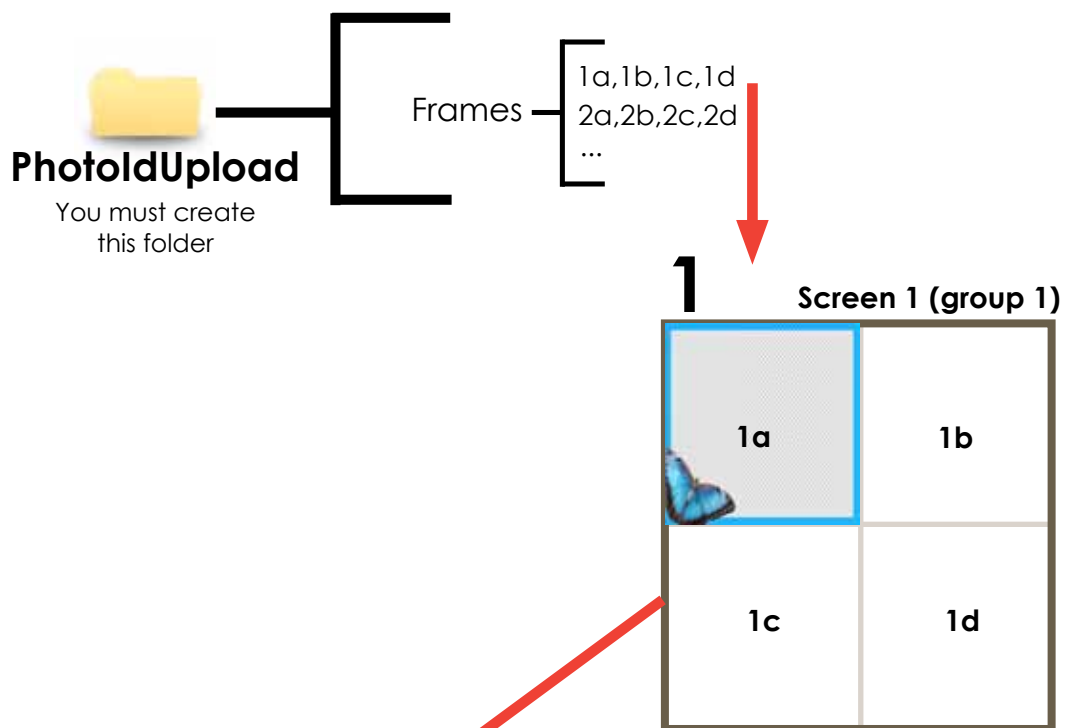

Screen1

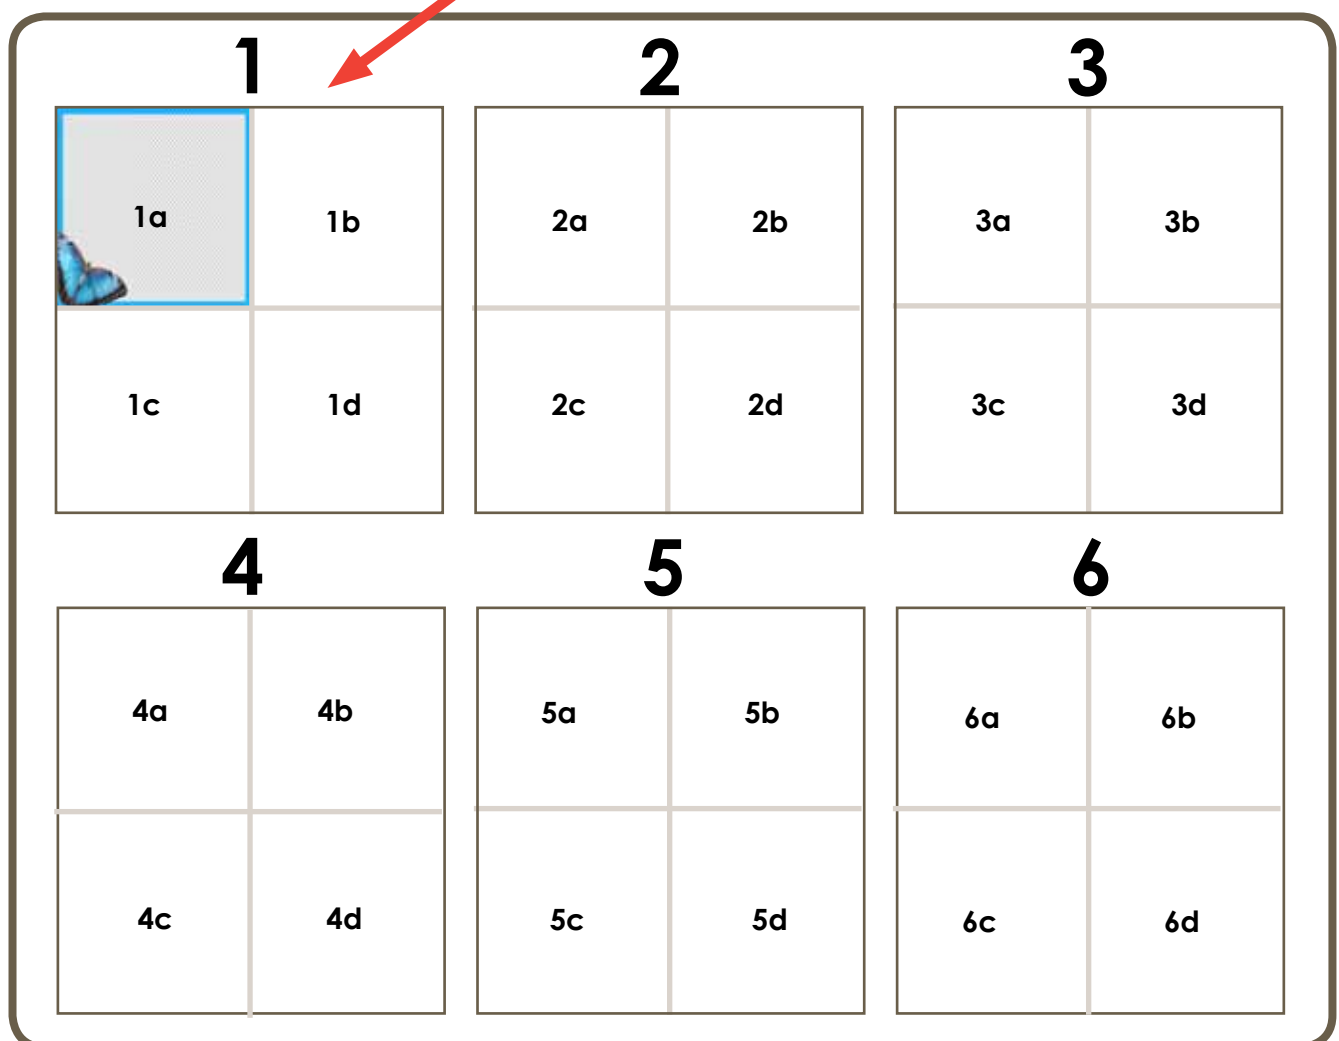

Screen2



7		8		9	
7a	7b	8a	8b	9a	9b
7c	7d	8c	8d	9c	9d
10		11		12	
10a	10b	11a	11b	12a	12b
10c	10d	11c	11d	12c	12d

Screen3

13		14		15	
13a	13b	14a	14b	15a	15b
13c	13d	14c	14d	15c	15d
16		17		18	
16a	16b	17a	17b	18a	18b
16c	16d	17c	17d	18c	18d




Sample

If you want to customize the group N°1 follow this structure.

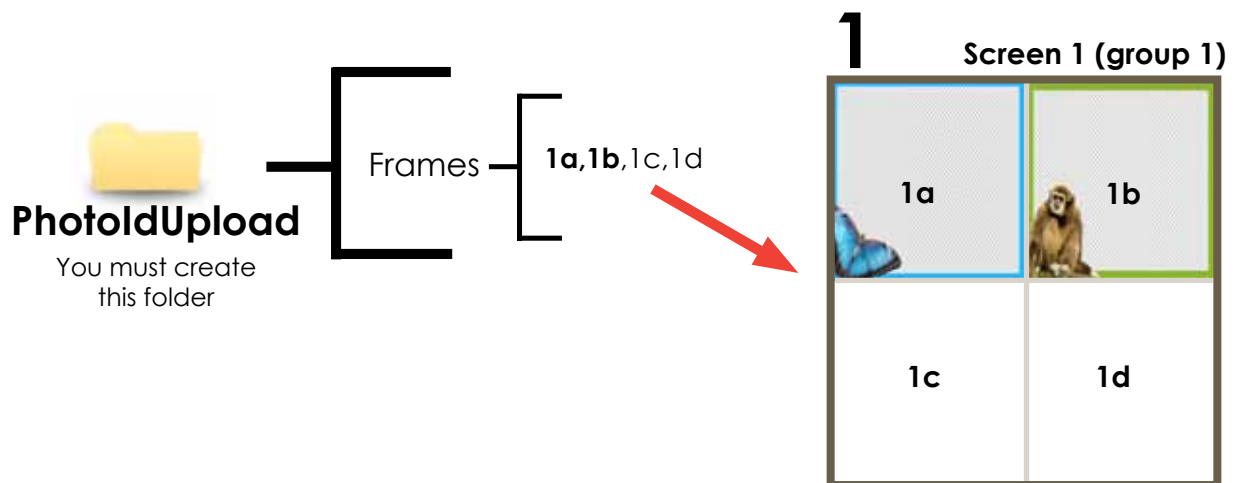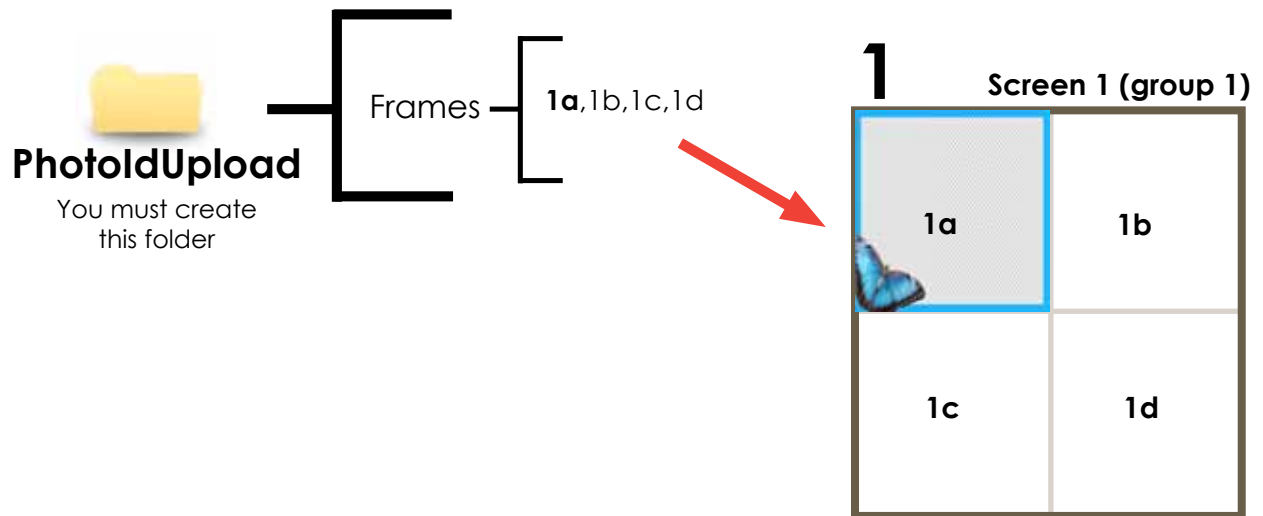

Sample


If you want to customize the groups N°1,2 & 3 follow this structure.

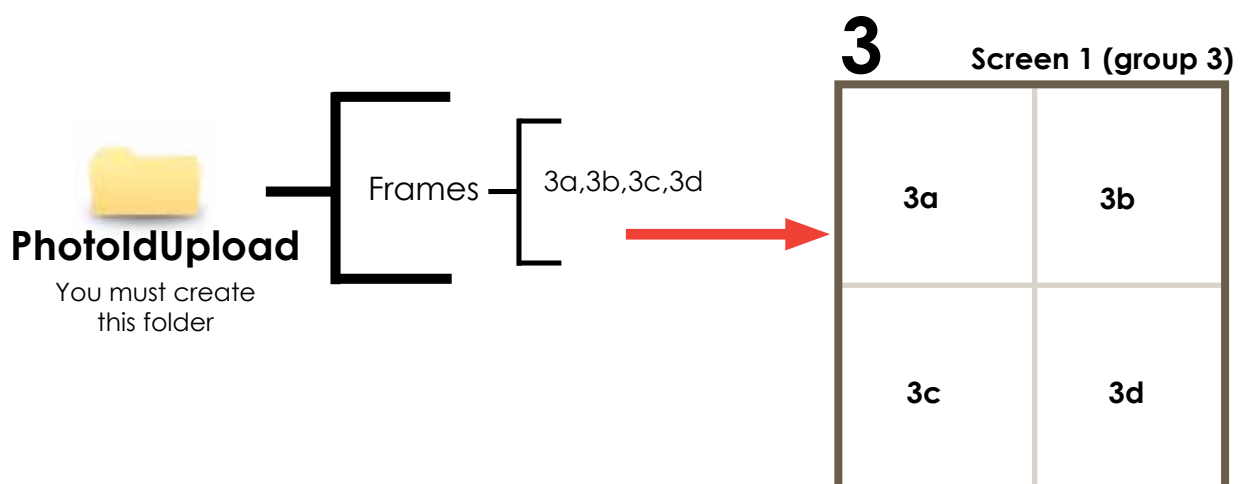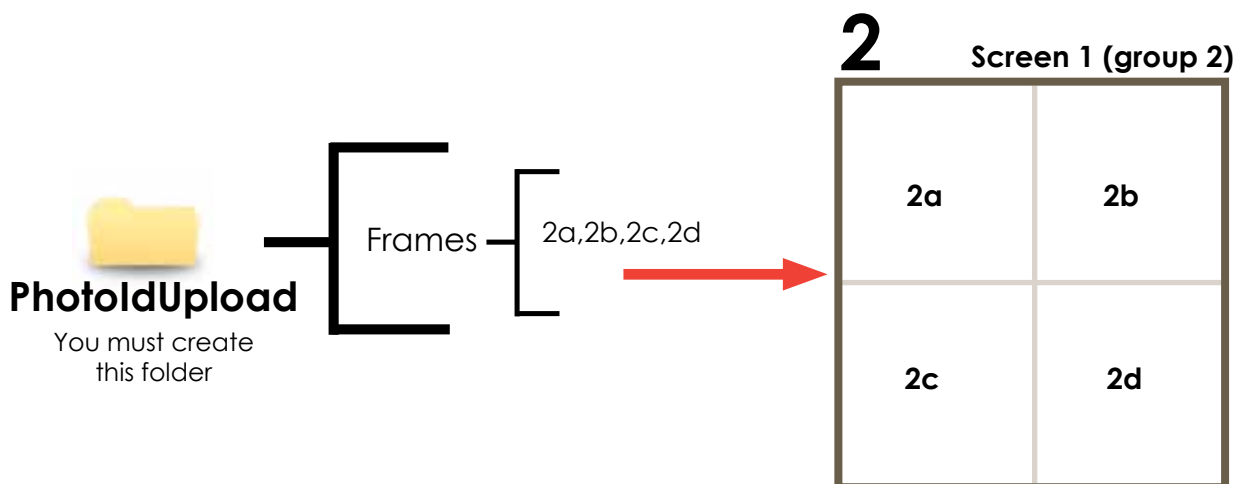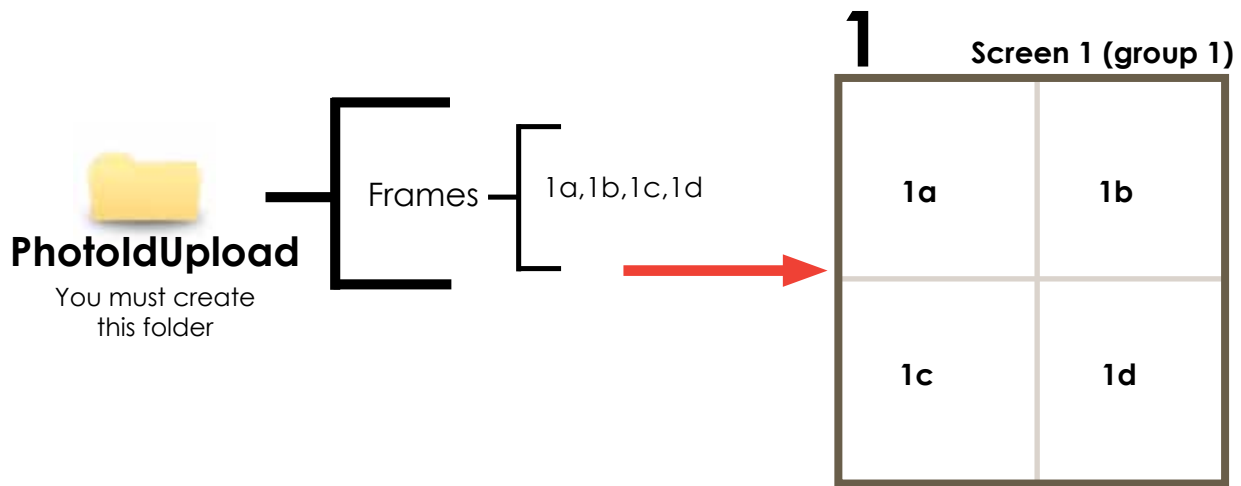


UPLOADING (See section 9)
SETUP MENU (See section 11)

8.7 ADVERTISING PHOTOS

B FOLDER PhotoldEvents

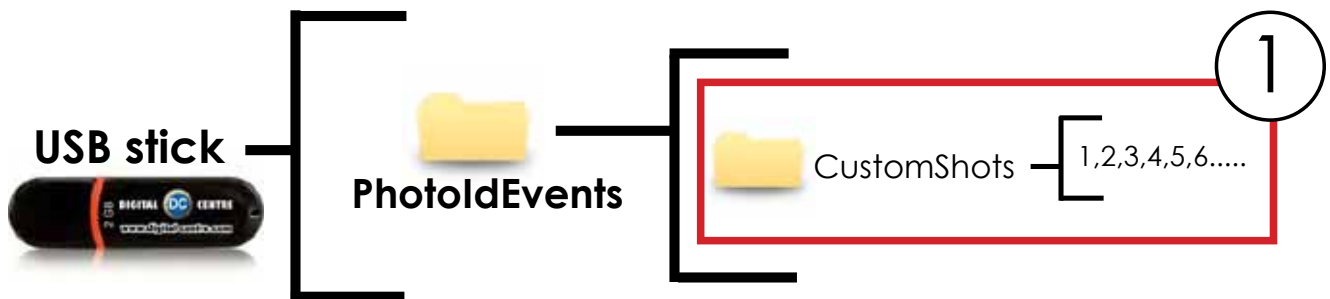

DIRECTIONS FOR UPLOADING CUSTOMSHOTS

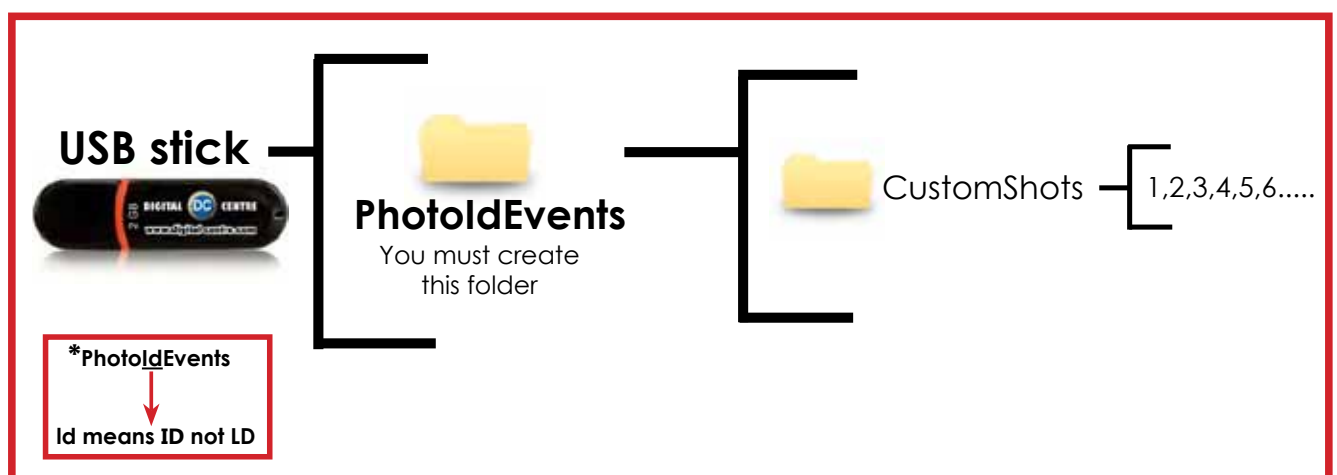

CUSTOMSHOTS are the images (made previous to the event) that we want to show on the screens during the event. An example could be for a wedding were the bride wants to show pictures from when the couple first met etc, or a company event, where they want to display brand names or products.

The CUSTOMSHOTS are shown Random during the Demonstration Mode.

Sample customshots



Specifications:

(1, 2, 3 & 4)

Each one with following characteristics:

Name: 1

Size: width: 1280 pixels
height: 960 pixels

Resolution: 72dpi

Format: JPG

- You can put as many pictures as you want.
- The names of the images have to be: 1,2,3,4,5,6,7...

UPLOADING (See section 9)
SETUP MENU (See section 11)

9-UPLOADING

PRINTER

**PC
(HP C2D)**

**USB
stick**



1-Switch ON the Photo booth

2-Open the Photo slot door*

3-Insert the USB Stick to the PC (HP C2D) (the usb connection is on the left side of the PC)

4-Open the back door of your photobooth.

5-Press the yellow button from the Service Control Panel, to access the Setup Menu.

*** You will need 1314 keys (included on your photobooth)**

6-Press the yellow button for the menu

**SERVICE
CONTROL
PANEL**




10-DOWNLOADING



FOLDER PhotoldDownload

This folder is created automatically

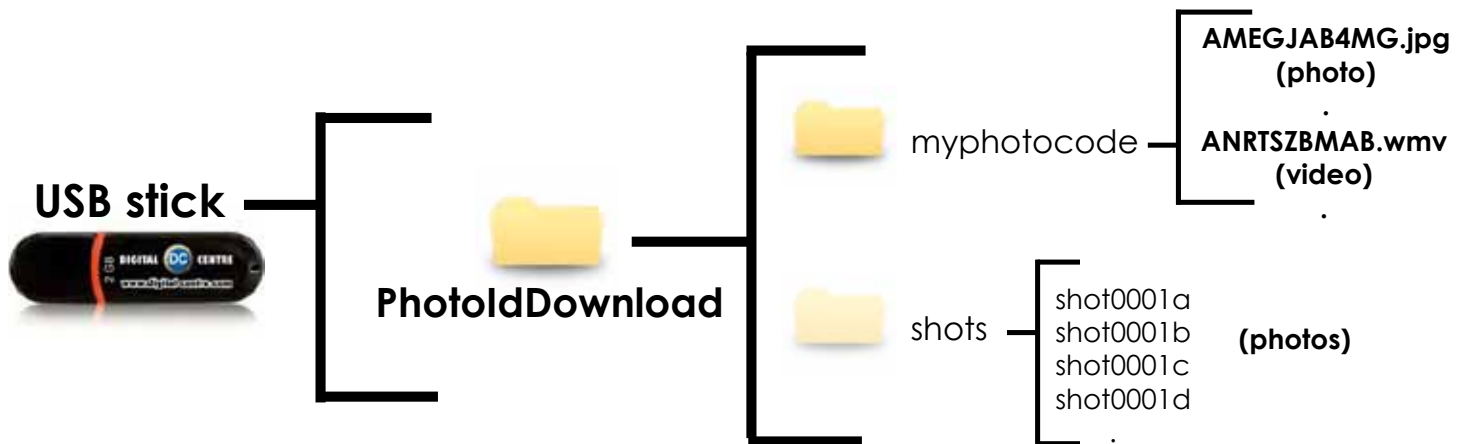

If the logo is activated, you will have 3 shots for each print, with the loaded logo printing in the fourth frame.

11-SETUP MENU

The setup menu is very useful for the owner of the Photo Booth. You can configure the Photo Booth depending on what kind of service you want to offer to your clients. You can control the timer, check the prices, adjust the camera settings or consult the accounting functions.

To go to the setup menu while the Photo Booth is in Demo Mode, press the yellow button (Menu) from the Service Control panel inside the Photo Booth.



· SETUP MENU SCREENSHOTS



CONFIGURATION

The configurable parameters are divided in 5 groups:

- Products & Prices
- Rentals
- Customize
- Options
- Camera
- Exit

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
			AVAILABLE		PRICE
PHOTO ID B/N			✓	✚	\$1 ✚
PHOTO ID COLOR			✓	✚	\$1 ✚
HAIRCUTS			✓	✚	\$1 ✚
HATS			✓	✚	\$1 ✚
STREET ART			✓	✚	\$3 ✚
GET FRAMED			✓	✚	\$1 ✚
EXTRA COPIES ✓					
CURRENCY				✚	5 ✚
COIN VALUE				✚	1 ✚

11.1 PRODUCTS & PRICES


You can set the prices of the different products.

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
			AVAILABLE		PRICE
PHOTO ID B/N			✓	✚	\$1 ✚
PHOTO ID COLOR			✓	✚	\$1 ✚
HAIRCUTS			✗	✚	\$1 ✚
HATS			✗	✚	\$1 ✚
STREET ART			✓	✚	\$3 ✚
GET FRAMED			✓	✚	\$1 ✚
EXTRA COPIES ✓					
CURRENCY				✚	5 ✚
COIN VALUE				✚	1 ✚

SWITCH ON/OFF PRODUCT

You can enable/disable the products for each event.


YES ✓ / NO ✗

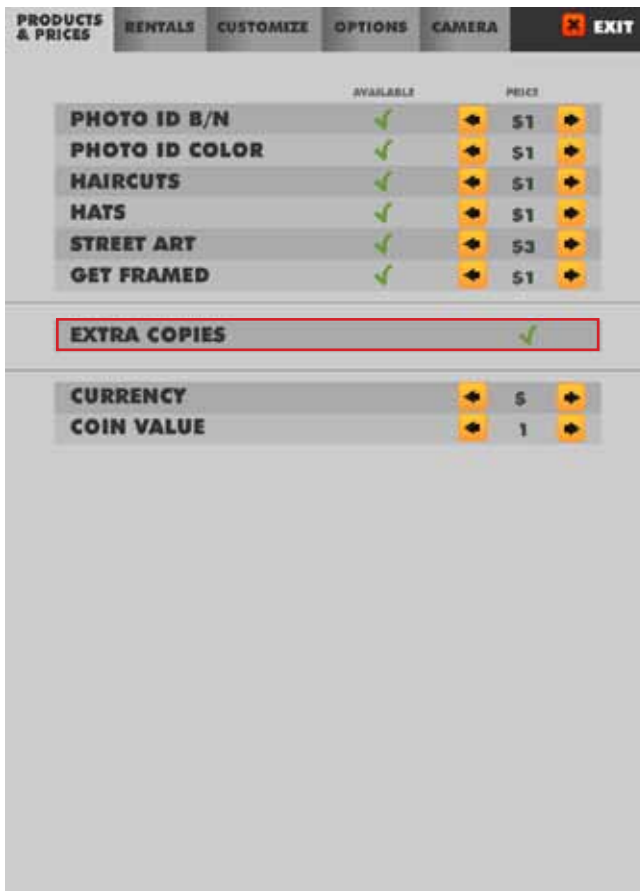

11.1.1 EXTRA COPIES

You can turn on the option for extra copies. YES ✓/NO ✗



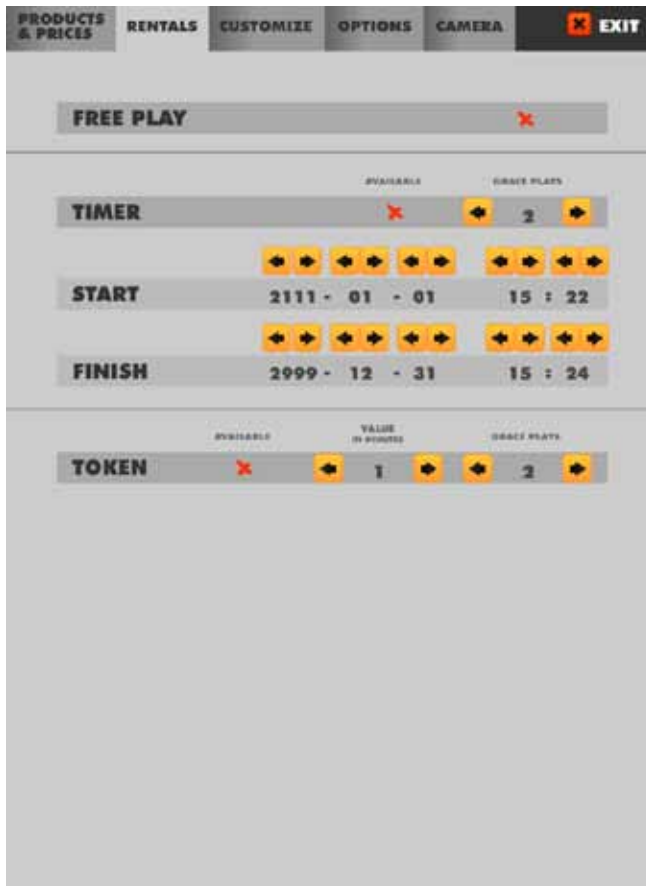

PRODUCTS & PRICES **RENTALS** **CUSTOMIZE** **OPTIONS** **CAMERA** **EXIT**

FREE PLAY ☒

TIMER ☒

START 2111 - 01 - 01 15 : 22

FINISH 2999 - 12 - 31 15 : 24

TOKEN ☒

11.2 RENTALS


Free Play: YES ✓ / NO ✗

Timer: YES ✓ / NO ✗

Start: 2012-X-X (Day) XX:XX(Hour)

Finish: 2012-X-X (Day) XX:XX(Hour)

Token: YES ✓ / NO ✗

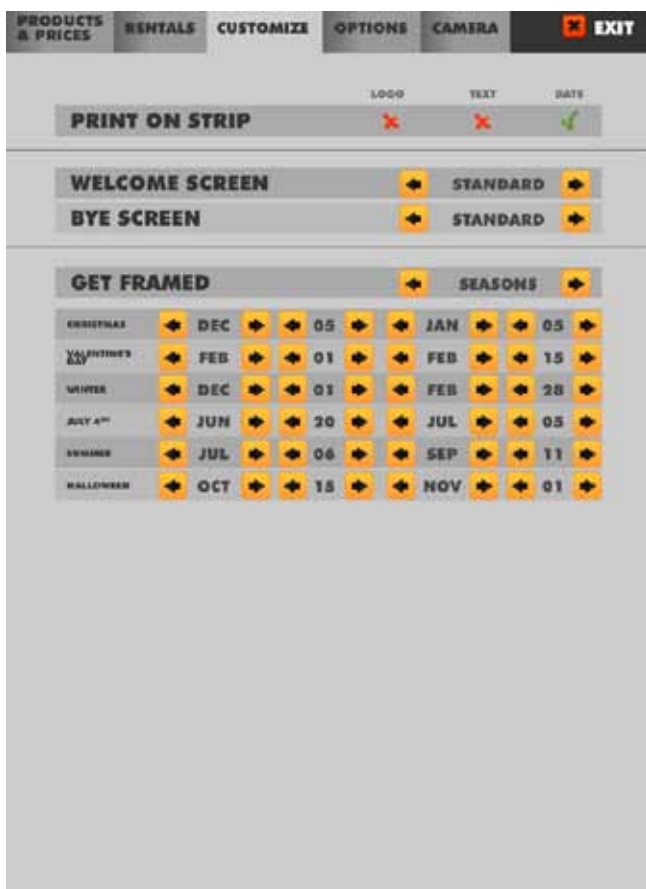

PRODUCTS & PRICES **RENTALS** **CUSTOMIZE** **OPTIONS** **CAMERA** **EXIT**

PRINT ON STRIP ☒ ☒ ☒

WELCOME SCREEN


BYE SCREEN

GET FRAMED

CHRISTMAS	←	DEC	←	05	→	JAN	←	05	→
VALENTINE'S	←	FEB	←	01	→	FEB	←	15	→
WINTER	←	DEC	←	01	→	FEB	←	28	→
JULY 4 th	←	JUN	←	20	→	JUL	←	05	→
BONNIE	←	JUL	←	06	→	SEP	←	11	→
HALLOWEEN	←	OCT	←	15	→	NOV	←	01	→


11.3 CUSTOMIZE

To set up the Logo, the Welcome and Bye screens, the Fun frames, the Print date and the Print text.

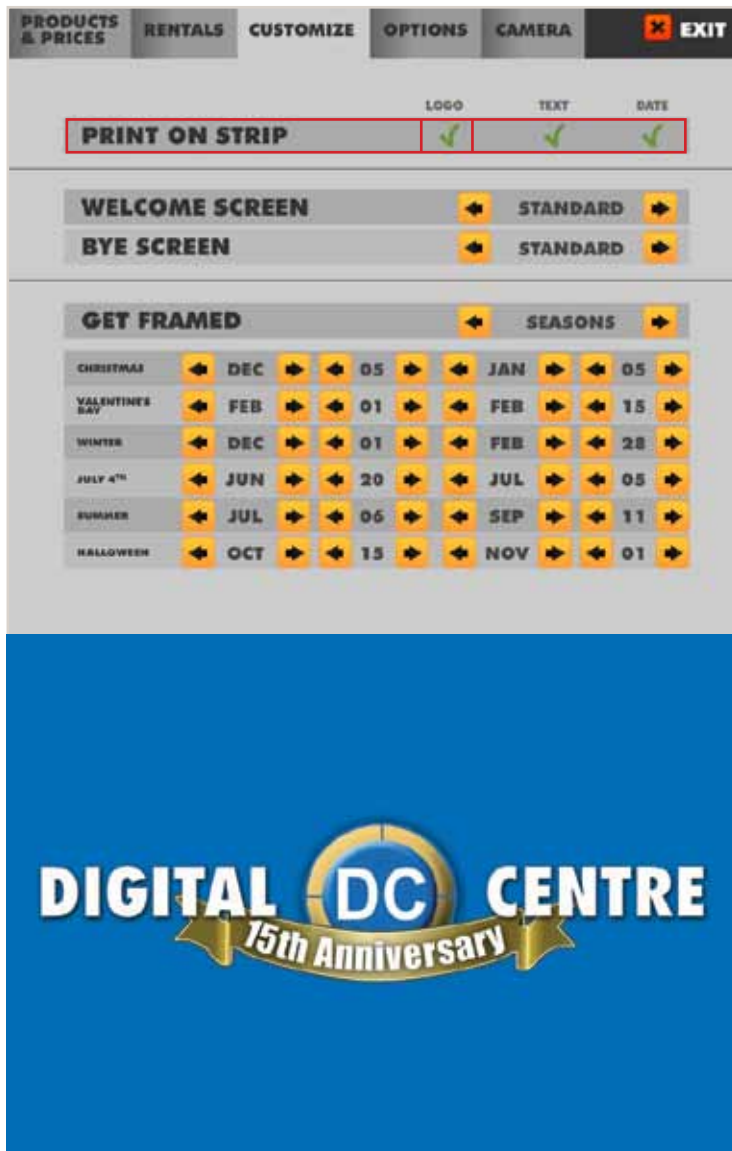

11.3.1 LOGO

1-The menu is displayed on the screen.

2-Select customize and activate the logo with  the green check mark.
(the logo will appear on the 3rd screen, if you can't see your on the 3rd screen it means that the upload is not correct.

3-Touch "X" EXIT. The Photobooth is ready to work


***It's very important that you use the exact specifications for the logo to work.**

Not working? Please refer to section 13.1 for assistance.



11.3.2 TEXT

1-The menu is displayed on the screen

2-Select customize and activate the text the  green check mark.


3-Touch "X" EXIT.

The Photobooth is ready to work



11.3.3 DATE

1-The menu is displayed on the screen

2-Select customize and activate the text the  green check mark.

3-Touch "X" EXIT.

The Photobooth is ready to work

11.3.4 WELCOME/BYE


- 1-The menu is displayed on the screen
- 2-Enter to the customized menu and select welcome/ Bye screen and CUSTOM
- 3-Touch "X" EXIT. The Photobooth is ready to work

WELCOME SCREEN

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
<div> <div>PRINT ON STRIP</div> <div>LOGO TEXT DATE</div> <div>✓ ✓ ✓</div> </div>					
<div> <div>WELCOME SCREEN</div> <div>← CUSTOM →</div> </div>					
<div> <div>BYE SCREEN</div> <div>← CUSTOM →</div> </div>					
<div> <div>GET FRAMED</div> <div>← SEASONS →</div> </div>					
CHRISTMAS	← DEC →	← 05 →	← JAN →	← 05 →	
VALENTINE'S DAY	← FEB →	← 01 →	← FEB →	← 15 →	
WINTER	← DEC →	← 01 →	← FEB →	← 28 →	
JULY 4 TH	← JUN →	← 20 →	← JUL →	← 05 →	
SUMMER	← JUL →	← 06 →	← SEP →	← 11 →	
HALLOWEEN	← OCT →	← 15 →	← NOV →	← 01 →	

BYE SCREEN

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
<div> <div>PRINT ON STRIP</div> <div>LOGO TEXT DATE</div> <div>✓ ✓ ✓</div> </div>					
<div> <div>WELCOME SCREEN</div> <div>← CUSTOM →</div> </div>					
<div> <div>BYE SCREEN</div> <div>← CUSTOM →</div> </div>					
<div> <div>GET FRAMED</div> <div>← SEASONS →</div> </div>					
CHRISTMAS	← DEC →	← 05 →	← JAN →	← 05 →	
VALENTINE'S DAY	← FEB →	← 01 →	← FEB →	← 15 →	
WINTER	← DEC →	← 01 →	← FEB →	← 28 →	
JULY 4 TH	← JUN →	← 20 →	← JUL →	← 05 →	
SUMMER	← JUL →	← 06 →	← SEP →	← 11 →	
HALLOWEEN	← OCT →	← 15 →	← NOV →	← 01 →	

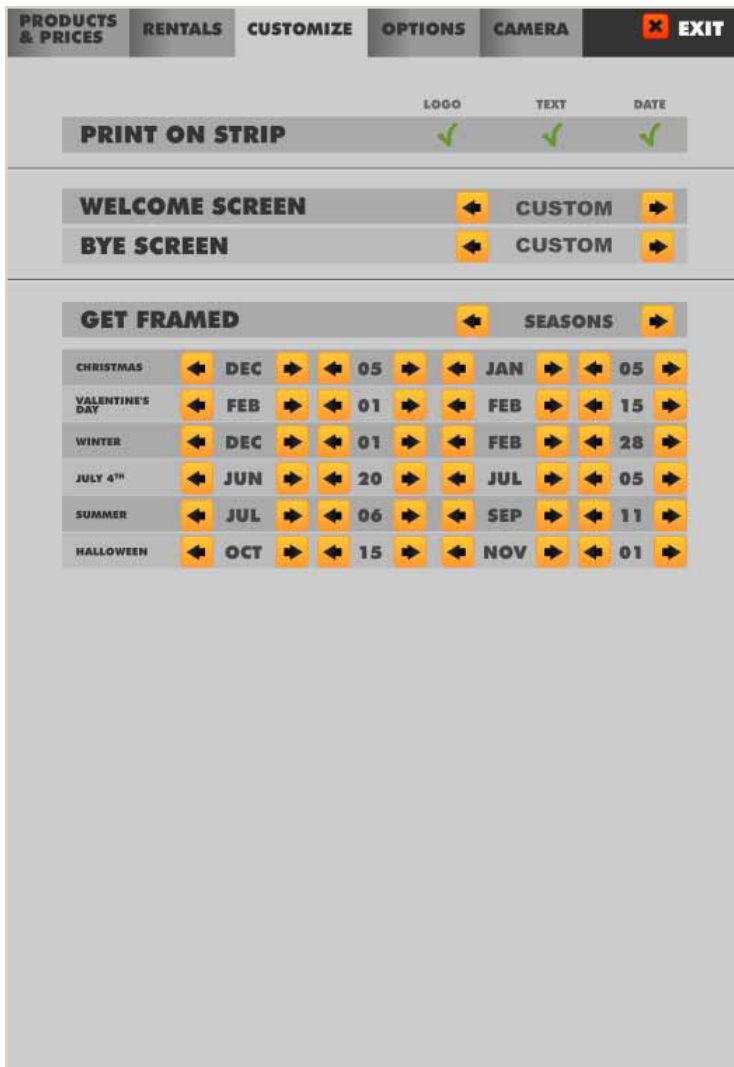

11.3.5 FRAMES

1-The menu is displayed on the screen

2-Enter to the customized menu and select GET FRAMES and CUSTOM

3-Touch "X" EXIT. The Photobooth is ready to work

11.4 OPTIONS

Defines the parameters for some available features:

Current Time: 2012-X-X (Day) XX:XX(Hour)

Music on intro: YES ✓/NO ✗

Show events shots: Screen savers of photos already loaded by you. YES /NO

Internet: Upload the session shots to internet, Facebook and email (IMPORTANT: must be configured). YES ✓/NO ✗



Video message: Select this option to record a video (IMPORTANT: Internet must be activated). YES ✓/NO ✗


Touch screen Calibrate: Press twice the yellow button to access to the Setup Menu. Automatically the menu is opened to calibrate the touch screen.

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
<div> <div>← →</div> <div>← →</div> <div>← →</div> <div>← →</div> </div>					
CURRENT TIME 2012- 04 - 11 16 : 19					
MUSIC ON INTRO					✓
SHOW EVENT SHOTS					✓
INTERNET					✓
SECONDS					
VIDEO MESSAGE					✓ <div> <div>←</div> <div>15</div> <div>→</div> </div>
TOUCH SCREEN					CALIBRATE

Calibrate

To calibrate the touch screen touch the points on the screen.

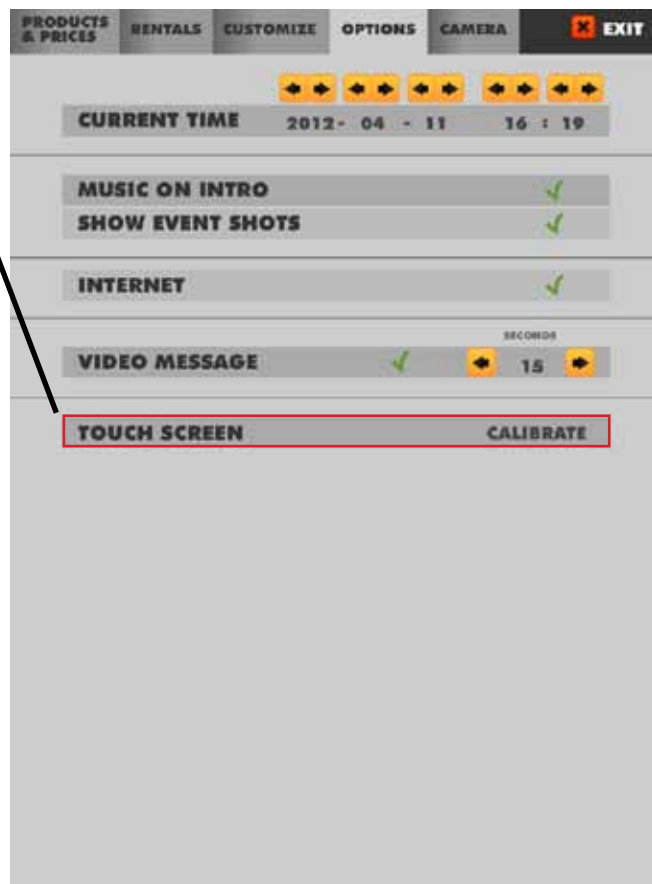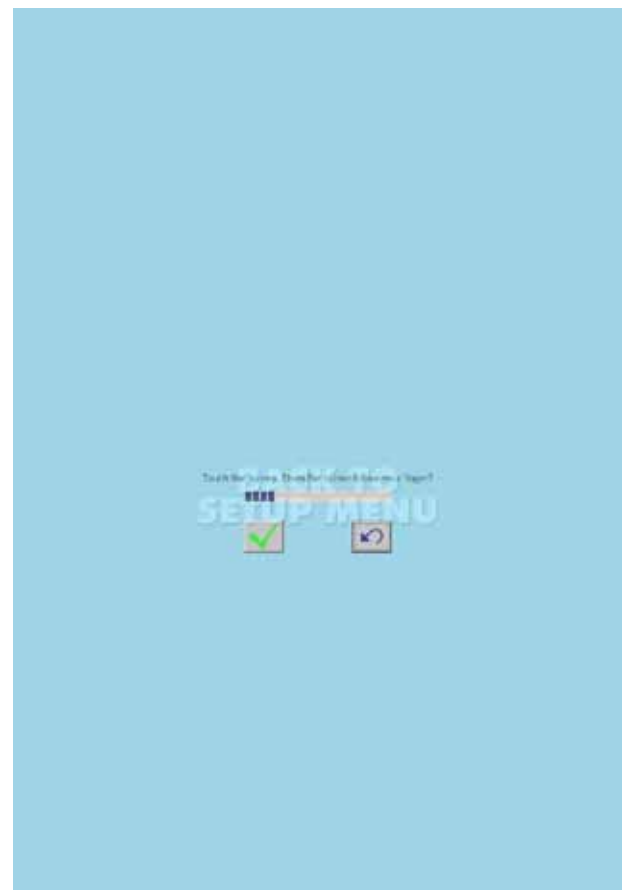

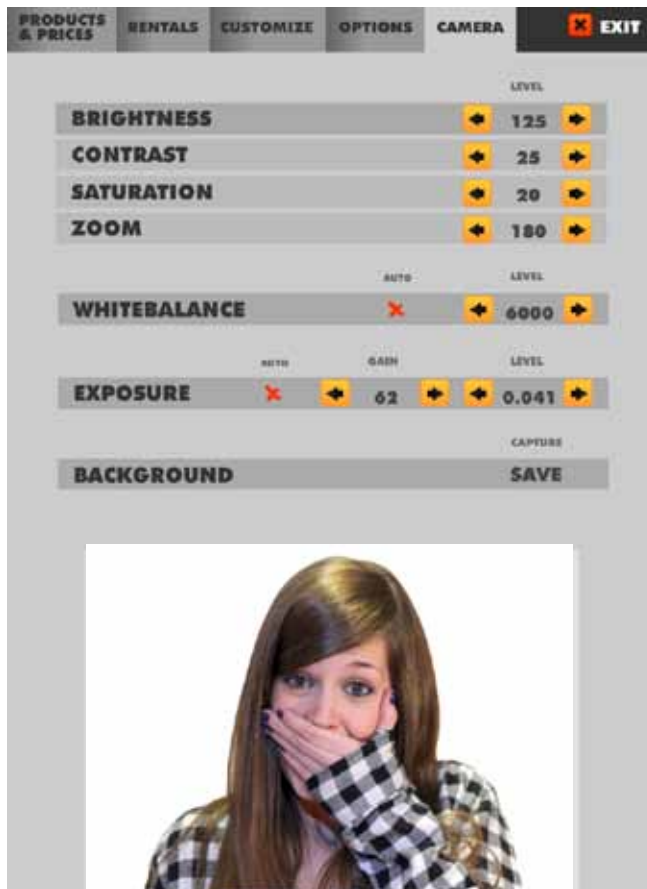

11.5 CAMERA

In the submenu CAMERA, the owner can set the camera zoom position and brightness.

12-INTERNET

12.1 PLAYER.GET YOUR PICTURE

Instructions on how to post pictures on Facebook, send emails, or watch a video.

1.You can find a code on the left of your photo.

2.Use this code on the web page,
www.myphotocode.com


MEGT4DDYPT



www.myphotocode.com



3. A screen will appear where you can select the option that you want;
- Send an email.
 - Watch a video.
 - Post a picture on Facebook.

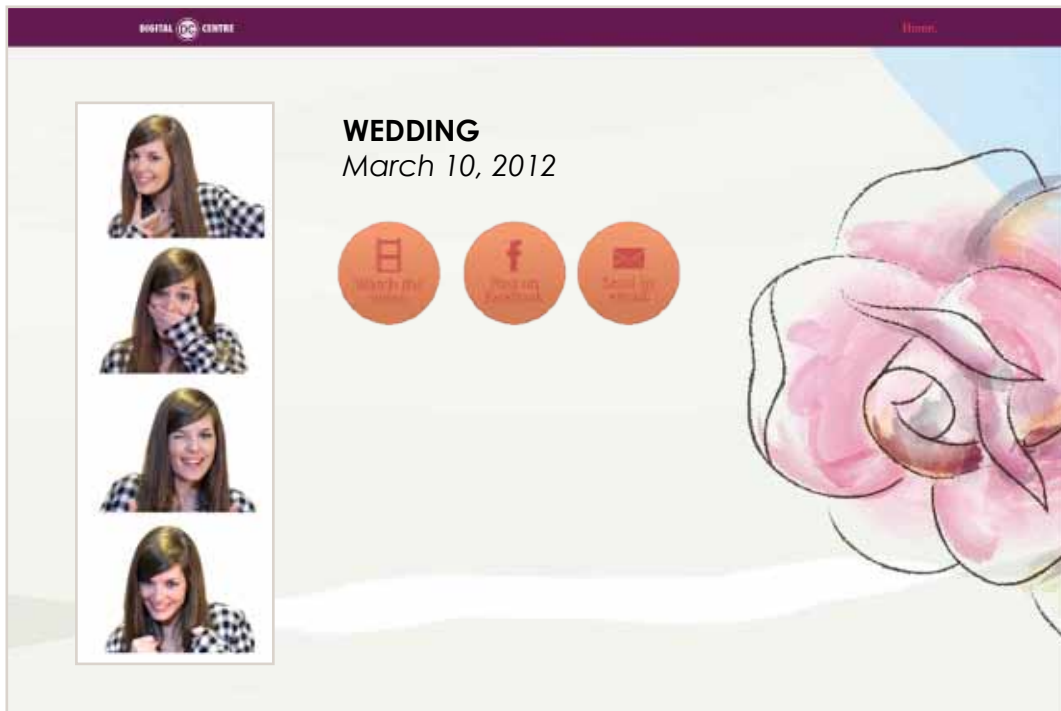

12.2 OWNER. PREPARE USB-STICK/EVENT

Do you want to customize logo, welcome, bye, text and music?
Send an email to myphotocode@dc-image.com

You will receive your username and password to **www.myphotocode.com**





A

Prepare your USB

Manage your next event:
Customize for your next event the following things:

- **Choose the photobooth model where the USB will be plugged in.**
- **Upload your logo**
- **Upload your text (will be printed on a side of each print)**
- **Upload the Background music (played during the game)**
- **Customize your frames**
- **Customize Welcome screen**
- **Customize Bye Screen**
- **Customize the top screen banner and the images on demo screen. *Strip photo booth only**

B

Event

Create a new event:
On this site you can create and manage your events.
Allow your costumers to share the photos on a personal website specially created for the occasion.

Manage your event schedule and customize your photobooth for each event.

- **Type the event name**
- **Select the dates. You can do a single day event or multi-day event**
- **Customize the background of myphotocode.com**
- **Choose who can view the photo shots – everybody or just the owners of the photos**

(More information See section 16)

13-TROUBLESHOOTING

· GENERAL PROBLEMS

Problem

The unit switch is ON, but the it does not turn on

Causes

The unit is not plugged in.
The voltage is incorrect.
Overload: the fuse over the electric socket has been blown.

Solutions

Check if the unit is correctly connected to the electric ground.
Check if the electric ground is receiving electricity.
Be sure that the voltage is correct.
Change the fuse.

Problem

The fluorescent does not light

Causes

The fluorescent lights have been blown.
The transformer has been blown.

Solutions

Replace the fluorescent lights (see above).
Replace the transformer

· MONITOR'S PROBLEMS

Problem

The monitor image looks darker or lighter

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.

Problem

The monitor image moves up and down

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.

· SOUND PROBLEMS

Problem

The sound does not work

Causes

The volume is not correct.
The configuration menu has the sound set to OFF.

Solutions

Adjust the volume with the control placed below the test, free-play and start buttons.
Change the sound configuration from the test menu (black button).

· PRINTER PROBLEMS

Problem

The printer does not print any photos

Causes

The printer is disconnected.
The printer is out of ink or paper.
The paper or the ink sheet was not properly installed.
Incorrect paper.
USB/ LPT Dallas Chip position is incorrect.

Solutions

Switch on the printer.
Call the person in charge
Correctly place the paper and the ink.
Use only CK9550-DC type paper.

Problem

The printer does not switch on

Causes

The printer is disconnected.
The printer does not receive electric supply.

Solutions

Connect the printer.
Be sure that the cable is correctly connected.

Problem

It prints one or more white lines

Causes

Thermal head is broken.

Solutions

Replace thermal head.

· PC PROBLEMS

Problem

Install a brand new Control Board with Atmel and jumpers.

Causes

This problem is due a hardware malfunction.
Check the green Capture Board, as it is probably out or half way in.

Solutions

Turn OFF the PC.
Take out the Capture Board. And put it again (all the way in).
Screw hard and check again that it is all the way in, and did not move little out during screwing.
Turn ON the PB and check it.

• **WARNING**

- If you have any doubts or any problems with the unit and the way it is performing, call a technician to solve the problem.
- Devices such as the printer or the camera are very fragile and must be used carefully.

Printer	Cleaning. Check configuration.	Monthly
Glasses	Cleaning.	Weekly.
Control Panel	Check the functioning of all buttons	Monthly
Lights	Check the functioning of all the lights and the fluorescent light.	Monthly
Sound	Check the sound.	Monthly
Coin Acceptor Bill Acceptor	Clean and check the correct functioning	Annually
Interior	Cleaning	Annually
Exterior	Cleaning	Weekly

13.1 UPLOADING THE LOGO


PROBLEMS UPLOADING THE LOGO:

Possible causes:

- 1-USB STICK is damaged
- 2-The logo specifications/characteristics are not correct

1-USB is damaged

- Let's make a test to see if it works at the computer.
- Plug the USB STICK at the front of the PC (HP C2D), and go to Set Up Menu. Then exit the Menu.
- Take a picture by choosing the product you want.
- After the game, Remove the USB STICK.
- Plug the USB STICK in your PC or LapTop.
- Check if the USB STICK contents the **PhotoldDownload** folder.
- It should be 2 folders into the PhotoldDownload and your picture should be there.
- If your picture is not there, the USB STICK is not working properly.

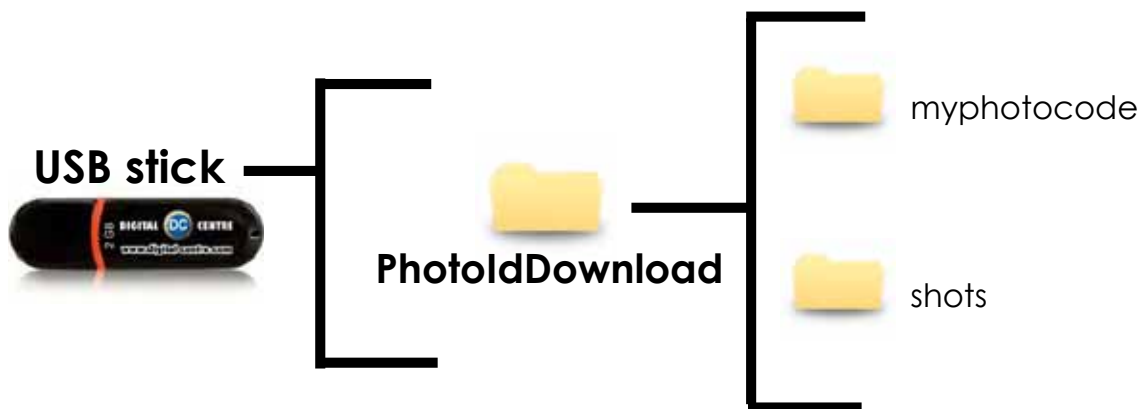

It's recommended to use a USB drive with LED and 2GB of space.





2-The logo specifications/characteristics are not correct

- Plug the USB Stick in your PC or Laptop.
- Locate the logo, Placed on the logo and click the right button on your computer mouse to open properties.
- The properties should be as follows.



Click the right button

- Check the logo specifications

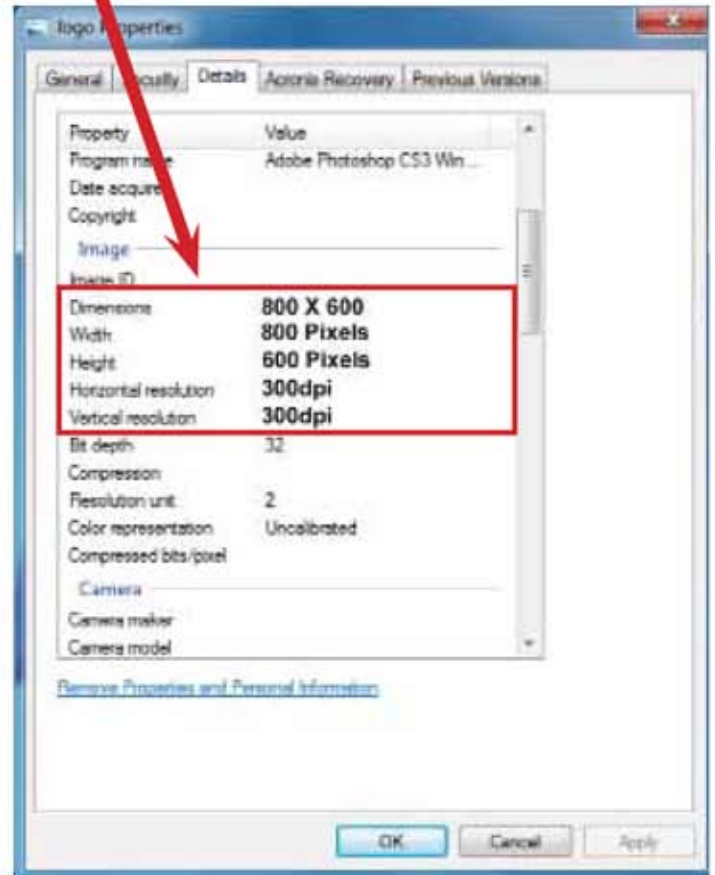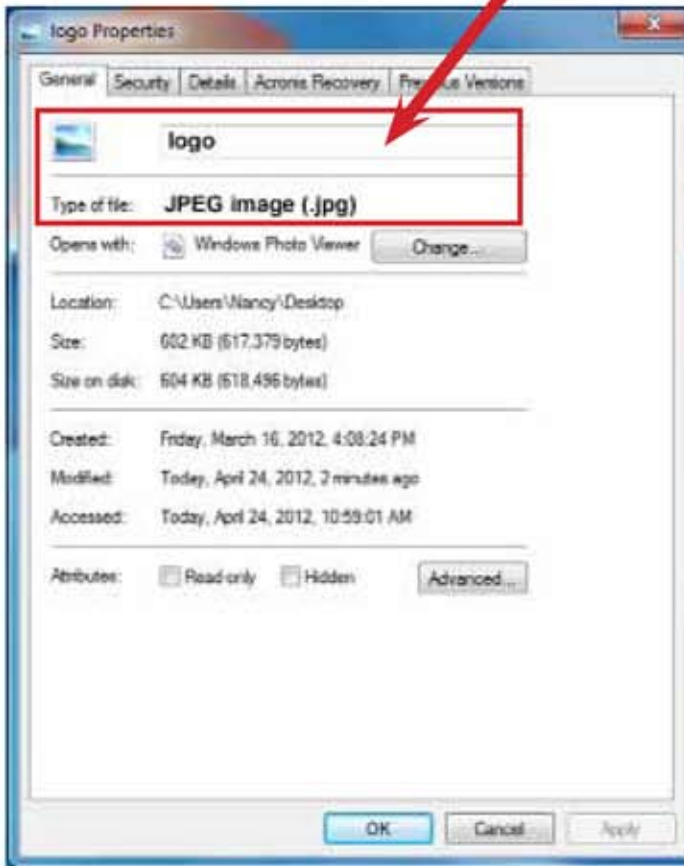

Logo specifications:

Name: logo
Size: width: 800 pixels
 height: 600 pixels
Resolution: 300dpi
Extension: JPG
Color mode: RGB



LOGO

Name: Logo
~~**Name:**
 NOT LOGO JPG~~

If it doesn't working, consult a professional designer to assist in changing the logo.

ADVANCED USERS:

Use the following web site for suggestions; <http://www.webresizer.com/>


13.2 HARD DRIVE

HARD DRIVE ERROR

This procedure is to check if the BIOS settings are correct for an Automatic BOOT-DVD.

WARNING!!! This procedure is very dangerous and could cause a PC Malfunction. Please read it carefully and follow all steps one by one.

- 1 · Plug in a Keyboard to the PC.
- 2 · Turn ON the PC (or the whole Photo Booth).
- 3 · When the ASRock screen appears, press "F10" several times until the "BIOS SETUP UTILITY" appears on the screen. If it does not come up, and the software continues uploading, then go back to the Step 2.

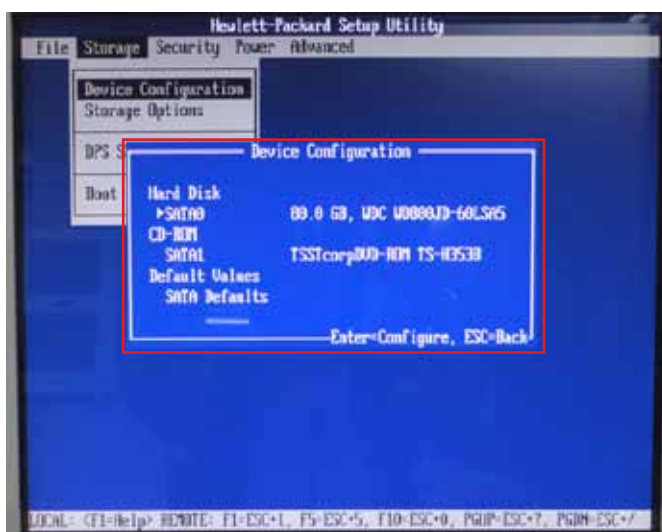

- 4 · With the Keyboard arrows, move up to the Storage Menu, here we are going to check the following thing:


- Device Configuration (step 5)
- Boot Order (step 6)

5 • Once you are inside the “**DEVICE Configuration**” please check the following points:

- “Hard disk” should be connected at SATA0
- “CD-ROM” should be connected at SATA1

If everything is OK, press ESC to return the Main menu.


If Hard disk or CD-ROM or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8

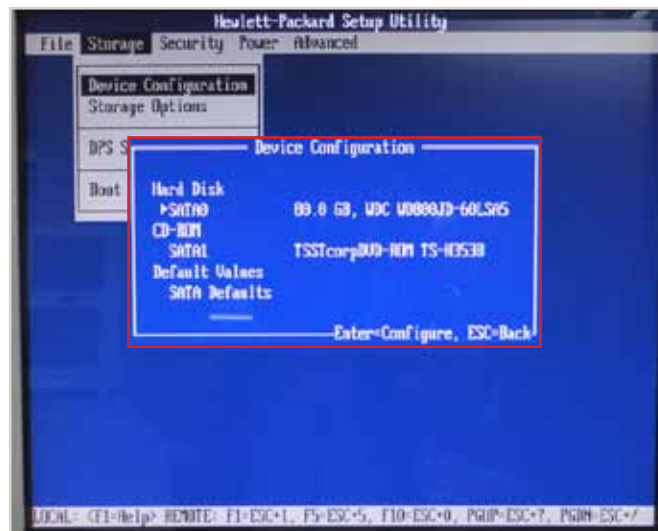

6 • Once you are inside the “**Boot Order**” please check the following points:

- “ATAPI CD-ROM”
- “Hard Drive”

If ATAPI CD-ROM or Hard Drive or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8

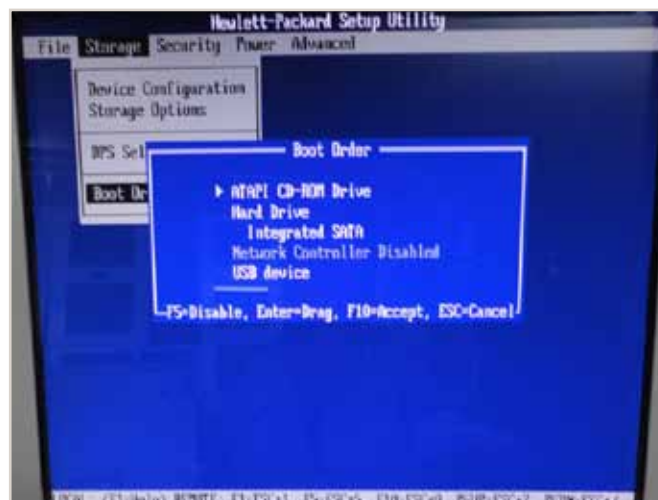

7· With the Keyboard arrows, move right to the Advanced Menu here we are going to check the following thing:

- Select Power-On Option and confirm that the “After Power Loss” is ON




8· Unplug the PC from the power.



9· Open the top cover (there are 2 screws in the top back side of the PC)

10· Check connections as follows:

Please pull up the green arrows from the DVD ROM and from the Power supply and check the connection as it shows in the following pictures.

IF The Hard Disk is SATA + DVD SATA it will be like this:

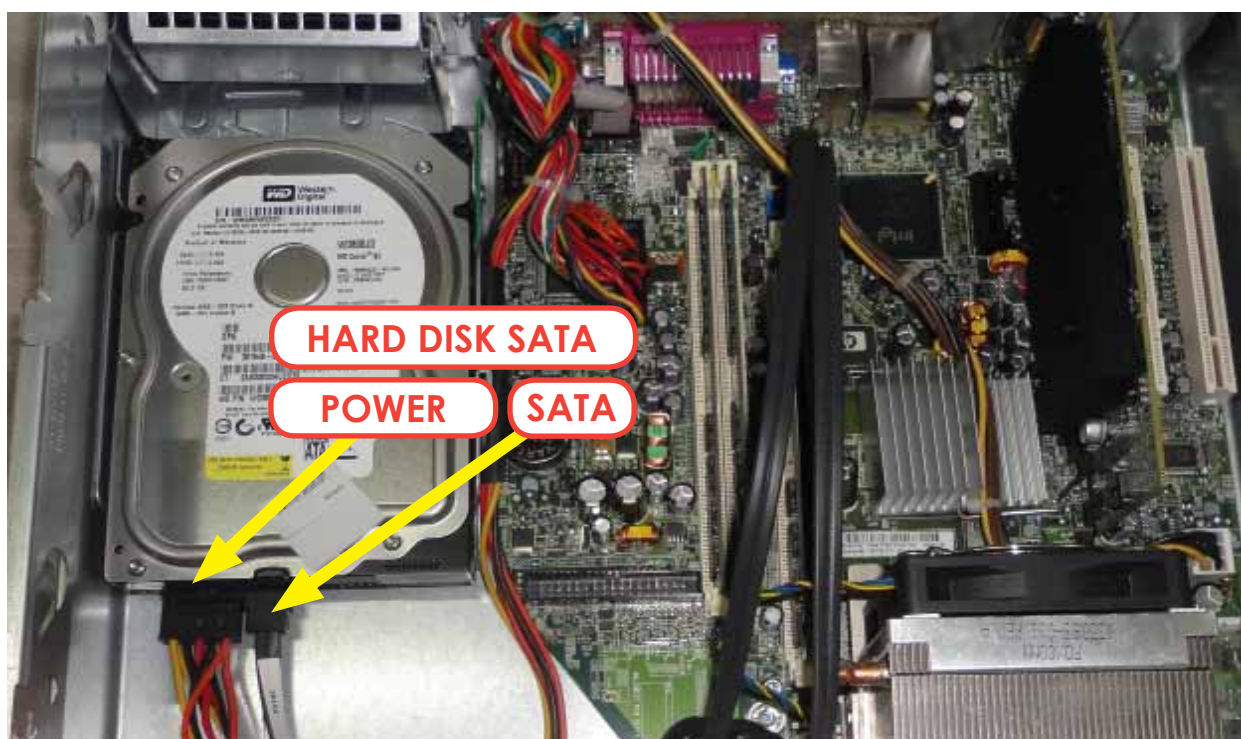

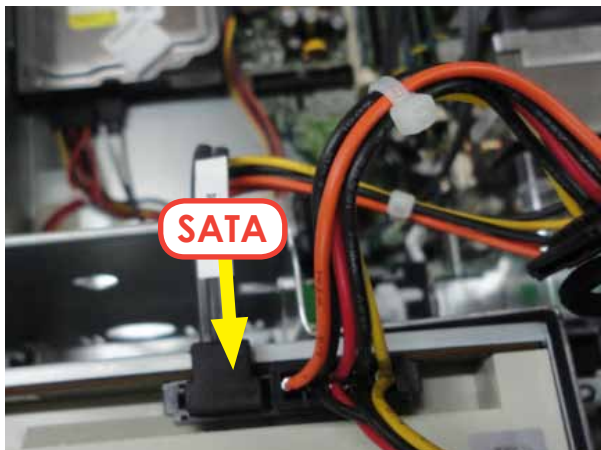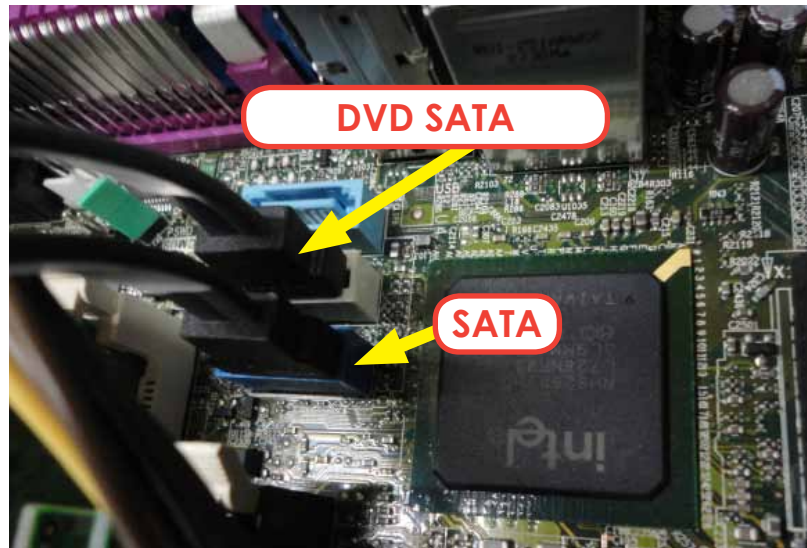

11 • If all connections are fine (as it appears in the pictures), then it is possible that the component, which is not detected at the "IDE CONFIGURATION" Menu, is physically damaged. Please contact Digital Centre for a new part.

13.3 BOOT DVD

To Update the Machine or change the software version, please follow these steps:

- 1 · Open the DVD Driver.
 - 2 · Insert the "Boot DVD".
 - 3 · Plug Off the Machine.
 - 4 · Plug On the Machine after 10 seconds.
 - 5 · Wait while the restore program reinstalls the software (a progress bar appears on the screen).
The time process is about 30 minutes
 - 6 · A black screen appears when the process finishes.
 - 7 · Extract the DVD disk.
 - 8 · Plug Off the Machine.
 - 9 · Plug On the Machine after 10 seconds.
- (In case that the Restore Program does not start automatically and shows the message "Extract the dvd" immediately, then go to the "Run the Restore Program Manually" (At the end of this Manual).


CUSTOMIZED FRAMES:

If you have customized frames and/or logos now is the time to upload.

- 1 · Install the "Customized Frames DVD" into the DVD driver (CD or USB too).
 - 2 · Turn off the Machine.
 - 3 · Turn on the Machine after 10 seconds.
 - 4 · When the software is working in Demo, then go into the SETUP MENU, by pressing the Yellow button at the Setup Control Panel. It will read the customized frames and/or logos automatically before the software start.
 - 5 · Be sure to select LOGO=YES and the correct frames and Wait for the Setup Menu save all changes. (Wait for the "Shut Down Please" message on the screen).
 - 6 · When the software runs in Demo again, you can extract the DVD, CD or USB, and keep it to a safe place.
- The NEW FRAMES are now working; you can go to Setup Menu and adjust the Date at the correct position.

13.4 DONGLE ERROR

If you switch on the Photo booth and the following message appears; "Sentinel HASP key not found (H0007)", it means that the printer dongle is not well connected. The USB dongle must be connected on P.7 (please see picture).

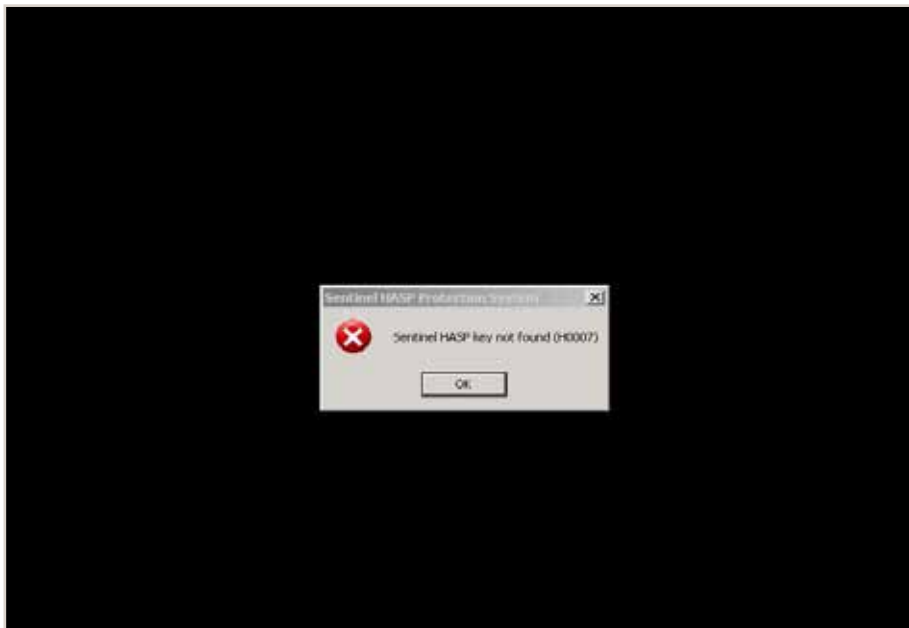


P.7 P.7 USB Extension
AM / AF From Dongle
to PC.
(180 cm - Inch 70,87)



P.7 USB Extension AM / AF From Dongle to PC.
(180 cm - Inch 70,87)

13.5 CAMERA ERROR

 When you take a picture and your screen appears black please check the USB connection from the camera. The USB must be connected on P.10 (please see picture).



P.10 USB Extension AM / AF From Camera to PC.
(180 cm - Inch 70,87)

13.6 TOUCH SCREEN ERROR

If the power card is properly plugged then the LED is green.



If the power card is properly plugged then the LED is blue.



13.7 PRINTER ERROR



Problem

When you take a picture and see this message Error "INVALID PRINTER" on the screen

Error number 0:

- The printer is disconnected.
- Look at the PIN of the correct printer.



Error number 2:

- The printer must be Digital centre



Error number 3:

- The paper or the ink sheet was not properly installed.



Error number 4:

- The printer Dongle is disconnected.

The "Please Wait" error is very common. It looks like the PC freezes, but it isn't. The problem is that the computer is waiting for the right components.


When we turn on the Photo Booth, the computer shows the "Please Wait" screen while it checks the Control Board, the USB adapter and the Printer. If any of the components are not ok, the software doesn't go ON.

So, when we face this problem we have to check the 3 components. The procedure is as Follows:

1 · Check the Printer lights ON. Should be ON the following lights "POWER" and "READY". If any other light, please fix it and Turn OFF and ON the Photo Booth.



2 · Check the Printer Connections. Power and USB, just 2 wires.

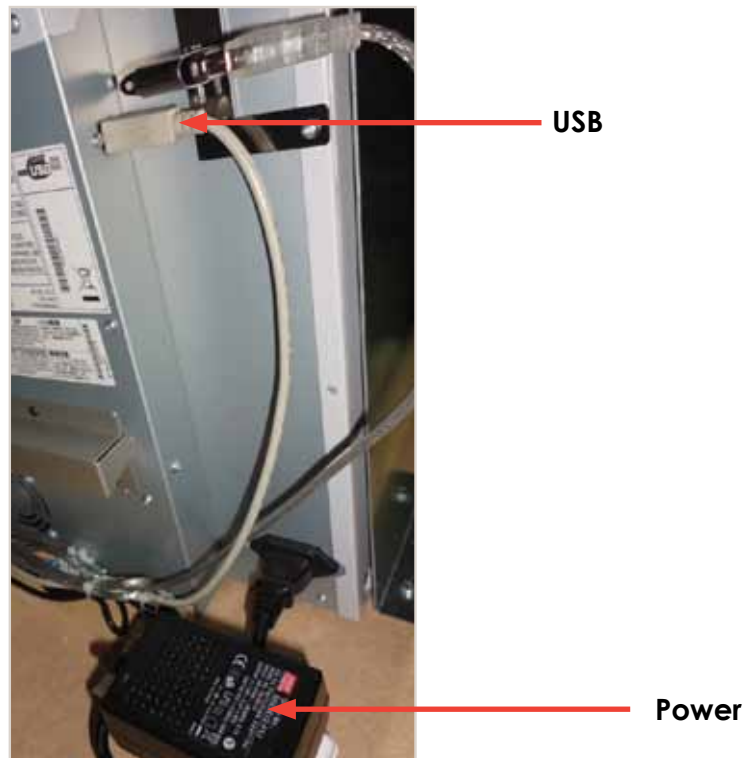

3 · Check the Control Board Serial Connection. (That is the common problem Point). (attached 2 pictures: Correct and Error "Please Wait"). This connection is very easy to lose during transport, or when we work at that area.

13.8 NO SIGNAL



Lights are ON

Check if the PC lights are ON.

If the lights are on then it appears that the Photobooth is working but the monitor is not.

Next steps:

When you turn ON the Photobooth, can you see any message on the screen?

(ex; manufacturer name, or "NO SIGNAL")?

If this is the case, the VGA cable is probably unplugged or damaged.

But if nothing is on the screen (when you turn ON the Photobooth), please check if there is power to the Monitor. Power cable is probably unplugged from the monitor.

13.9 CONTROL BOARD ERROR


The control Board is the green board located behind the PC. It doesn't mean that the Control Board is bad; it could mean that the PC could not connect with the Control Board (because the Serial cable is not correctly connected).

Check following points:

- 1 · Check the Control Board Serial Connection "P.2". (That is the common problem point). (attach 2 pictures: Correct and Error "Please Wait"). This connection is very easy to lose during transport, or when you work at that area.
- 2 · If all connections are good, then check that the Control Board Red LED is ON.
- 3 · If all the 2 points are OK, but still doesn't work, please send the Control Board to Digital Centre (contact the Support Team before sending)

P.2

P.2 Serial Cable From
to PC to Control Board.
(56 cm - Inch 22,04)

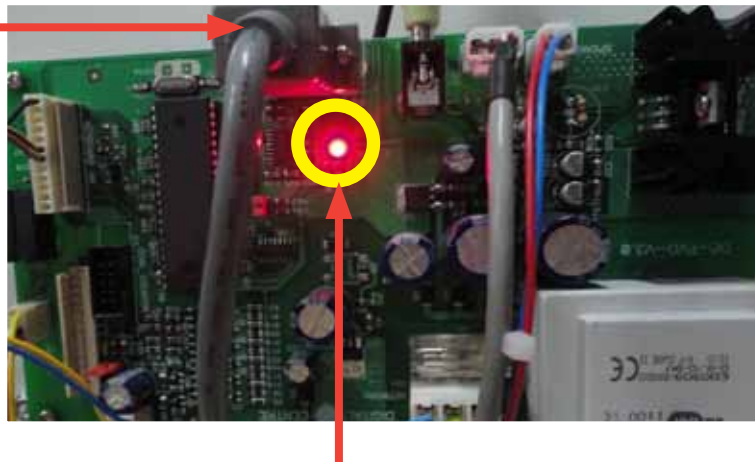


Red LED is ON



P.2 Serial Cable From to PC to Control Board. (56 cm - Inch 22,04)

14-CHARACTERISTICS

14.1 CONTROL BOARD DIAGRAMS

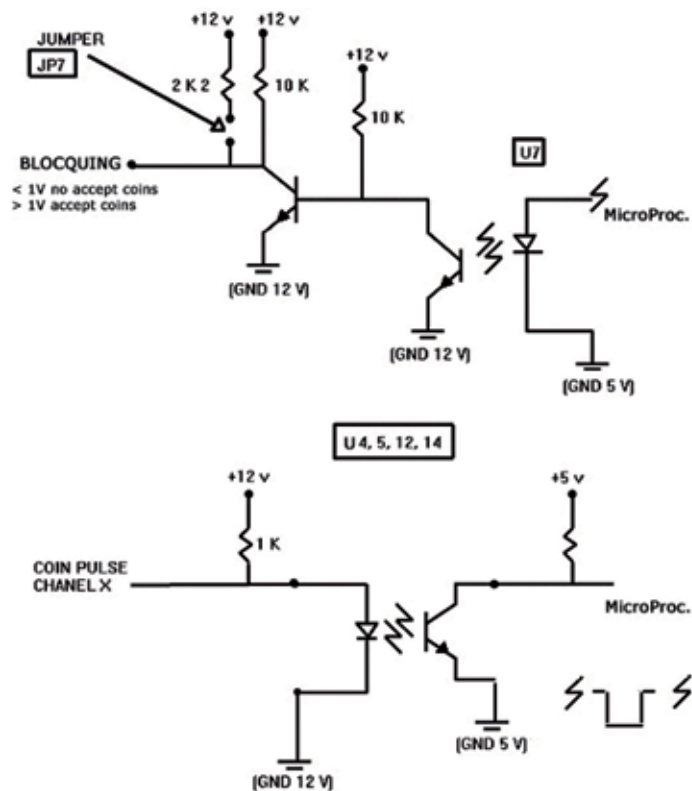

DON'T JOIN GND 12v WITH GND 5v !!!


PIN NUMBER	SIGNAL	REMARKS
1	GND	
2	12V	
3,4,5	N.C.	
6	BLOCQUING	U7 PUT THIS TO >= 3v WHEN THE PROGRAM LETS YOU TO USE COINS. MINOR THAN 1v WHEN MC
7	COIN PULSE CHANEL 1	U12 PULSE TIME DURATION > 50 msc
8	COIN PULSE CHANEL 2	U4 THE PROGRAM DOESN'T USE IT
9	COIN PULSE CHANEL 3	U14 THE PROGRAM DOESN'T USE IT
10	COIN PULSE CHANEL 4	U5 THE PROGRAM DOESN'T USE IT

14.2 DECALS

You can use images of 300 dpi to personalize the decals if needed.
Save in a JPG format.

The size cm (for EUR) inch (for USA) for each one must be:

- 1-(DE3301) DECAL. PNG BK #1 Back Wall (74,3x172,5 cm - Inch 29,13x67,72)
- 2-(DE3302) DECAL. PNG BK #2 Bottom Left Lateral Door (Photo Slot)
(34,3x23 cm - Inch 13,38x9,05)
- 3-(DE3303) DECAL. PNG BK #3 Top Right Lateral (42,2x117,5 cm - Inch 42,2x46,06)
- 4-(DE3304) DECAL. PNG BK #4 Top Left Lateral (42,2x117,5 cm - Inch 42,2x46,06)
- 5-(DE3305) DECAL. PNG BK #5 Top Front Door (63,5x117,5 cm - Inch 24,8x46,06)
- 6-(DE3306) DECAL. PNG BK #6 Bottom Front Door (63,5x49,3 cm - Inch 24,8x19,29)
- 7-(DE3307) DECAL. PNG BK #7 Instructions (69,5x11,7 cm - Inch 27,17x4,33)
- 8-(DE3308) DECAL. PNG BK #8 Insert Money (25x15 cm - Inch 9,84x19,29)
- 9-(DE3309) DECAL. PNG BK #9 Bottom Right Lateral (42,2x51,5 cm - Inch 16,53x20,08)
- 10-(DE3310) DECAL. PNG BK #10 Top & Camera (59,5x29,5 cm - Inch 27,16x11,42)

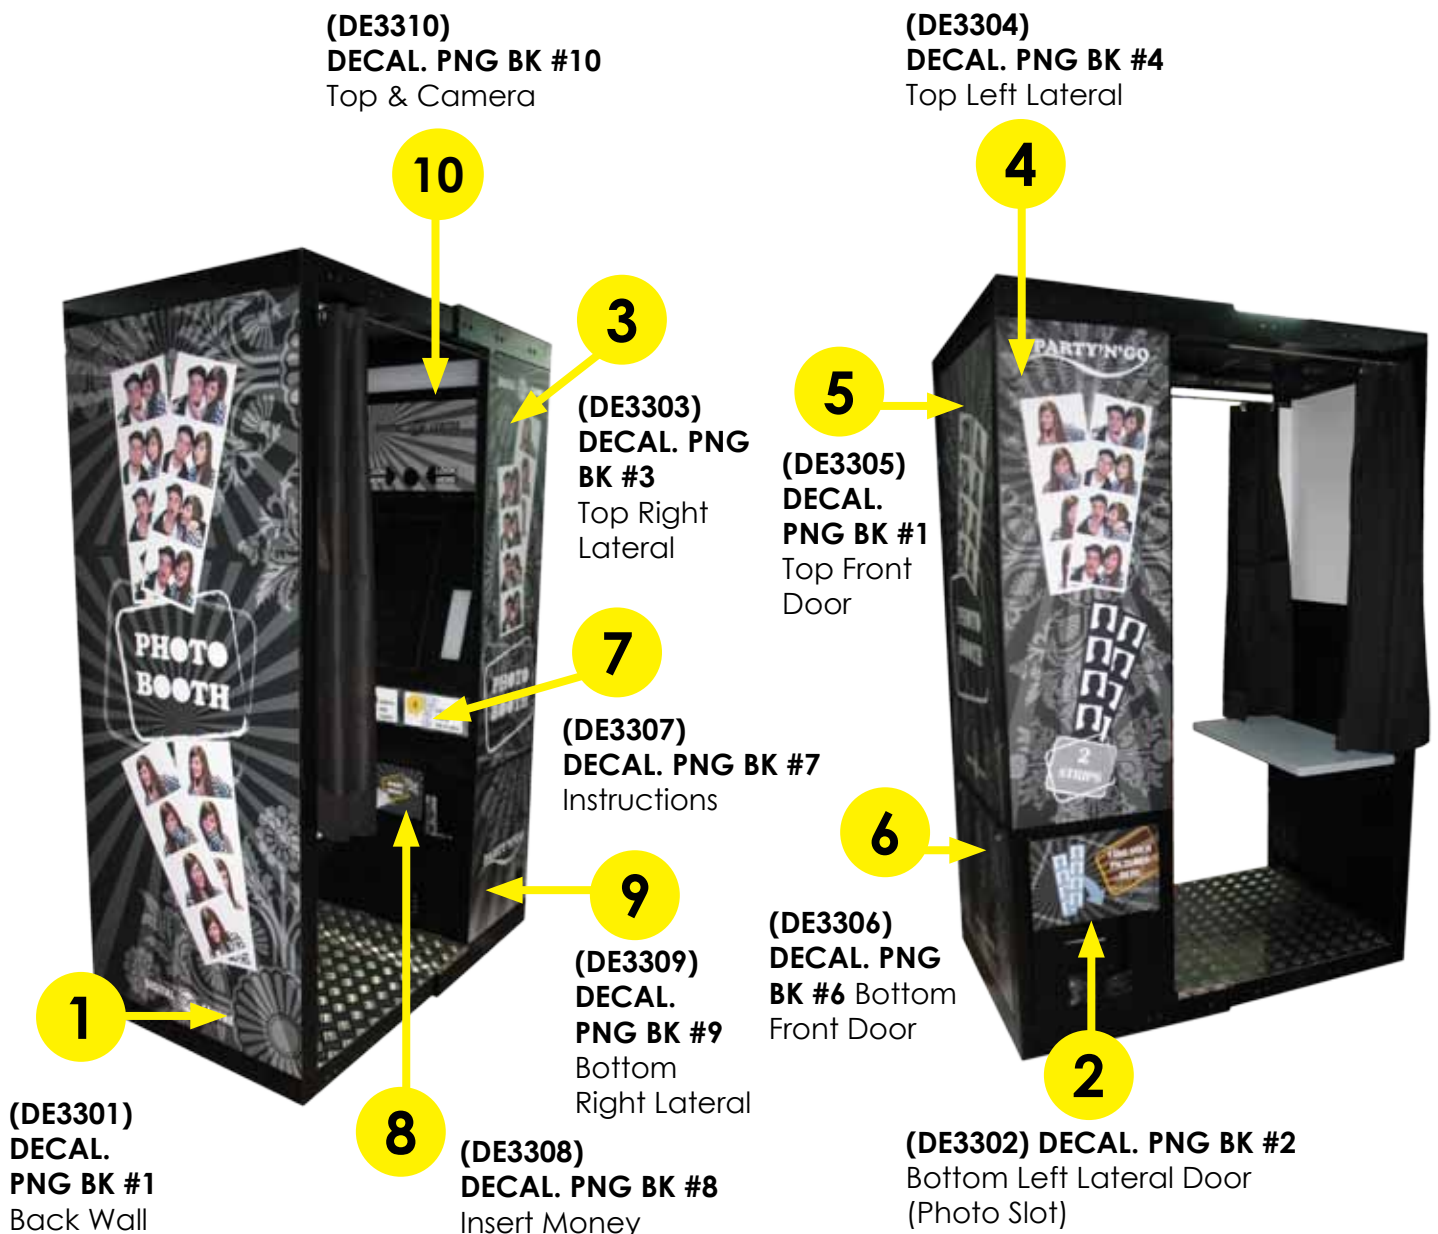



1 (DE3301) DECAL.
PNG BK #1 Back Wall
(83,5x172cm - Inch 32,9x67,7)



7 (DE3307) DECAL. PNG
BK #7 Instructions
(69,5x22cm - Inch 27,4x8,7)



8 (DE3308) DECAL.
PNG BK #8 Insert Money
(25x15cm - Inch 9,84x19,29)



9 (DE3309) DECAL.
PNG BK #9 Bottom Right Lateral
(42,2 x 51,5cm - Inch 16,53x20,08)




2 (DE3302) DECAL.
PNG BK #2 Bottom Left Lateral
Door (Photot Slot)
(34,3x23cm - Inch 13,38x9,05)



3 (DE3303) DECAL.
PNG BK #3 Top Right Lateral
(42,2x117,5cm - Inch 16,53x46,06)



4 (DE3304) DECAL.
PNG BK #4 Top Left Lateral
(42,2x117,5cm - Inch 16,53x46,06)

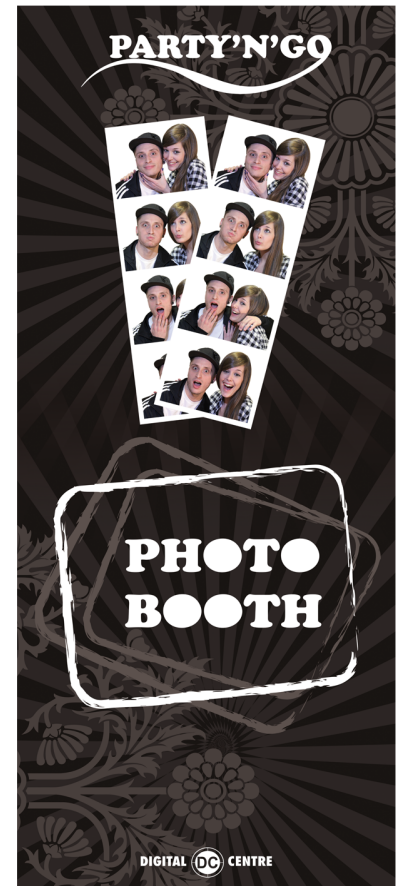

5 (DE3305) DECAL.
PNG BK #5 Top Front Door
(63,5x117,5cm - Inch 24,80x46,06)



6 (DE3306) DECAL.
PNG BK #6 Bottom Back Door
(63,5x49,3cm - Inch 24,80x19,29)



10 (DE3310) DECAL.
PNG BK #10 Top & Camera
(69,5x29,5cm - Inch 27,16x11,42)

14.3 SPARES DIAGRAMS

ME3545
RIGHT / LEFT CURTAIN ROD
END TAP. (BLACK)

ME3308
FRONT DOOR. PNG
(BLACK)
(64,5x171,6 cm
Inch 25,3x67,5)

ME3301
BOTTOM LEFT LATERAL
DOOR (PHOTO SLOT)
PNG (BLACK)
(50,5x36 cm - Inch 19,9x14,2)

DE3331
BACK WALL DECAL.
PNG (WHITE)
(79,20x70 cm
Inch 31,18x27,56)

SE3301
CURTAIN. (BLACK)
(80x110 cm
Inch 31,50x43,3)

WO3304
WOOD BOTTOM SEAT.
PNG (GREY)

ME3300
RETRACTABLE METAL
CHASSIS. PNG

ME3307
CURTAIN ROD. PNG

PL3500
TOP LIGHT PLASTIC DIFFUSER.
(WHITE) (52x9,5x0,3 cm - Inch
20,47x3,74x0,12)

EL3400
FULL HD CAMERA

ME3510
FIXING CAMERA FRONT
HOLDER. (BLACK)

PL3400
"LOOK HERE" #3 PLASTIC
RIGHT ARROW.
(7,5x10 cm - Inch 2,96x3,94)

PL3401
"LOOK HERE" #3 PLASTIC
LEFT ARROW.
(7,5x10 cm - Inch 2,96x3,94)

EL3600
LCD TOUCH MONITOR 22"

PL3501
LATERAL LIGHT PLASTIC
DIFFUSER. (WHITE)
(26,5x7x0,3 cm
Inch 10,43x2,76x0,12)

ME3532
COVER PLATE FOR BILL
ACCEPTOR HOLE. (BLACK)
(12x15 cm - Inch 4,72x5,91)

ME3303
FLOOR LID (ALUMINIUM).
PNG

ME3302
FLOOR (ALUMINIUM). PNG



PL0017
POLYURETHANE
WHEEL D-100 FIXING
MECH.

ME2930
METAL LEG
(16x80 mm
Inch 0,06x0,315)



PL0019
POLYURETHANE
WHEEL D-100
ROTARY MECH.



14.4 PARTS LIST

CA0005	COIN READER CABLE ALBERICI
CA0006	BILL READER CABLE ICT-DC. 12V (92,5 cm - Inch 36,41)
CA0007	BILL READER CABLE MEI-DC. 110V
CA2900	MAIN POWER CABLE NG 1/2 (PC + PRINTER + TRAFO 12V + CONTROL BOARD)
CA2901	MAIN POWER CABLE NG 2/2 (1 MONITOR + 2 LATERAL LIGHTS + 1 TOP LIGHT)
CA2902	POWER CORD 110V - USA
CA2910	CABLE FROM CONTROL BOARD TO SERVICE PANEL & PUSH BUTTONS + 2 SPEAKERS
CA2912	POWER CORD 230V - EUR
CA3402	VGA CABLE M/M. (180 cm - Inch 70,87)
CA3407	USB EXTENSION AM/AF. (180 cm - Inch 70,87)
CA3411	INTERNAL PC 12V DIVIDER
CA3414	USB CABLE FROM PRINTER TO PC AM/BM. (180 cm - Inch 70,87)
CA3416	JACK STEREO CABLE. (180 cm - Inch 70,87)
CA3512	SERIAL CABLE FROM PC TO CONTROL BOARD M/F (56 cm - Inch 22,04)
CO0001	COIN ACCEPTOR. (EUR)
CO0002	COIN ACCEPTOR. (AUD)
CO0003	COIN ACCEPTOR. (CAD)
CO0007	ICT DOLLAR BILL ACCEPTOR 12V
CO0009	ICT DOLLAR BILL ACCEPTOR SET (DBA+WIRE+12V DIVIDER+METAL BRACKET). (BLACK)
CO0011	COIN ACCEPTOR SET (EUR) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0012	COIN ACCEPTOR SET (AUD) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0013	COIN ACCEPTOR SET (CAD) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0023	COIN ACCEPTOR PLASTIC FRONT ADAPTER
DE3300	SET DECALS. PNG
DE3301	DECAL. PNG # 1 - BACK WALL (74,3x172,5 cm - Inch 29,13x67,72)
DE3302	DECAL. PNG # 2 - BOTTOM LEFT LATERAL (34,3x23 cm - Inch 13,38x9,05)
DE3303	DECAL. PNG # 3 - TOP RIGHT LATERAL (42,2x117,5 cm - Inch 42,2x46,06)
DE3304	DECAL. PNG # 4 - TOP LEFT LATERAL (42,2x117,5 cm - Inch 42,2x46,06)
DE3305	DECAL. PNG # 5 - TOP FRONT DOOR (63,5x117,5 cm - Inch 24,8x46,06)
DE3306	DECAL. PNG # 6 - BOTTOM FRONT DOOR (63,5x49,3 cm - Inch 24,8x19,29)
DE3307	DECAL. PNG # 7 - INSTRUCTIONS (69,5x11,7 cm - Inch 27,17x4,33)
DE3308	DECAL. PNG # 8 - INSERT MONEY (25x15 cm - Inch 9,84x19,29)
DE3309	DECAL. PNG # 9 - BOTTOM RIGHT LATERAL (42,2x51,5 cm - Inch 16,53x20,08)
DE3310	DECAL. PNG # 10 - TOP & CAMERA (59,5x29,5 cm - Inch 27,16x11,42)
DE3331	BACK WALL DECAL. PNG (WHITE) (79,20x70 cm - Inch 31,18x27,56)
EL0001	EVO-ATMEL CHIP (only chip)
EL2901	CONTROL BOARD V1.1 (110V)
EL2902	CONTROL BOARD V1.1 (220V)
EL3400	FULL HD CAMERA
EL3403	EVO-ATMEL CHIP ON CONTROL BOARD WITH SOFTWARE EVO LED
EL3406	FILTER 2 FUSES STANDARD 6A
EL3408	FAN (2 UNITS 12V) TWIN
EL3417	TRANSFORMER 2A 12V
EL3503	LIGHT BULBS 36W/865
EL3504	LIGHT BULBS 9 W/865
EL3505	BALLAST 110V/36W
EL3506	BALLAST 230V/36W

EL3507	BALLAST 110V/13W
EL3508	BALLAST 230V/13W
EL3509	LAMP HOLDER 36W
EL3510	LAMP HOLDER 9W
EL3511	SPEAKERS 8 Ohm 5W. (10 cm - Inch 3,94)
EL3513	LIGHT STARTER
EL3600	LCD TOUCH MONITOR 22"
EL3602	TOUCH MONITOR 22" AC ADAPTER 100V/240V to 12V
EL3603	SERVICE CONTROL PANEL - MODEL 1
ME0001	LOCK 1314
ME0002	KEY FOR LOCK 1314
ME0004	COIN ACCEPTOR METAL PLATE (12,1x15,2 cm - Inch 4,76x5,98) (BLACK)
ME0025	ICT METAL PLATE SUPPORT. (BLACK)
ME0031	METAL CASH BOX
ME2930	METAL LEG (16x80 mm - Inch 0,06x0,315)
ME3300	RETRACTABLE METAL CHASSIS. PNG
ME3301	BOTTOM LEFT LATERAL DOOR (PHOTO SLOT). PNG (BLACK) (50,5x36 cm - Inch 19,9x14,2)
ME3302	FLOOR (ALUMINIUM). PNG
ME3303	FLOOR LID (ALUMINIUM). PNG
ME3305	LATERAL LIGHT DIFFUSER HOLDER. RIGHT/LEFT NG (RAW METAL)
ME3306	LATERAL LIGHT BODY. (RAW METAL)
ME3307	CURTAIN ROD. PNG
ME3308	FRONT DOOR. PNG (BLACK) (64,5x171,6 cm - Inch 25,3x67,5)
ME3313	TOP LIGHT DIFFUSER HOLDER. (RAW METAL)
ME3314	TOP LIGHT BODY. (RAW METAL)
ME3409	PRINTER HOLDER CP9550DC. (RAW METAL)
ME3410	PC HP-C2D HOLDER. (RAW METAL)
ME3417	PRINTER DONGLE BRACKET. (INOX)
ME3510	FIXING CAMERA FRONT HOLDER. (BLACK)
ME3532	COVER PLATE FOR BILL ACCEPTOR HOLE. (BLACK) (12x15 cm - Inch 4,72x5,91)
ME3545	RIGHT / LEFT CURTAIN ROD END TAP. (BLACK)
ME3608	FIXING CAMERA BACK HOLDER. (RAW METAL)
ME4011	FIXING CAMERA METAL BASE. PNGV&N (BLACK)
PC0001	DONGLE USB SECURITY AND SOFTWARE
PC0004	RAM MEMORY MODULE. DDR2 5300 667 (512Mb)
PC0005	HARD DRIVE SATA
PC0006	DVD READER SATA
PC0007	PC PROCESSOR HP-C2D
PC0008	PC MOTHER BOARD HP-C2D
PC0009	PC POWER SUPPLY HP-C2D
PC0011	PC HP-C2D (WITHOUT VIDEO CARD 4 MONITORS)
PC0013	PC BUTTON BATTERY 2032
PL0017	POLYURETHANE WHEEL D-100 FIXING MECH.
PL0019	POLYURETHANE WHEEL D-100 ROTARY MECH.
PL0030	LAMP CLIP SUPPORT FOR 36W BULB
PL3400	"LOOK HERE" #3 PLASTIC ARROW RIGHT. STRIP (7,5x10 cm - Inch 2,96x3,94)
PL3401	"LOOK HERE" #3 PLASTIC ARROW LEFT. STRIP (7,5x10 cm - Inch 2,96x3,94)
PL3500	TOP LIGHT PLASTIC DIFFUSER. (WHITE) (52x9,5x0,3 cm - Inch 20,47x3,74x0,12)
PL3501	LATERAL LIGHT PLASTIC DIFFUSER. (WHITE) (26,5x7x0,3 cm - Inch 10,43x2,76x0,12)
PR9550	PRINTER MITSUBISHI CP9550DW-DC

SE3301	CURTAIN. (BLACK) (80x110 cm - Inch 31,50x43,3)
SE3320	SET 2 CURTAINS. PNG (BLACK) (80x110 cm - Inch 31,50x43,3)
SE3402	TRANSFORMER SOCKET PLASTIC BASE. (WHITE)
TO0002	ALLEN WRENCH
WO0030	METAL CASH BOX WOOD SUPPORT. (18x7,3 cm - Inch 7,08x2,87)
WO3300	WOOD PRINTER BASE. PNG (RAW)
WO3301	WOOD PC BASE. PNG (RAW)
WO3304	WOOD BOTTOM SEAT. PNG (GREY)
CA3502	CABLE FROM OSD MENU PANEL TO TOUCH MONITOR GT. (120 cm - Inch 47,24)
EL3601	OSD MENU CONTROL PANEL
SC3422	PCB FOOT
PK3300	WOOD PALLET. PNG (83x76 cm - Inch 32,68X29,92)
PK3301	CARDBOARD BOX PACK. PNG (80x70x198 cm - Inch 31,50x27,56x77,95)
PL0002	BOOT DVD PLASTIC HOLDER

15-NOTES

DIGITAL CENTRE

The worldwide PhotoBooth
Manufacturers



CONTENTS

1. Myphotocode.com-----	102
2. Manage your USB set up-----	103
2.1 How to login-----	104-105
2.2 Create a new USB set up-----	106-107
2.3 How to customize-----	107-112
2.3.1 Logo-----	107
2.3.2 Text on a side of each print-----	108
2.3.3 Background music-----	109
2.3.4 Frames-----	109 -110
2.3.5 Welcome Screen-----	111
2.3.6 Bye Screen-----	111
2.3.7 Top Screen Banner-----	112
2.3.8 Custom images on demo screen-----	112
2.4 Download the USB set up-----	113
3. Manage your online events-----	114
3.1 How to create an online event-----	114
3.2 Manage the online event-----	115-120
3.2.1 Photos-----	119-120
3.2.2 Emails-----	120
3.2.3 Edit-----	120
4. Warning-----	121

1-MYPHOTOCODE.COM



MyPhotoCode.com is a website thinking for Owners and Customers.


WHAT CAN THE OWNER DOES THROUGH OUR WEBSITE MYPHOTOCODE.COM?

- Create an USB Set Ups for customize their Photo booth
- Create an Online Event
 - Edit an event
 - Recover the event pictures
 - Upload and share your pictures on Facebook, twitter or send copies by e-mail

WHAT A CUSTOMER CAN DOES THROUGH OUR WEBSITE

When the customer take's a picture, you can see a code on the side.
If you introduce this code in the website, you can recover any picture and share it through different social webs, and also, send copies by e-mail.

2. MANAGE YOUR USB SET UP

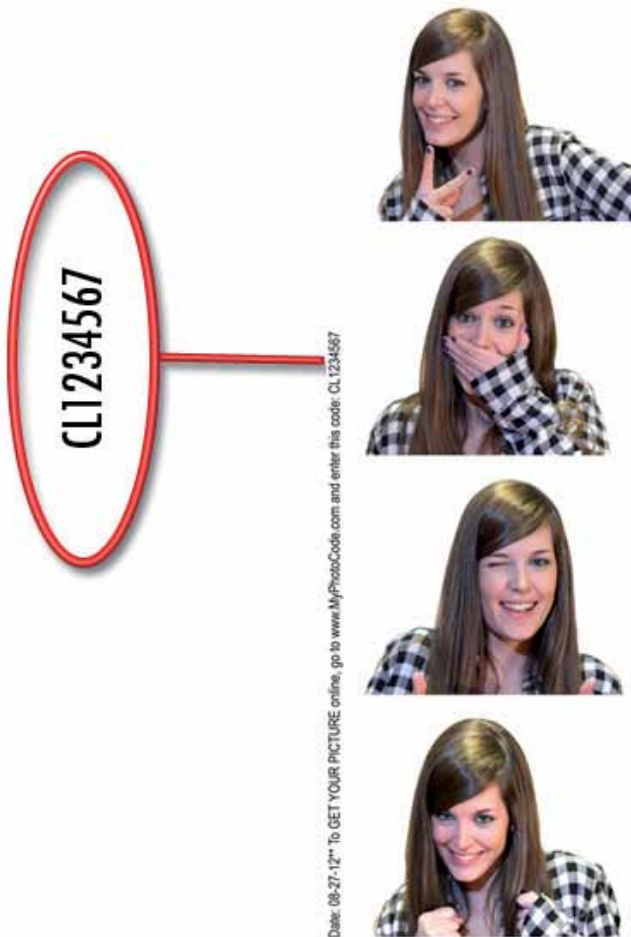

1. You need a username and password to access to MyPhotoCode.

2. You need identify your Photo booth to get a username and password.

3. To know the identification number, please, take a photo and send us the number that appears in the right side of the strip, to the following address:

myphotocode@dc-image.com


Then, we will send you the username and password, use them to login.

2.1 HOW TO LOGIN


- 1- Goes to <http://myphotocode.com> and click on RENTAL LOGIN, it is up in the right side




- 2- Please, enter your username and password and click ENTER

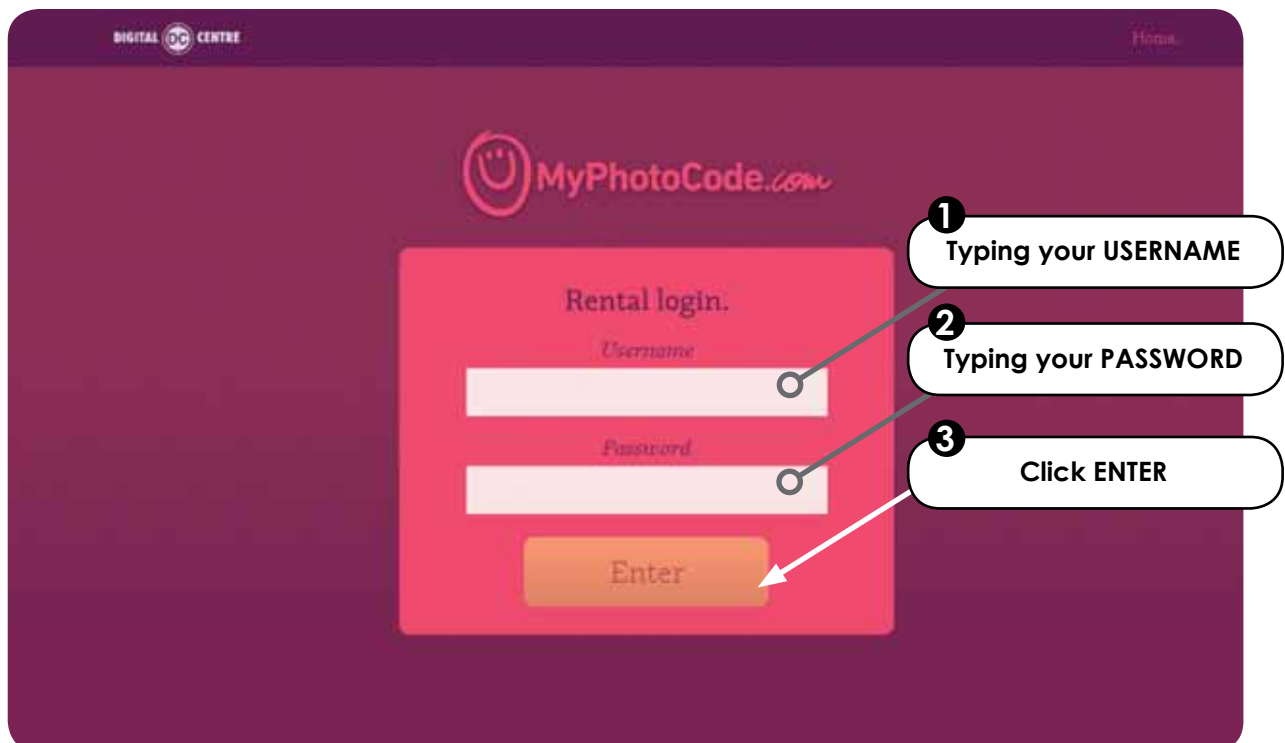

3- Here you can prepare the USB to customize our Photo Booth . Click on "USB Set Ups"

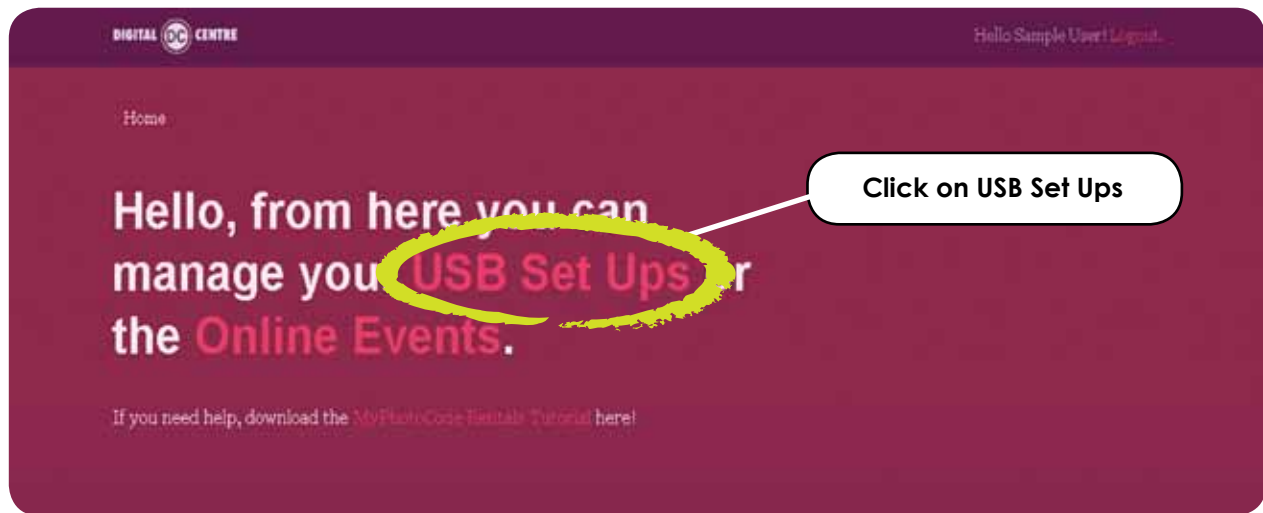

4- Click on "Add New"

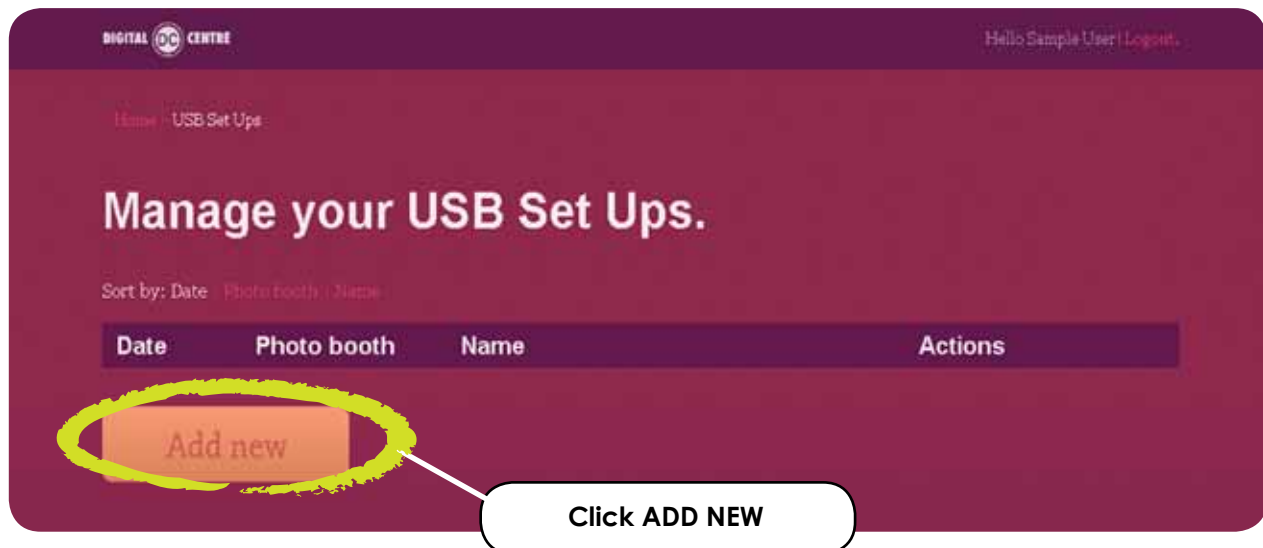

2.2 CREATE A NEW USB SET UP


1- Fill in the information :

- Name: Choose a name for your USB, for example "Night Party" or "Luca's wedding".
- Photo Booth: Open the list and selected your photo booth, click the arrow to see all the options.
- Online event: You can link the USB with a created online event or created another! (See section "3.1 How to create an online event")
- Save it!


Create a new USB Set Up.

Name
Used to identify the USB Set Up in the list.

Photo booth
Choose the photo booth model where the USB will be plugged in.

Strip 

Online Event
Is the Photo booth going to be linked to any Online Event?
If so, choose it from the list of already created events.

Not linked 

[Create a new Online Event](#)

[Go back to USB Set Ups.](#)

[Download the USB Set Up into a USB Drive.](#)

1
Typing a NAME


2
Click on the arrow to see the box with all Photo booths. Select your Photo booth.

Online Event
Is the Photo booth going to be linked to any Online Event?
If so, choose it from the list of already created events.

Not linked

Not linked

Photo booth
Choose the photo booth model where the USB will be plugged in.

Strip 

Strip
Mega In
Wall Strip
Party'n'go
temp booth
NG V&N
Mega Out

[Create a new Online Event](#)

- 2- When the USB has been created we can start to customize.
Click on "Start editing its content".



2.3 HOW TO CUSTOMIZE

You can customize the next parameters:

- 2.3.1 Logo
- 2.3.2 Text on a side of each print
- 2.3.3 Background music
- 2.3.4 Frames
- 2.3.5 Welcome Screen
- 2.3.6 Bye Screen
- 2.3.7 Top Screen Banner (wedding version) *Only STRIP Photo booth
- 2.3.8 Custom images on demo screen

2.3.1 LOGO: image format .JPG to 300 dpi.




2.3.2 TEXT: This is the text that will appear in every strip. You can write all that you want. Look down here and see example, the text appears in the right side along the strip.


Text
This is the text line which will be printed on a side of each print.

Save!

Example:

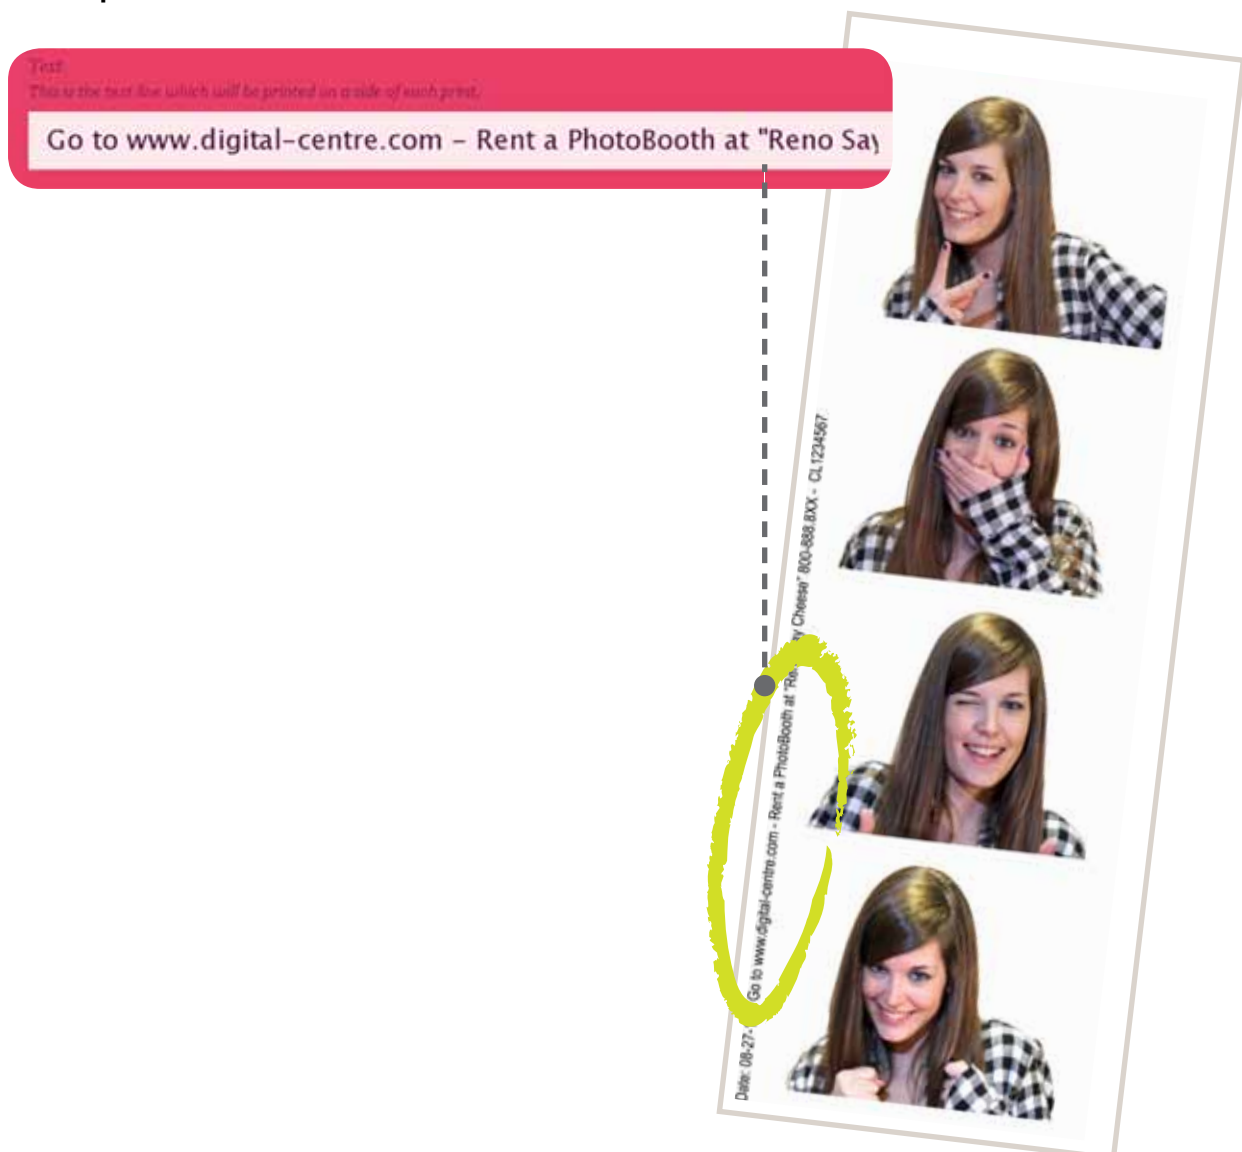


2.3.3 BACKGROUND MUSIC: You can upload music . Maximum 5 MB. Must be mp3 format. Look down here and see example, the text appears in the right side along the strip.



2.3.4 FRAMES: You have three options

- None
- Upload custom
- Select premade frames from list

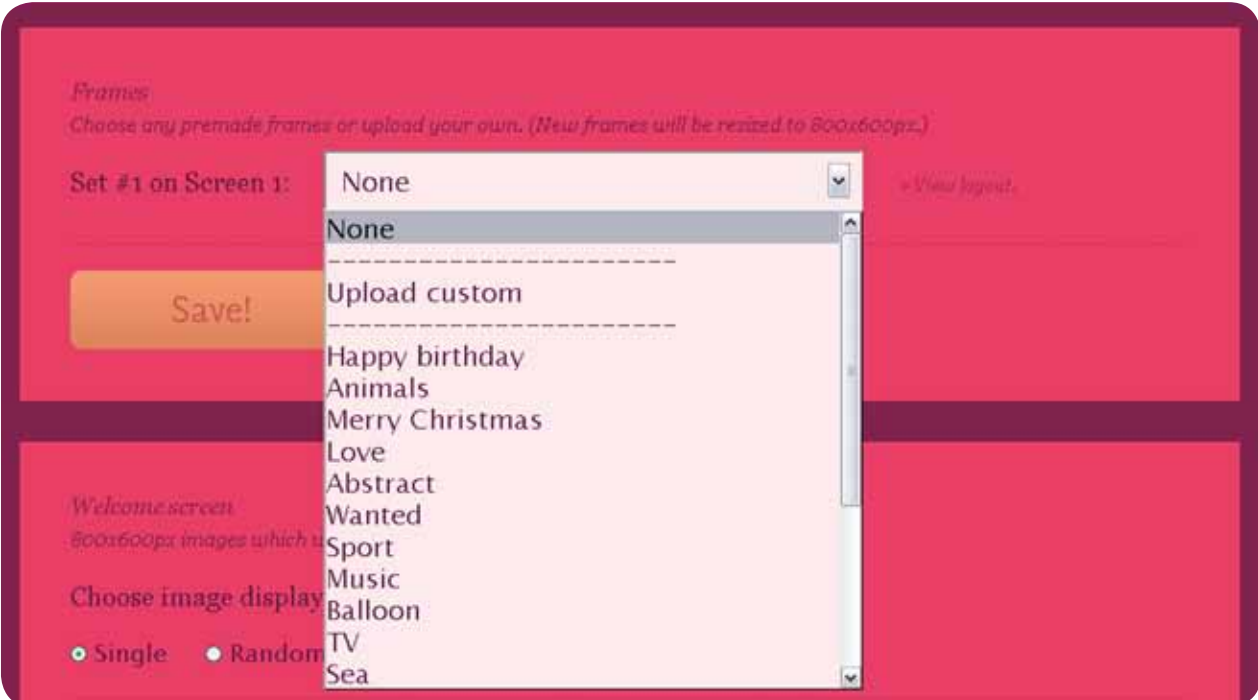


- **NONE:** we don't upload any new frame




- **UPLOAD CUSTOM:** select 4 frames from our computer. The frames must be in .png format.



Frames:
Choose any premade frames or upload your own. (New frames will be resized to 800x600px.)


Set #1 on Screen 1:  [View layout](#)

- **SELECT PREMADE FRAMES FROM LIST:** we can choose frame from the list of myphotocode. You can see this frames before choose. You can see this frames before choose.

Frames:
Choose any premade frames or upload your own. (New frames will be resized to 800x600px.)

Set #1 on Screen 1:  [View layout](#)

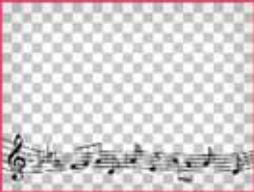


Select one, and press SAVE.

2.3.5 WELCOME SCREEN: There are 2 options:

- Single
- Random

We can upload “Welcome” Images through our computer.
Remember that Images must be in .jpg to 72 dpi.

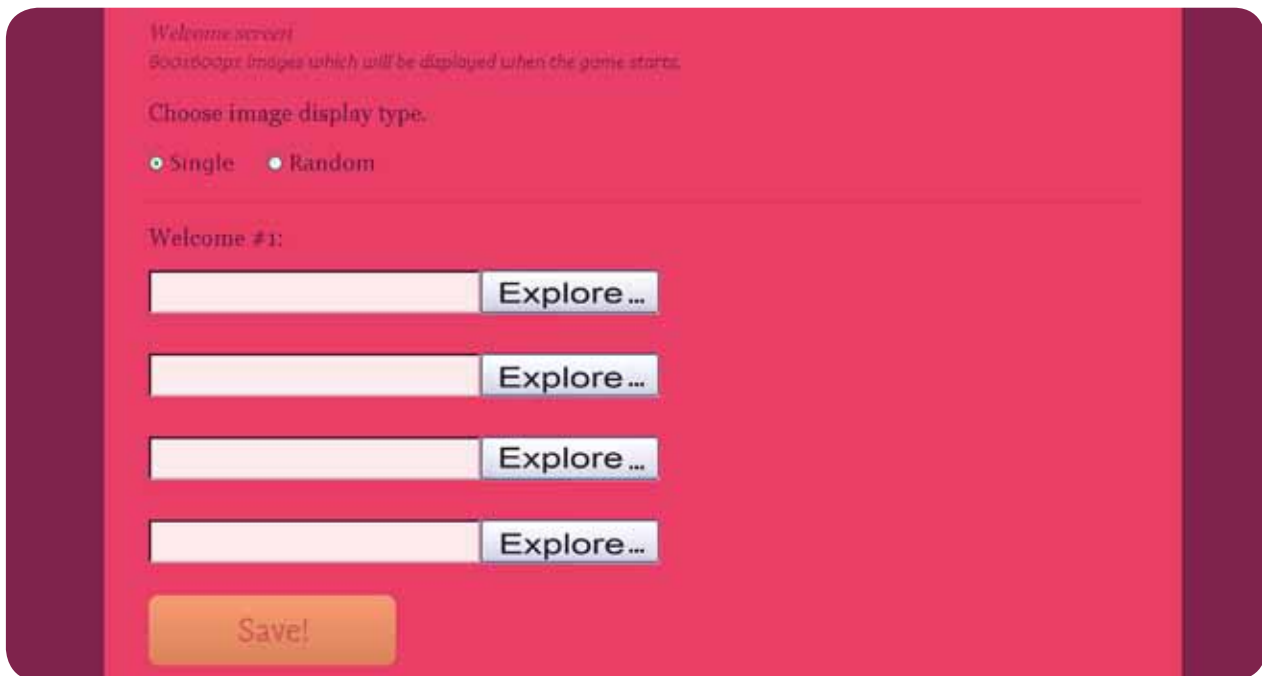

Welcome screen
800x600px images which will be displayed when the game starts.

Choose image display type.


☒ Single ☐ Random

Welcome #1:

2.3.6 BYE SCREEN: We have 2 options again:

- Single
- Random

We can upload “GoodBye” Images through our computer.
Remember that Images must be in jpg to 72 dpi

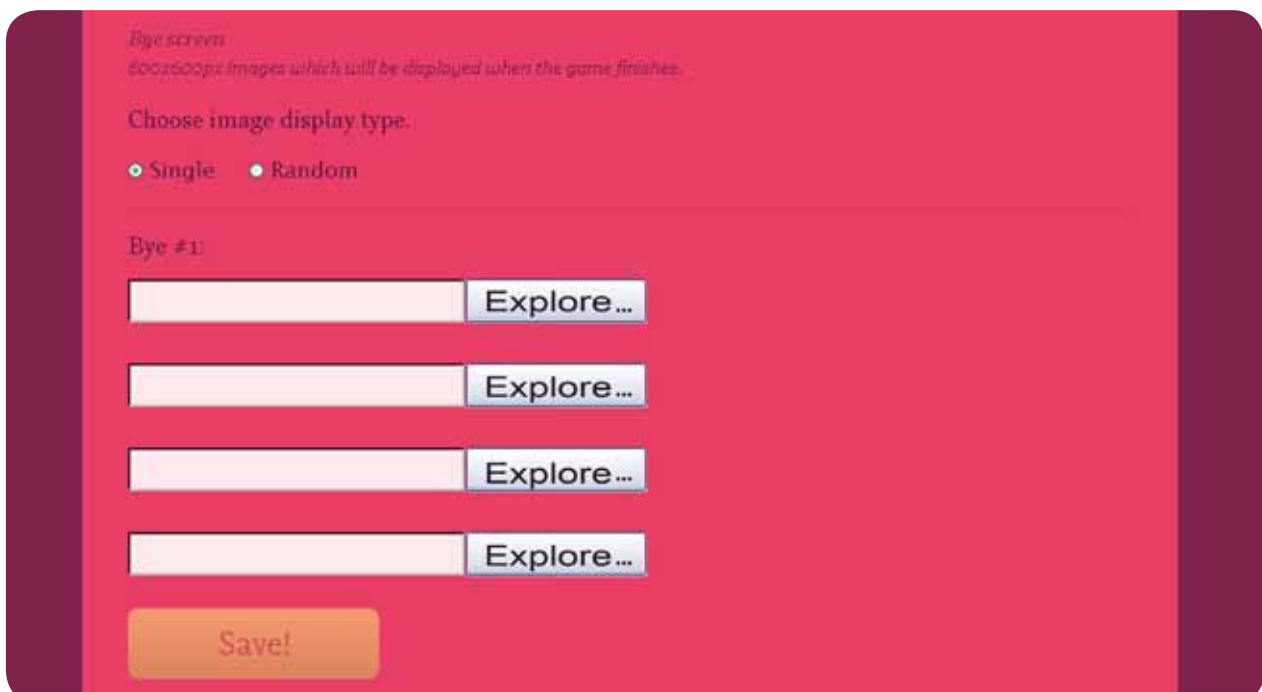

Bye screen
800x600px images which will be displayed when the game finishes.

Choose image display type.

☒ Single ☐ Random

Bye #1:

2.3.7 TOP SCREEN BANNER (WEDDING VERSION) *Only STRIP Photo booth

Top screen banner (Wedding version)
A 800x600px image which will be placed on the top screen.

2.3.8 CUSTOM IMAGES ON DEMO SCREEN

Custom images on demo screen
800x600px images which will be randomly displayed on the demo.

Custom image #1:

2.4 DOWNLOAD THE USB SET UP

Download the USB Set Up: when you finish customizing, save the changes.
Download the USB Set Up.



Click on "Download the USB Set Up into a USB Drive".
It will appear a new window asking what want you do?
Select Save and accept.

a- Save the document 'save-in-sub.zip" in the USB pen drive. Don't change the document name when you save it.



b- This is an compacted document, that you must decompress in the USB pend drive.



c- When you finish the decompress, you'll have 2 folders called "PhotoldUpload" and "PhotoldEvents".




d- Inside the USB you only must have these two folders: PhotoldUpload i PhotoldEvents.

e- When we have our USB with these folders, connect the USB to the Photo Booth.

IMPORTANT! : Enter in the configuration menu and go out to update the new changes and customizations.

3-MANAGE YOUR ONLINE EVENTS


Click on Online Events Option.

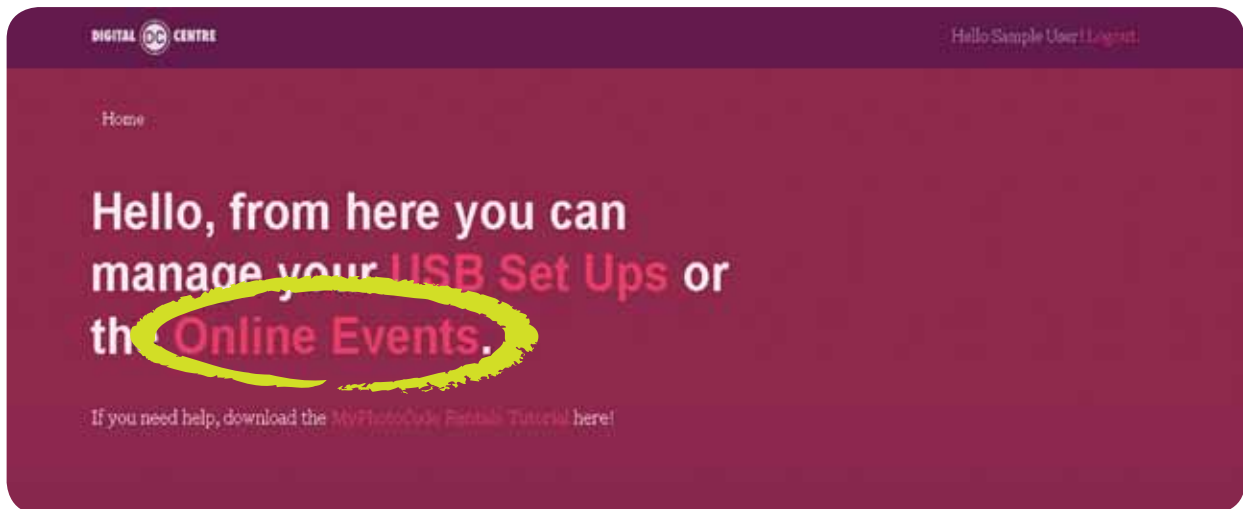

It will open a new window with a list about our events online. This list it's empty because there isn't any event created.

3.1 HOW TO CREATE AN ONLINE EVENT

Click on "Add New"

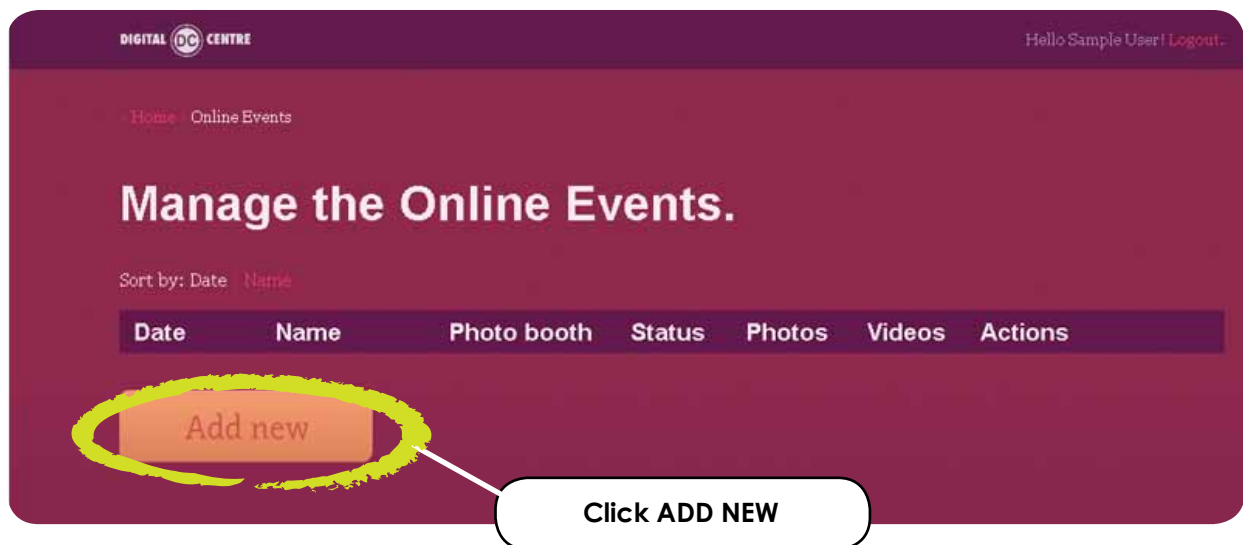

3.2 MANAGE THE ONLINE EVENTS

Edit the options:

- **Event title:** Try a name to the event, for example: Night Party
- **Start Date:** Indicate when it starts and how long is the event
- **Background:** You can put on a different background to show in the event online, when some user take's a picture and want to recover it, they only have to enter the code in the website Myphotocode. Instead the background of the web, they could see our personal background..
- **Private pictures:**
 - If the event is a private event, when the users insert their code, they only will see their photos.
 - If the event isn't private, when the user introduces the code, could see all the pictures of the event.
- **Single day event:** Indicate if the event is for a single day
- **Available Online:** If the user choose YES, the picture will be seen on the website, otherwise, the pictures won't be seen online.

Create a new Online Event.

Event title

Start date

29

August

2012

Background

None

Private pictures

☐ Yes ☒ No

Single day event

☐ Yes ☒ No


Available online

☐ Yes ☒ No

Save!

Cancel

Select Background: we can choose one of the predefined backgrounds or upload another one. If we upload a background it must be in .jpg or .png to 72 dpi. This image will be repeated.

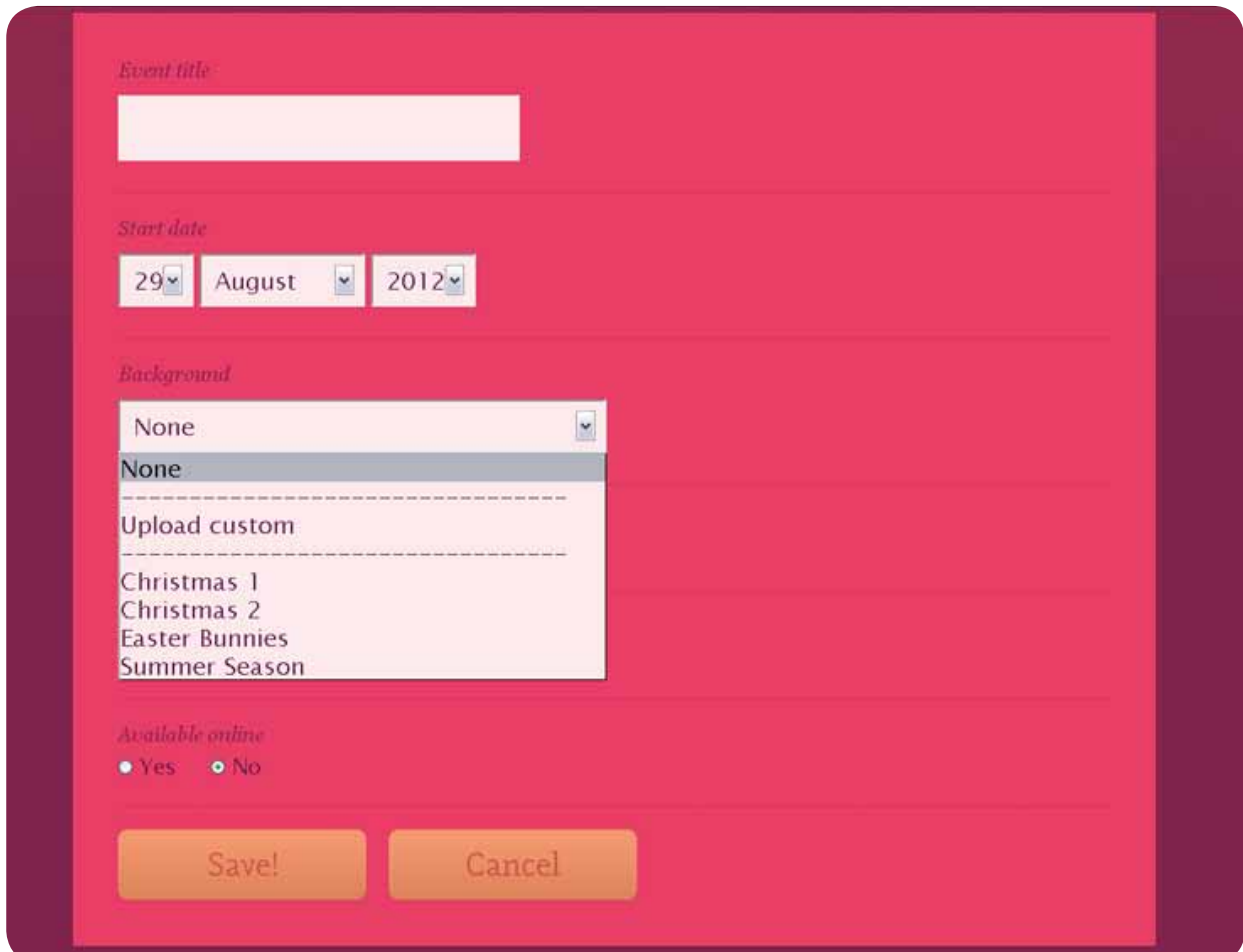


The screenshot shows a form for creating an event. It has a pink background with a darker pink border. The form contains the following fields:

- Event title:** A text input field.
- Start date:** Three dropdown menus for day, month, and year. The selected values are 29, August, and 2012.
- Background:** A dropdown menu with the following options: None, None (highlighted), Upload custom, Christmas 1, Christmas 2, Easter Bunnies, and Summer Season.
- Available online:** Two radio buttons labeled Yes and No. The No button is selected.
- Buttons:** Two orange buttons labeled Save! and Cancel.

In case of we upload our logo




At the moment to see the pictures, the logo, will be seen like this:

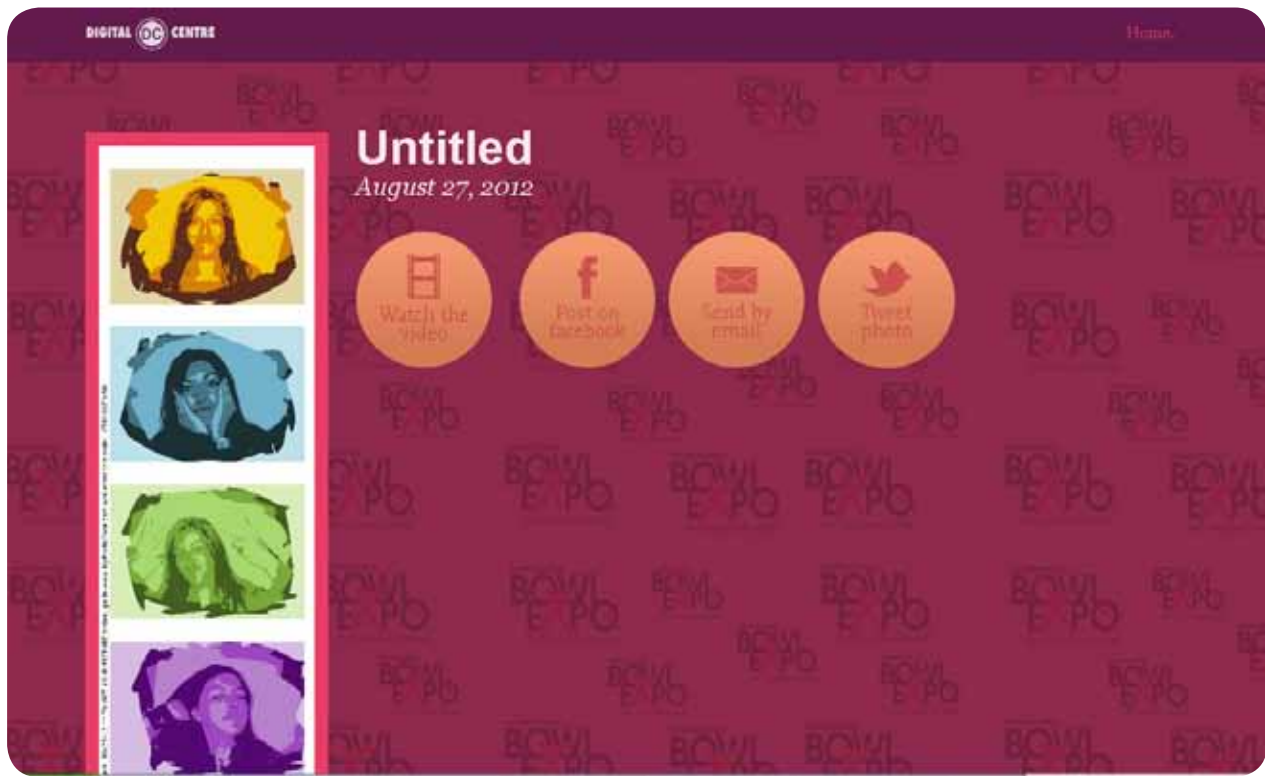


When we finish the configuration, click on SAVE.

We have already edited i created the online event!

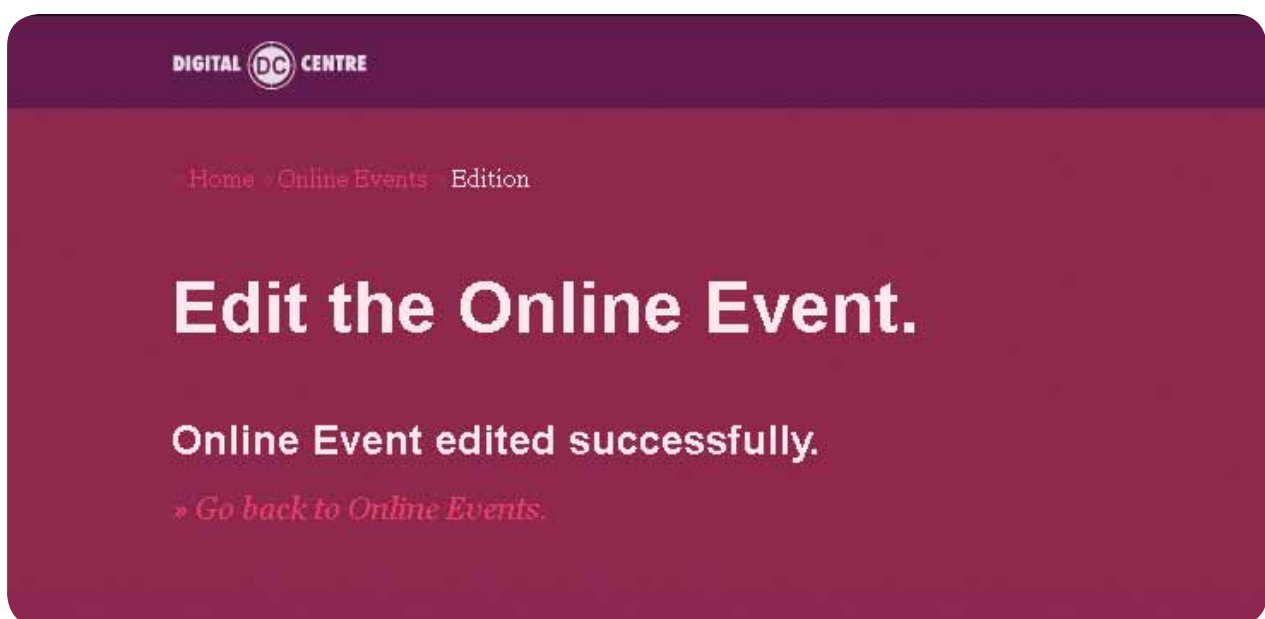

Select "Go back to Online Events"


Return to outset where the list was empty, but now we can see our new event

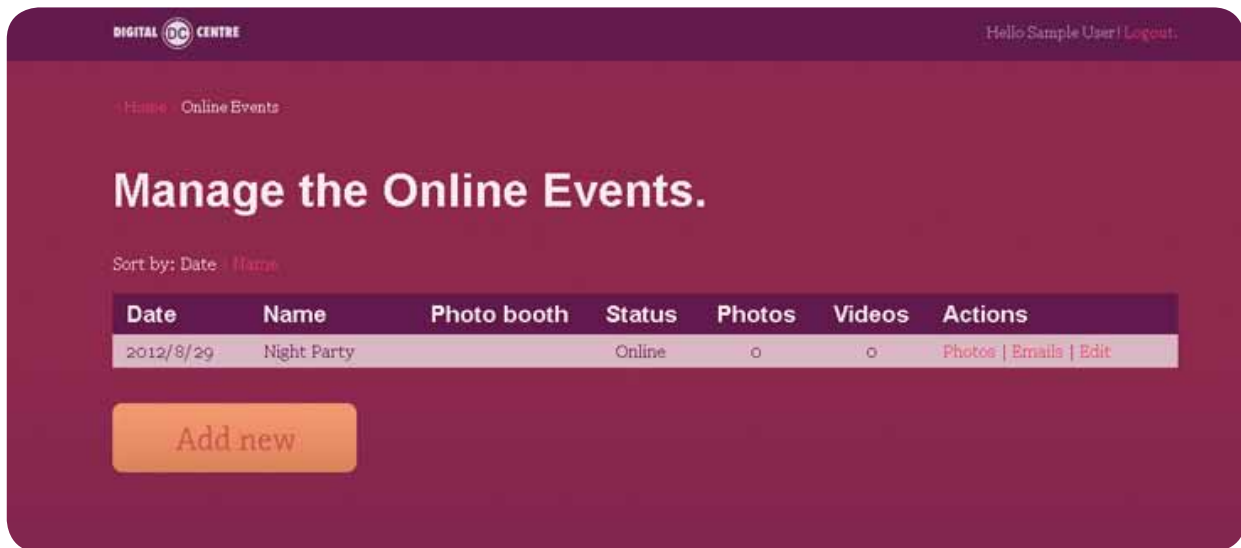

Here you can see all the information about the event that we just created:

- Date : The day of the appointment
- Name: the name that we gave to the event
- Photo booth: the photo booth model that will be used in the event. This section will be empty until the moment we take the first photo, then, the model will appear automatically.
- Status: indicate if online option is activated
- Photos: how many pictures has been taken
- Video: how many videos has been recorded
- Actions:
 - 3.2.1 Photos:** can see the pictures from all the users
 - 3.2.2 Emails:** can see the mail list where the users send the photos
 - 3.2.3 Edit:** you can edit the event again

3.2.1 Photos: you will see a new window with all the photos in a little size.

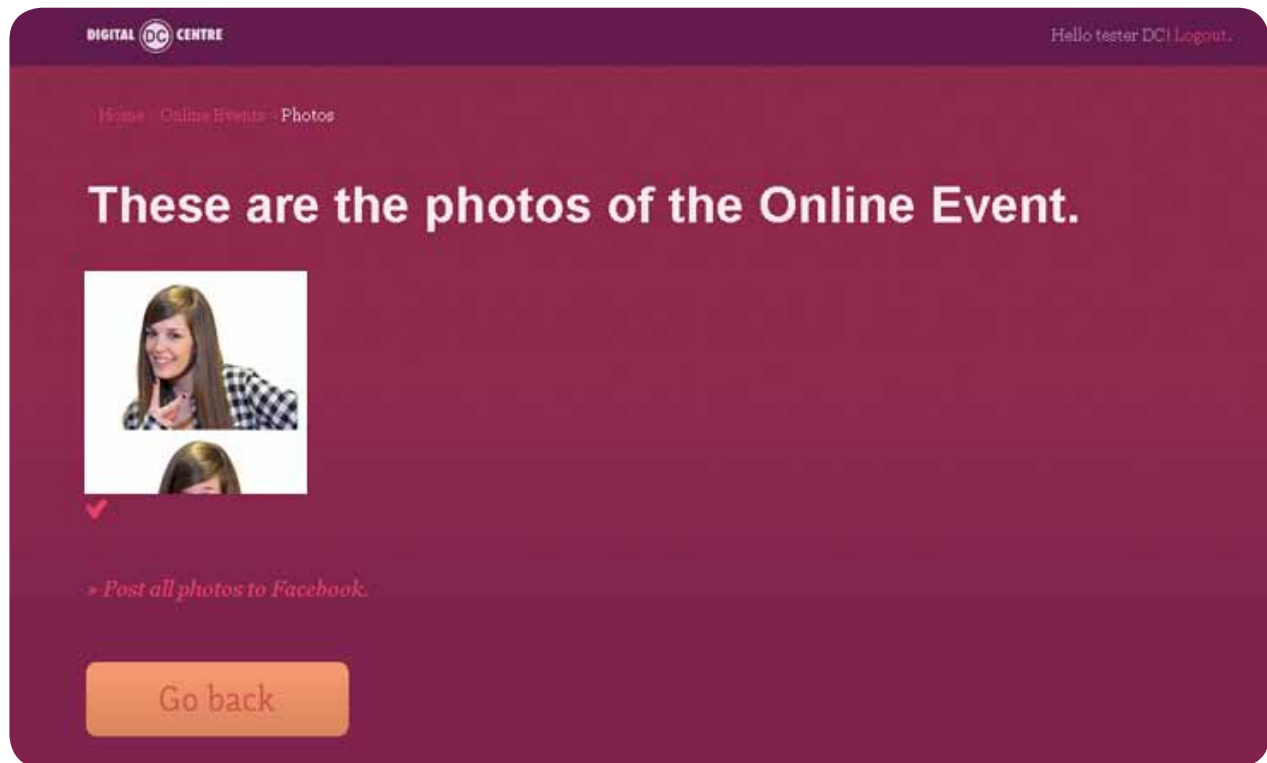


If you click one of the small photos, this will be opened and some options appear. In this example, the user didn't record any video, so the possible options are:

- Post on Facebook
- Send by email
- Tweet photo



But the options are different when the user records a video:

- Watch the video
- Post on Facebook
- Send by email
- Tweet photo

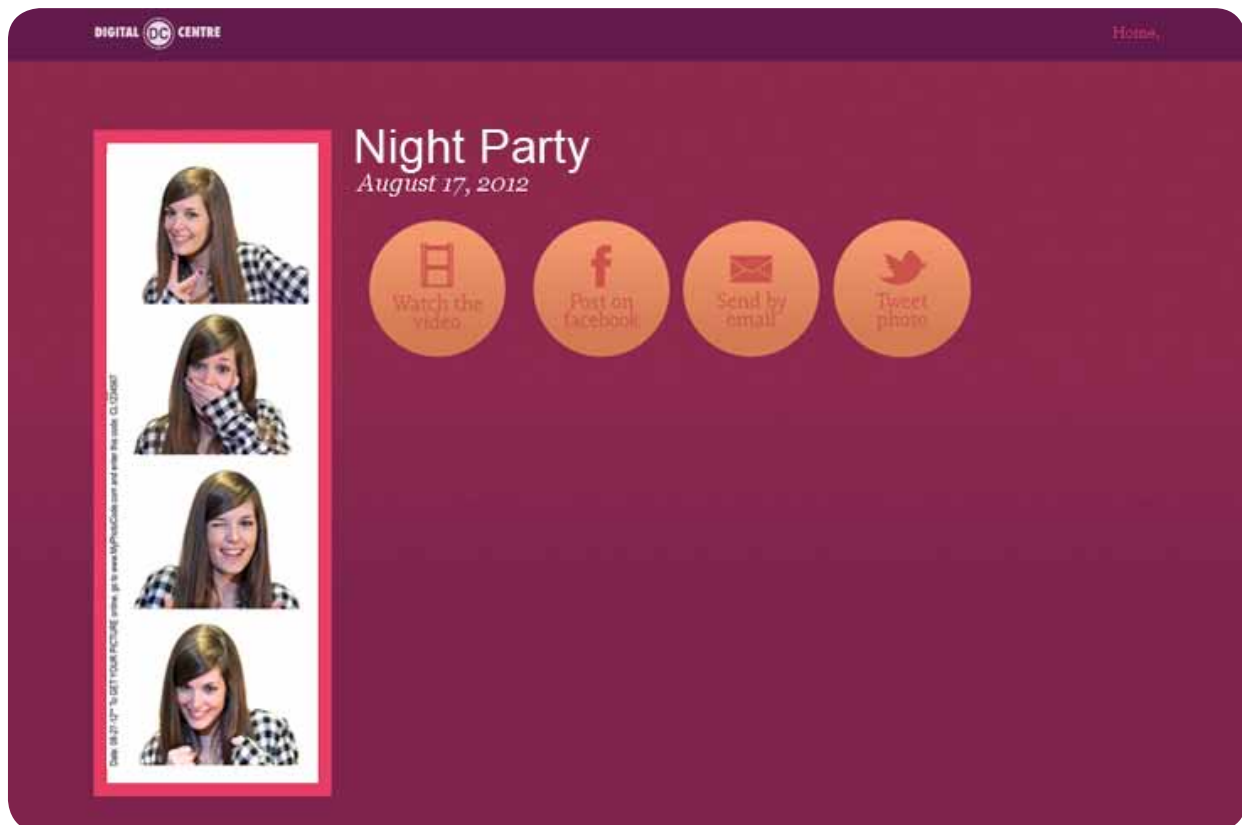

3.2.2 Emails: Select the Button “ACTIONS > EMAIL” you will see an address list, here you could see the sending historial, every time that users share their photos by e-mail, the e-mail addresses will be registered in this list.

Night Party

No emails were entered in this event.

3.2.3 Edit: See section “3.1 How to create an online event”

4. WARNING



WARNING!


Remember, to get the photos, by Myphotocode.com, the photobooth must be connected to internet.

If there isn't connection to internet, you can save the photos in a empty USB memory in the computer.

When the USB will be detect by the computer, will be create automatically a New Folder called Photoldownload.

Inside the Photoldownload folder you will find 2 folders more, the first one called "Myphotocode" with your images and videos inside (just in case that you have recorded a video) and the second one called "Shots" with the individual shots.

Once the event finish, you can take off the USB memory from de computer and use it in any other computer to see your images or videos.

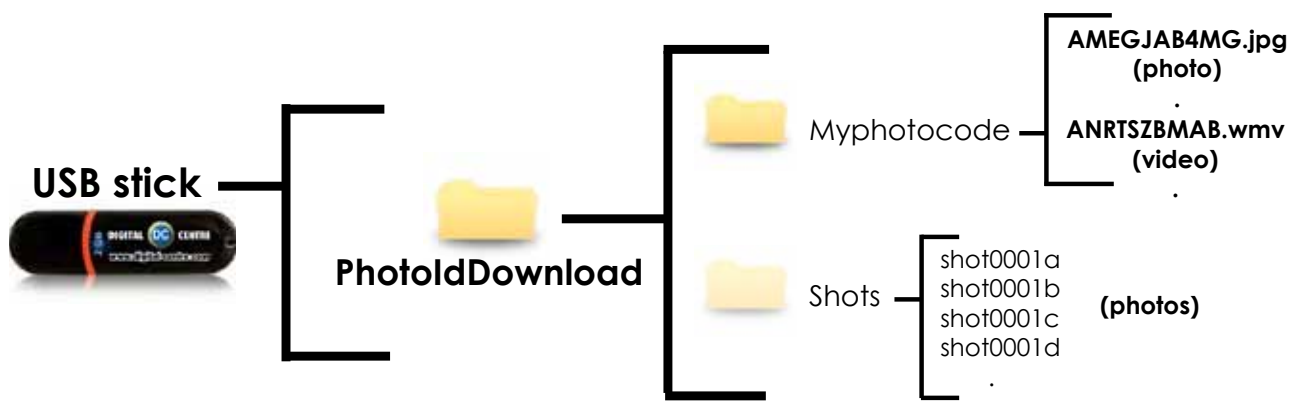

If the logo is activated, you will have 3 shoots for each print, with the loaded logo printing in the fourth frame.

DIGITAL CENTRE

The worldwide PhotoBooth
Manufacturers

